 



Agile

Winder 2 column installation guide

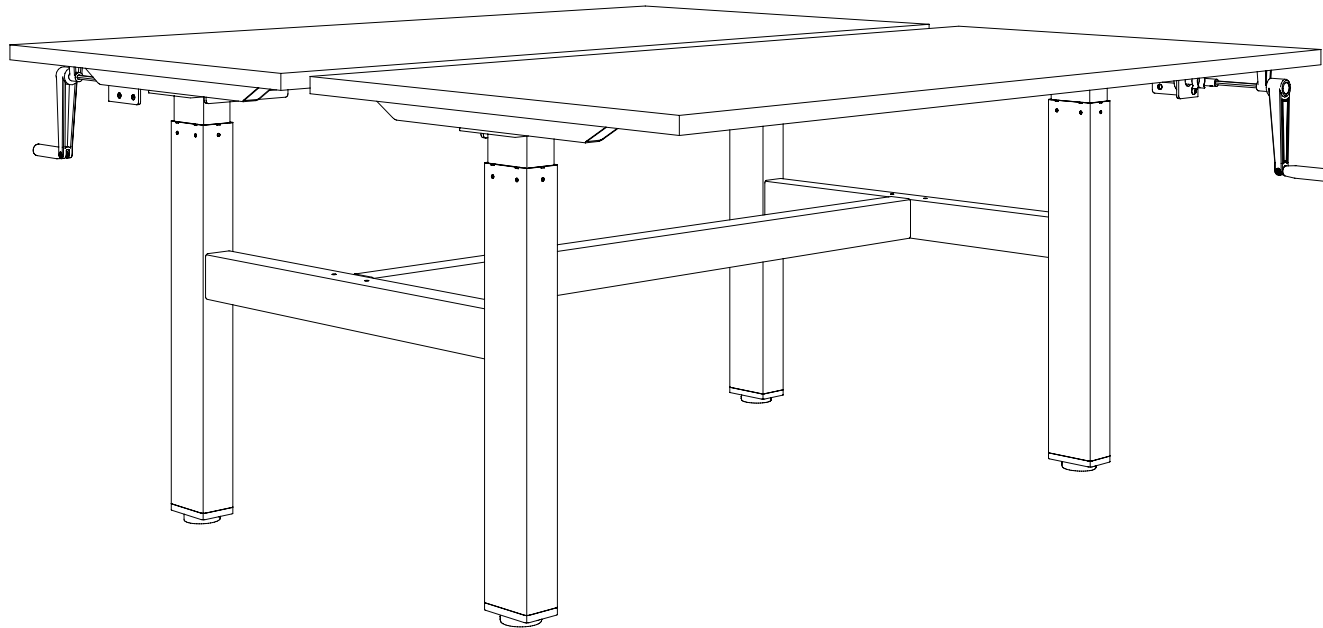


Winder 2 column installation guide

 
Parts

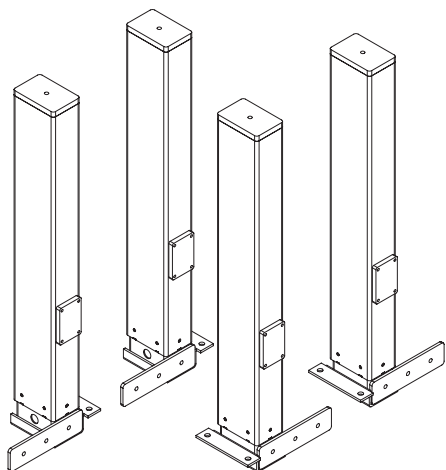


2 x L&R Leg Pair

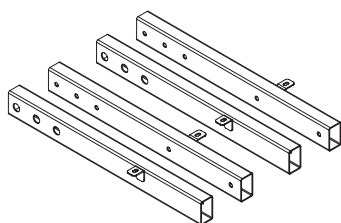 


2 x L&R Leg Rail Pair

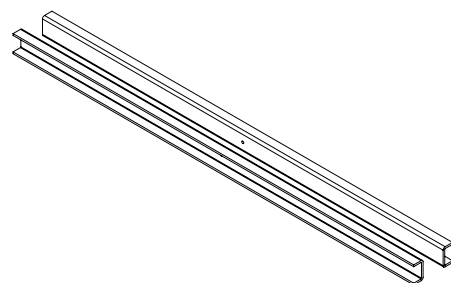 


2 x Cross Rail

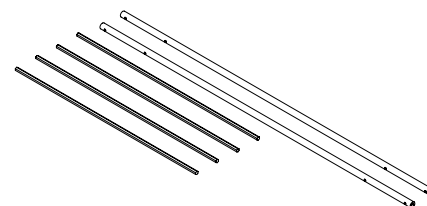 


2 x Drive Shaft

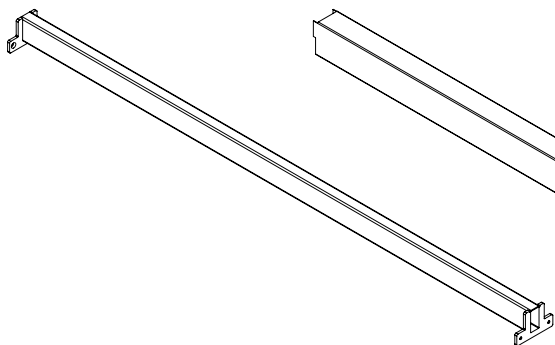 


1 x Cross Beam

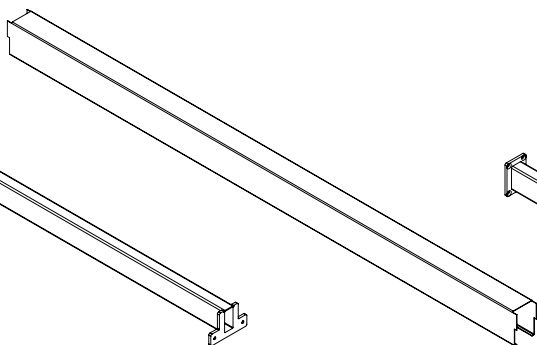 


1 x Cross Beam Cover

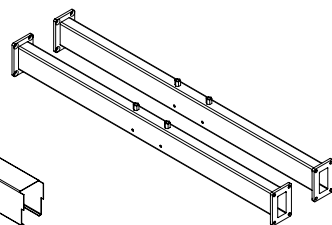 

2 x Leg Beam

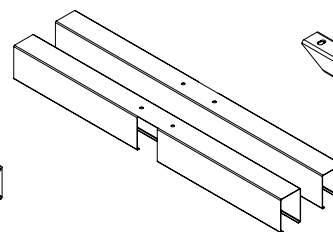 


2 x Leg Beam Cover

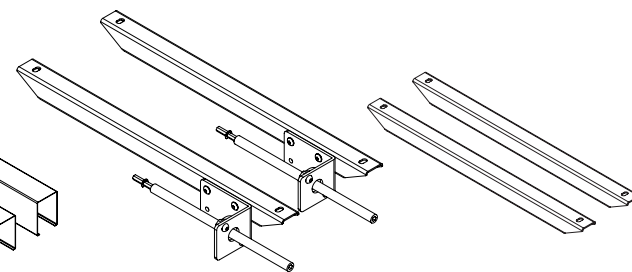 


2 x L&R Support Bar Pair

Winder 2 column installation guide

 
Parts

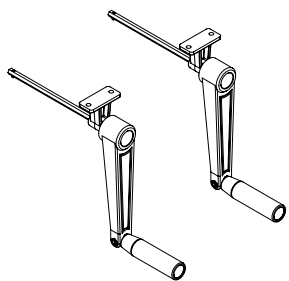

2 x Winder

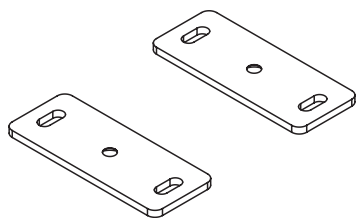 

2 x Screen Bracket

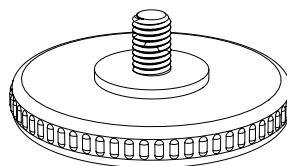 


4 x Leveling Foot



16 x M8x10



 20 x ST5.0x23



2 x M8x20



 
4 x M5x15



20 X M5x10




4 x M8x10



4x Washer

 
Winder 2 column installation guide

Step 1


8 x M8x10



 4 x M8x10




4x Washer

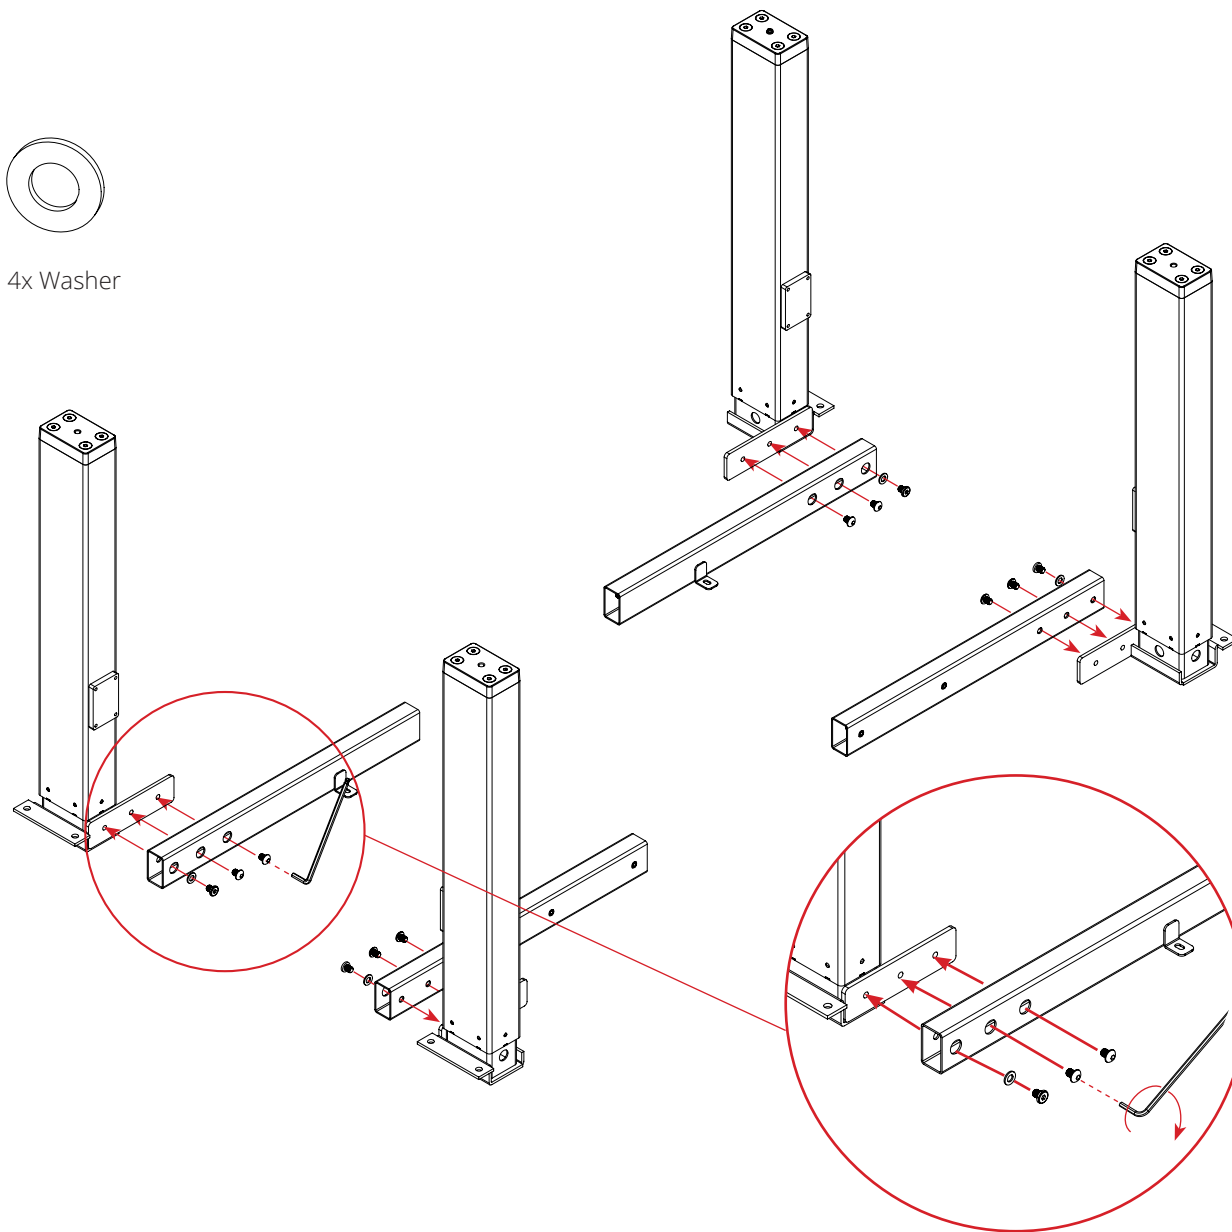 


Step 2



 
8 x M8x10

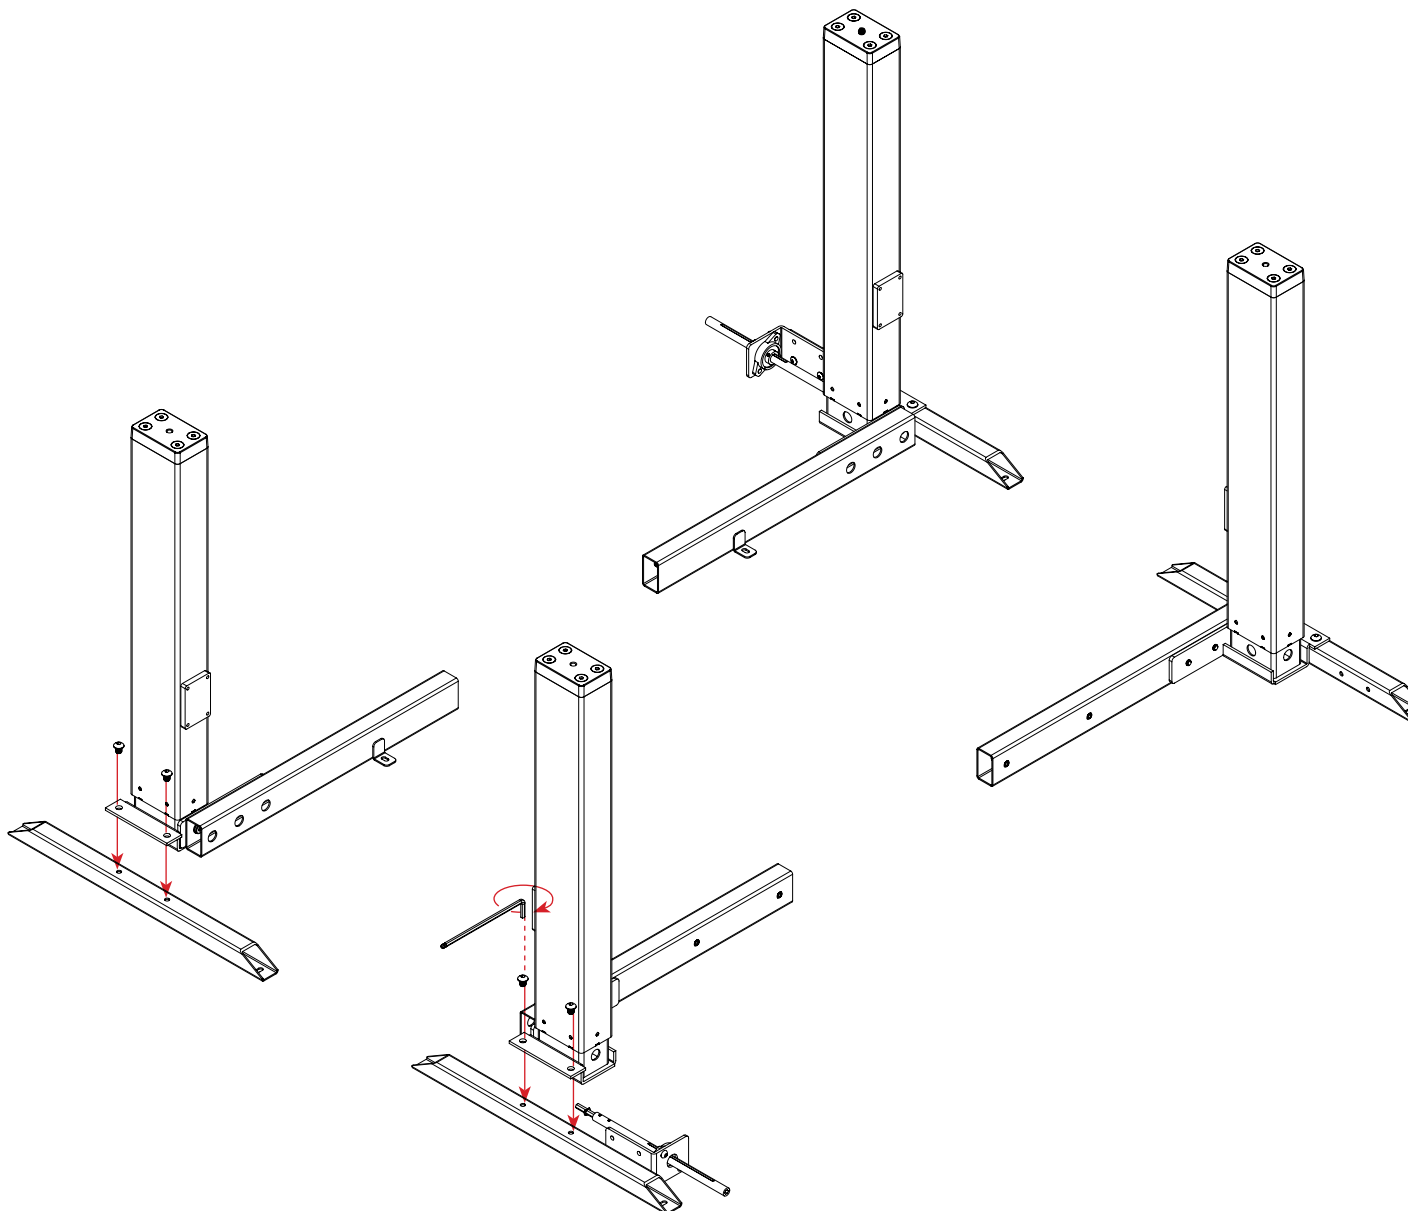


 Step 3

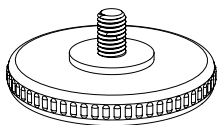



4 x Leveling Foot

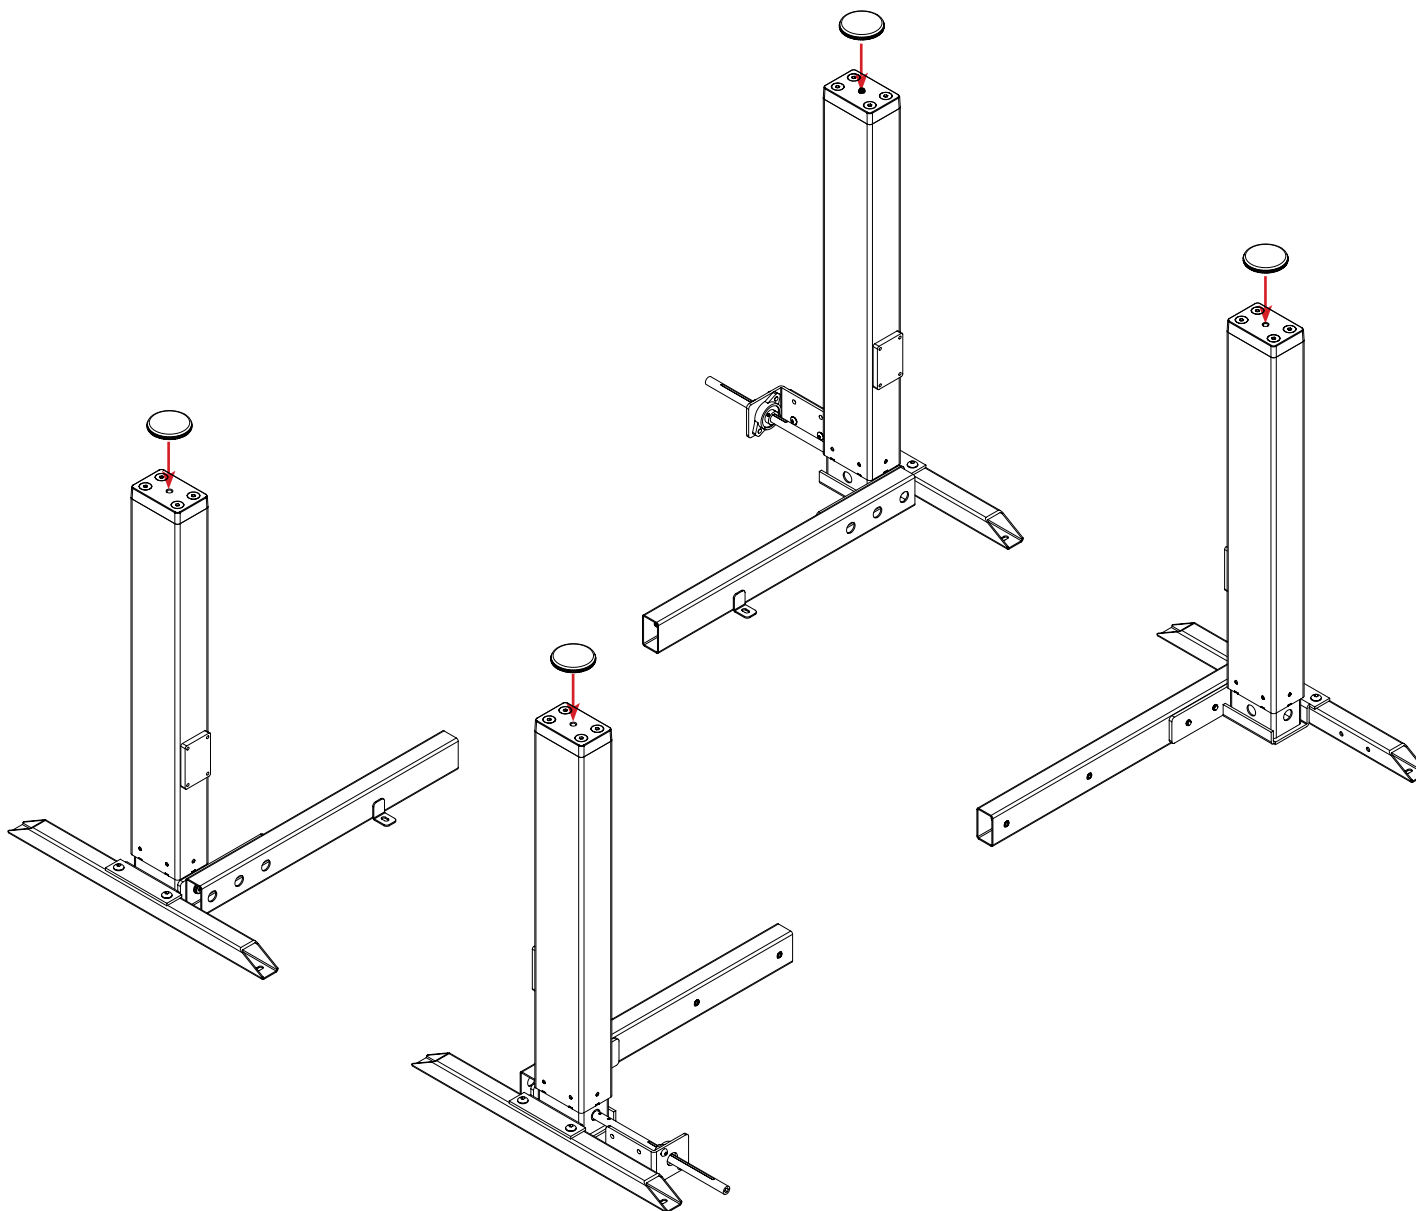 

 
Step 4

  16 x M5x10

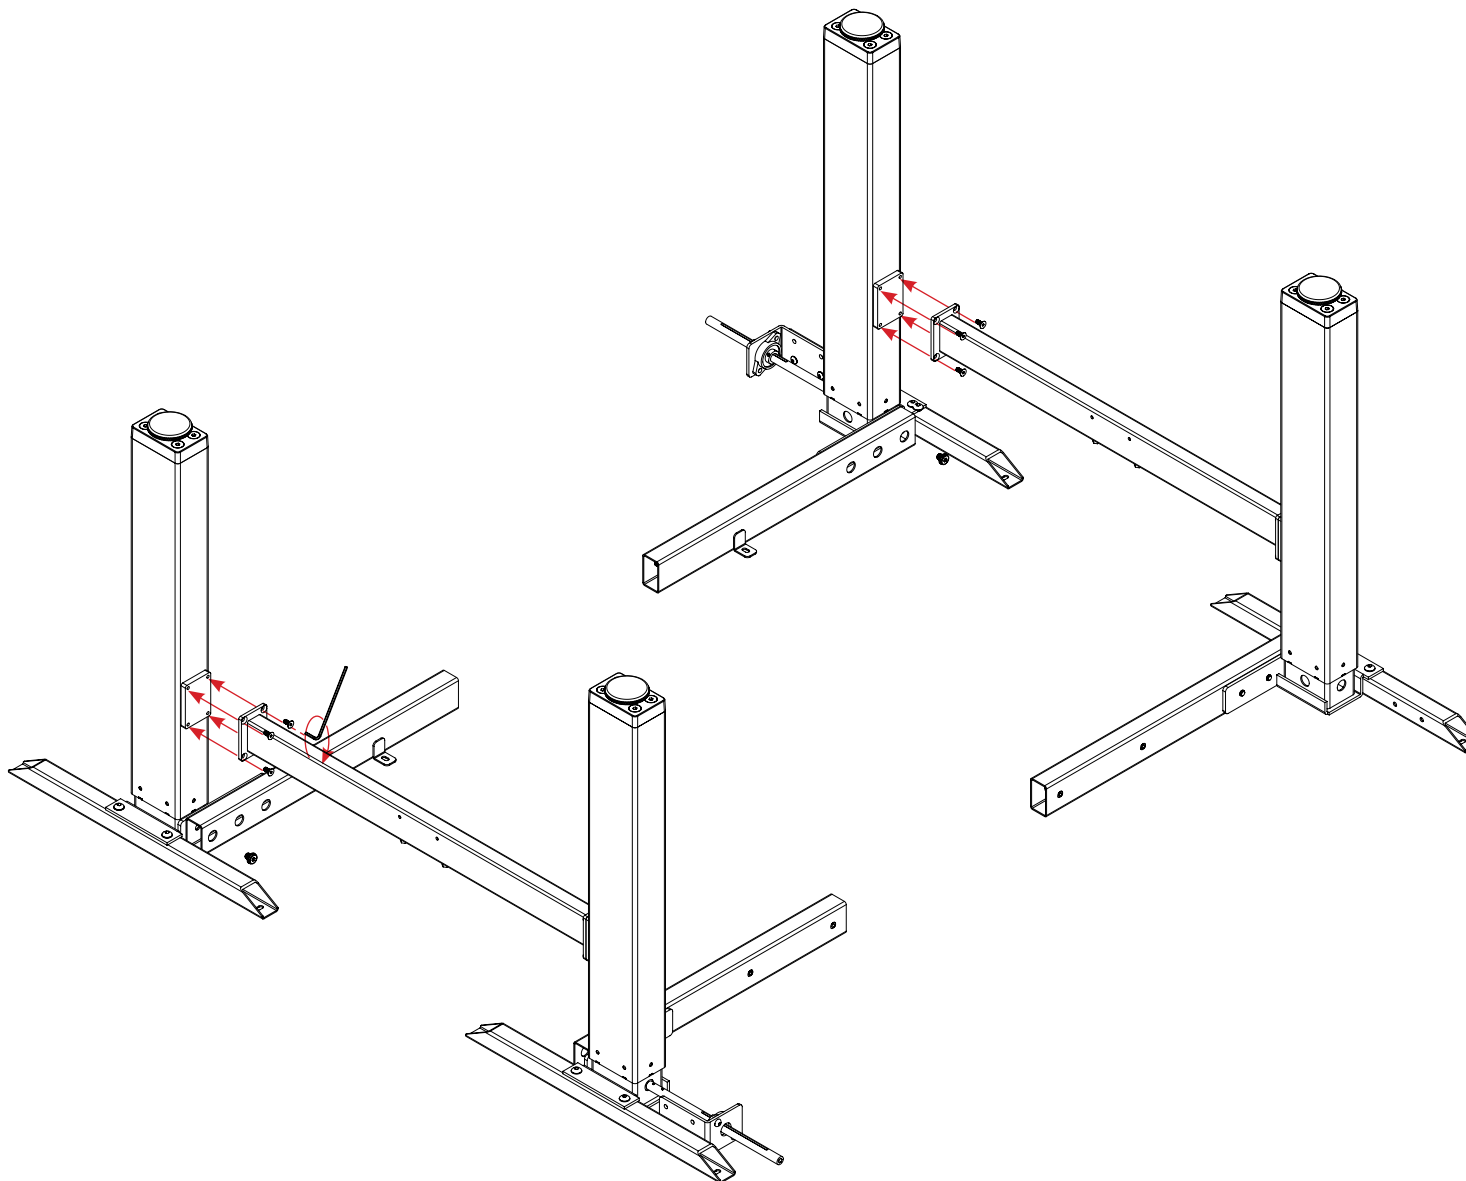


Step 5

 
4 x M5x10

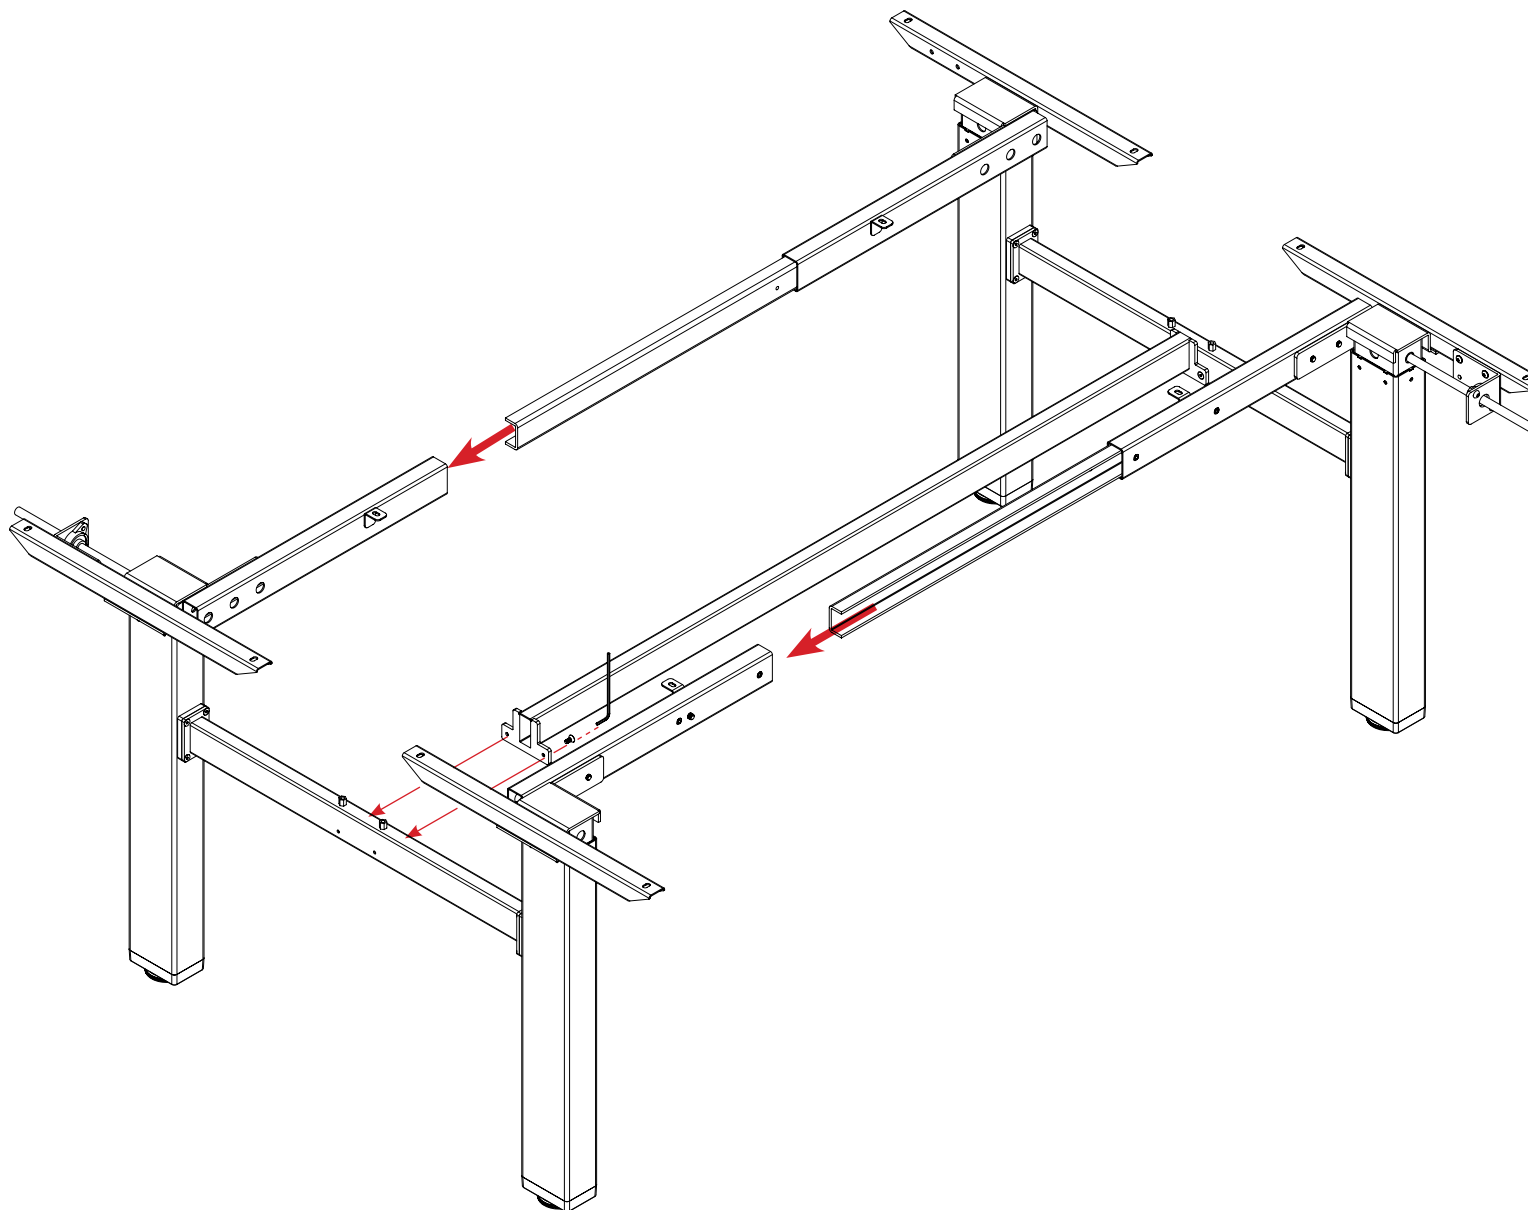

 
Step 6

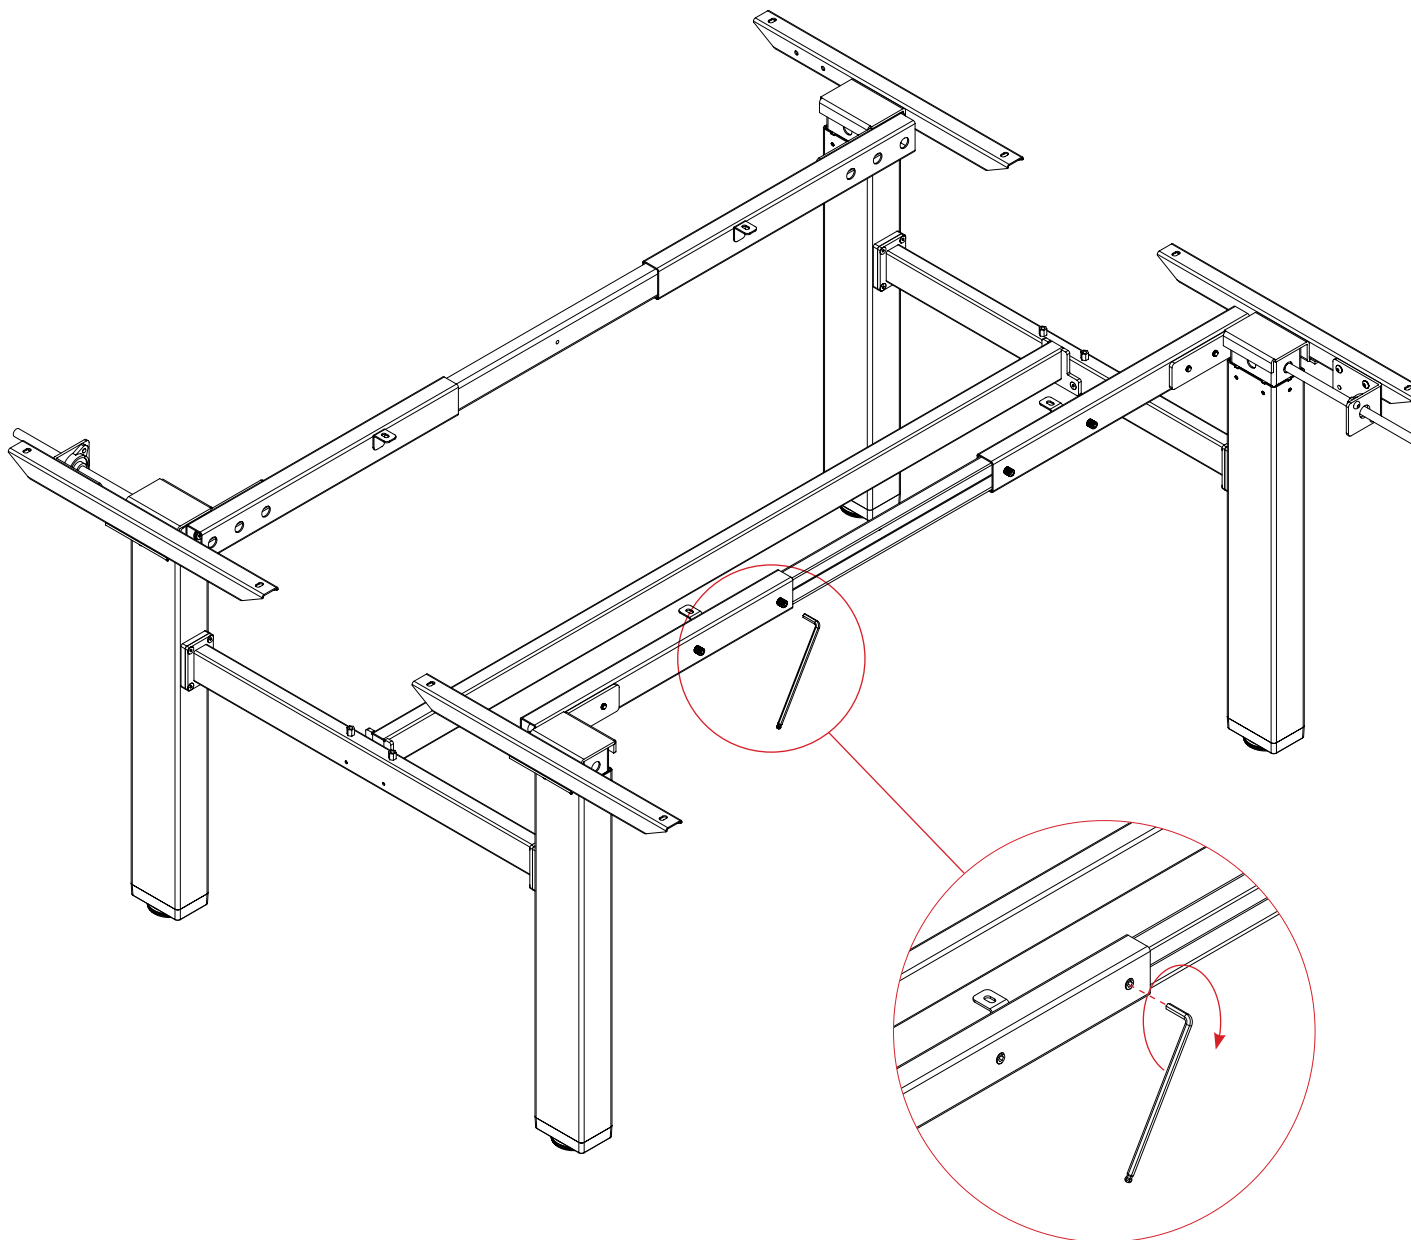

 
Step 7

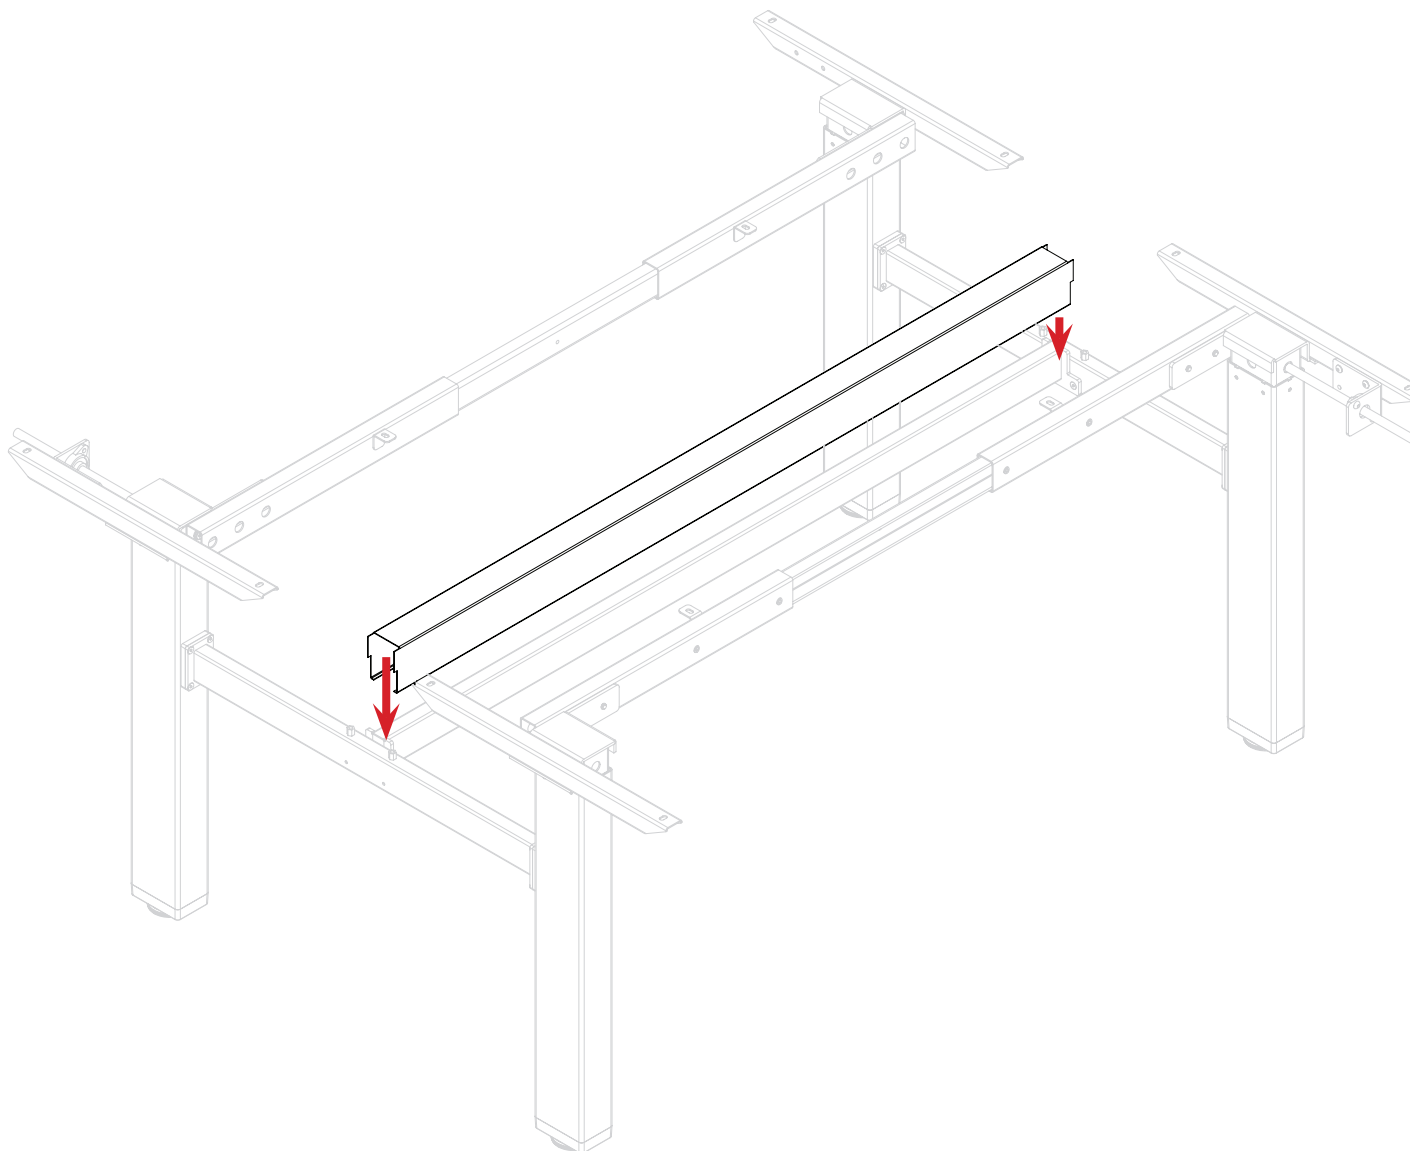

 
Step 8

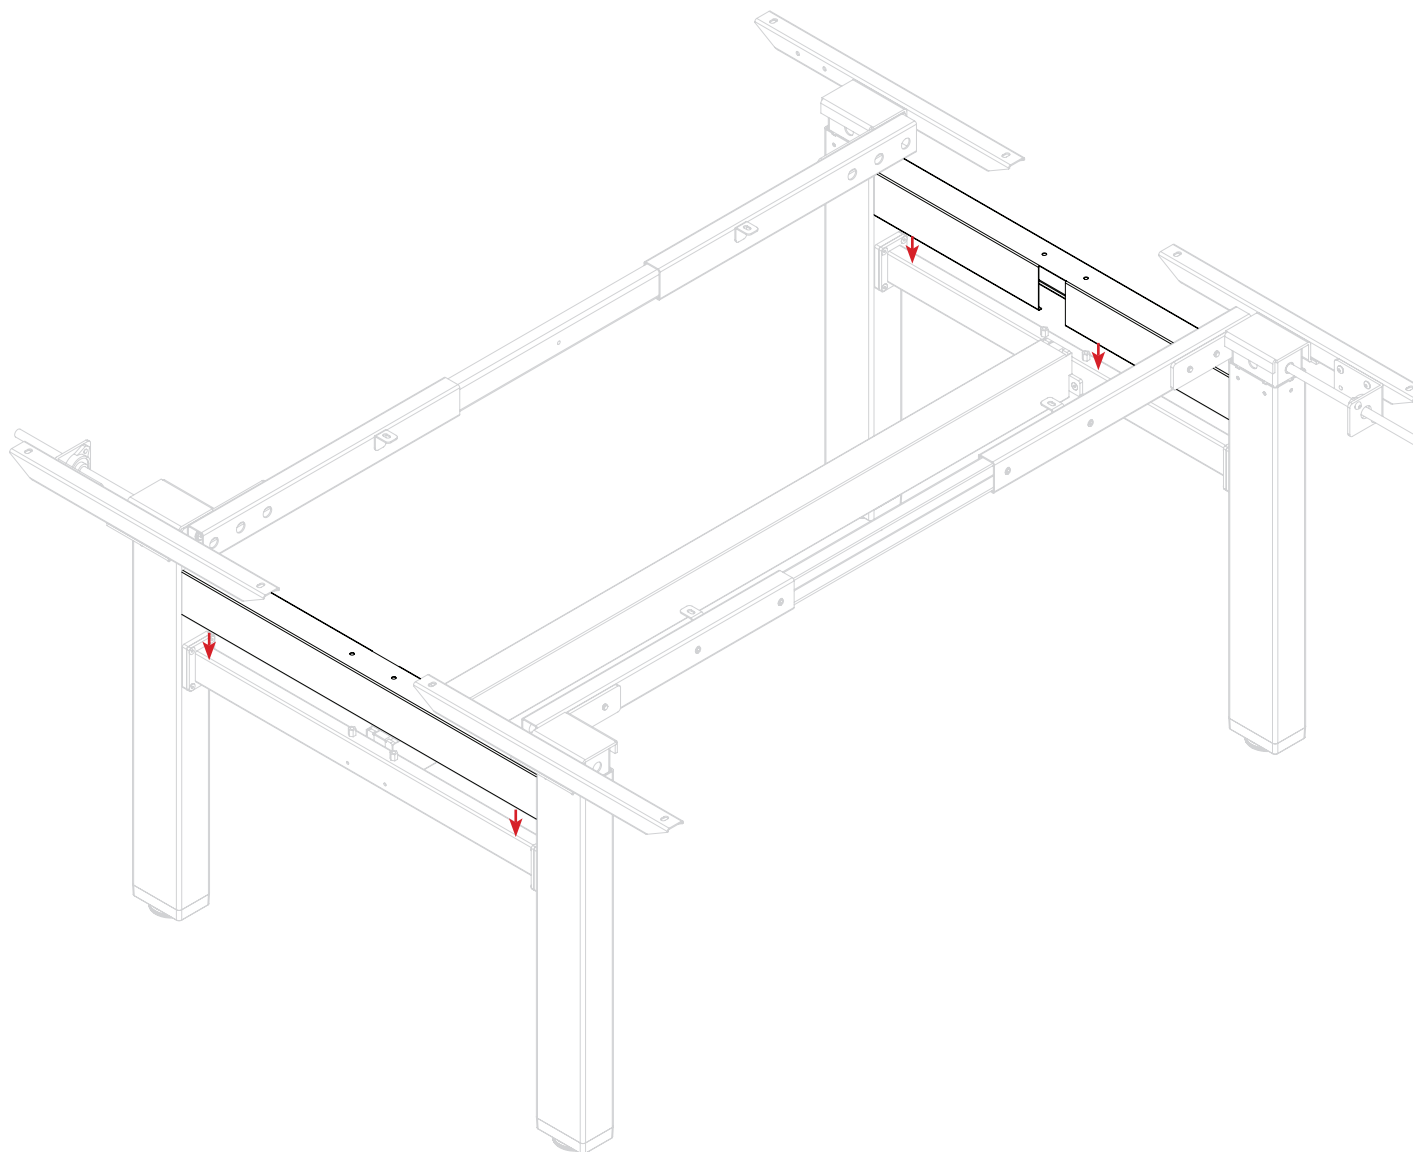

 
Step 9

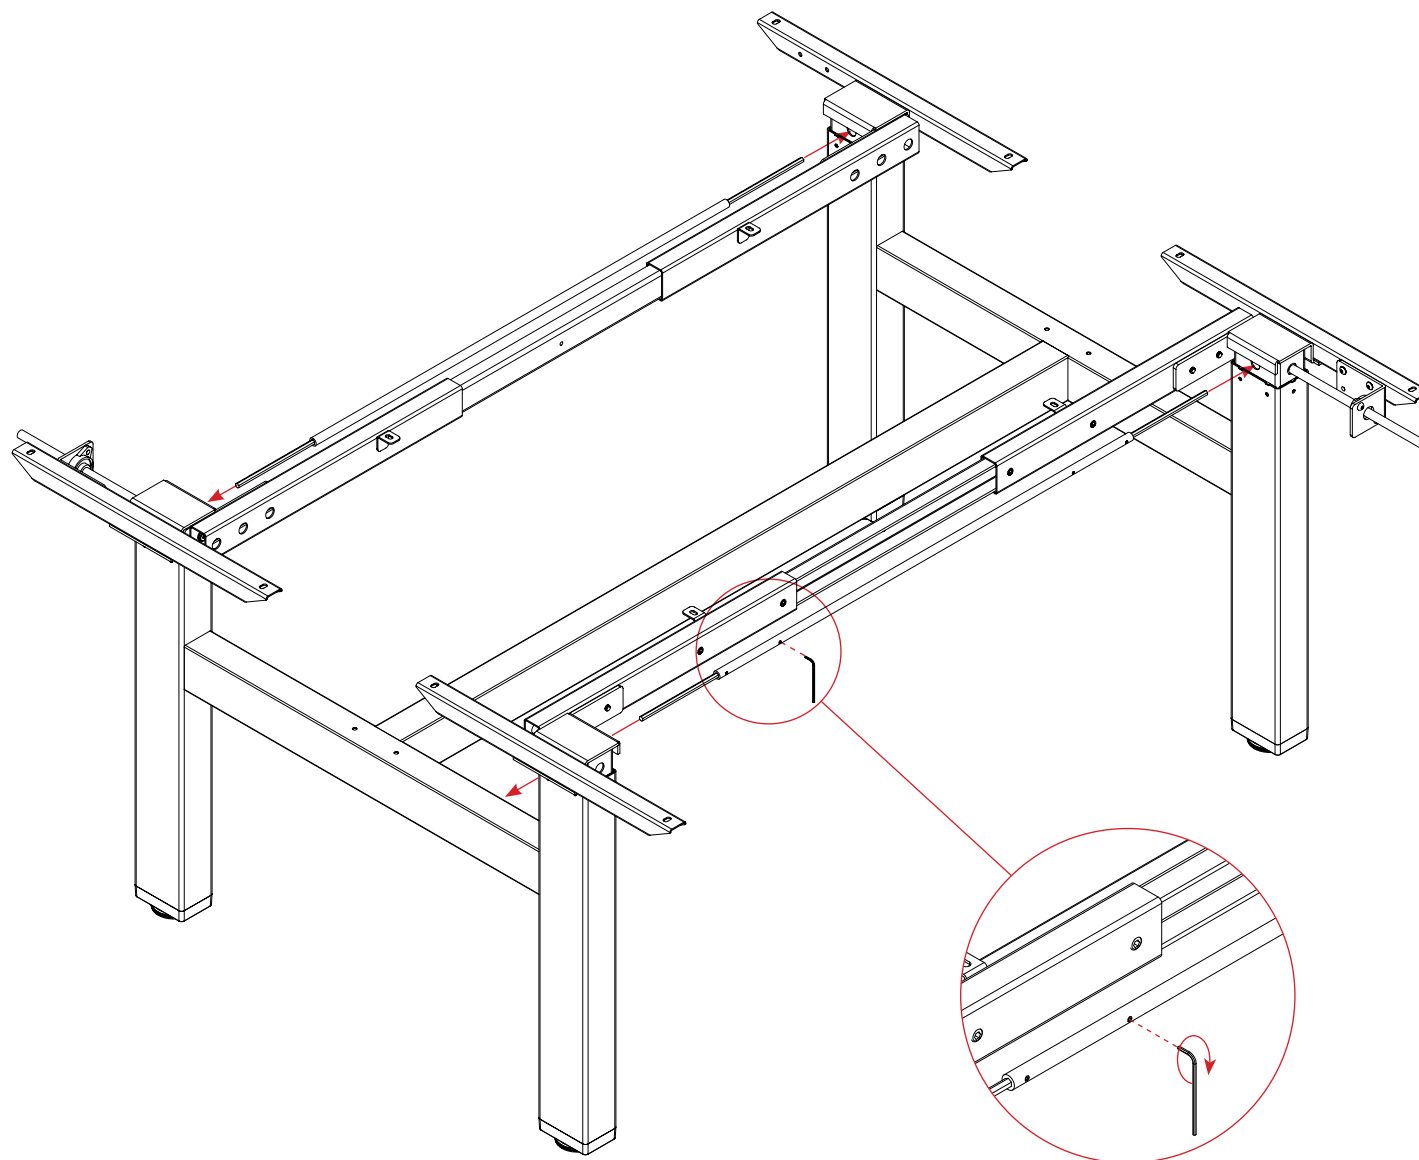


 Step 10




12 x ST5.0x23

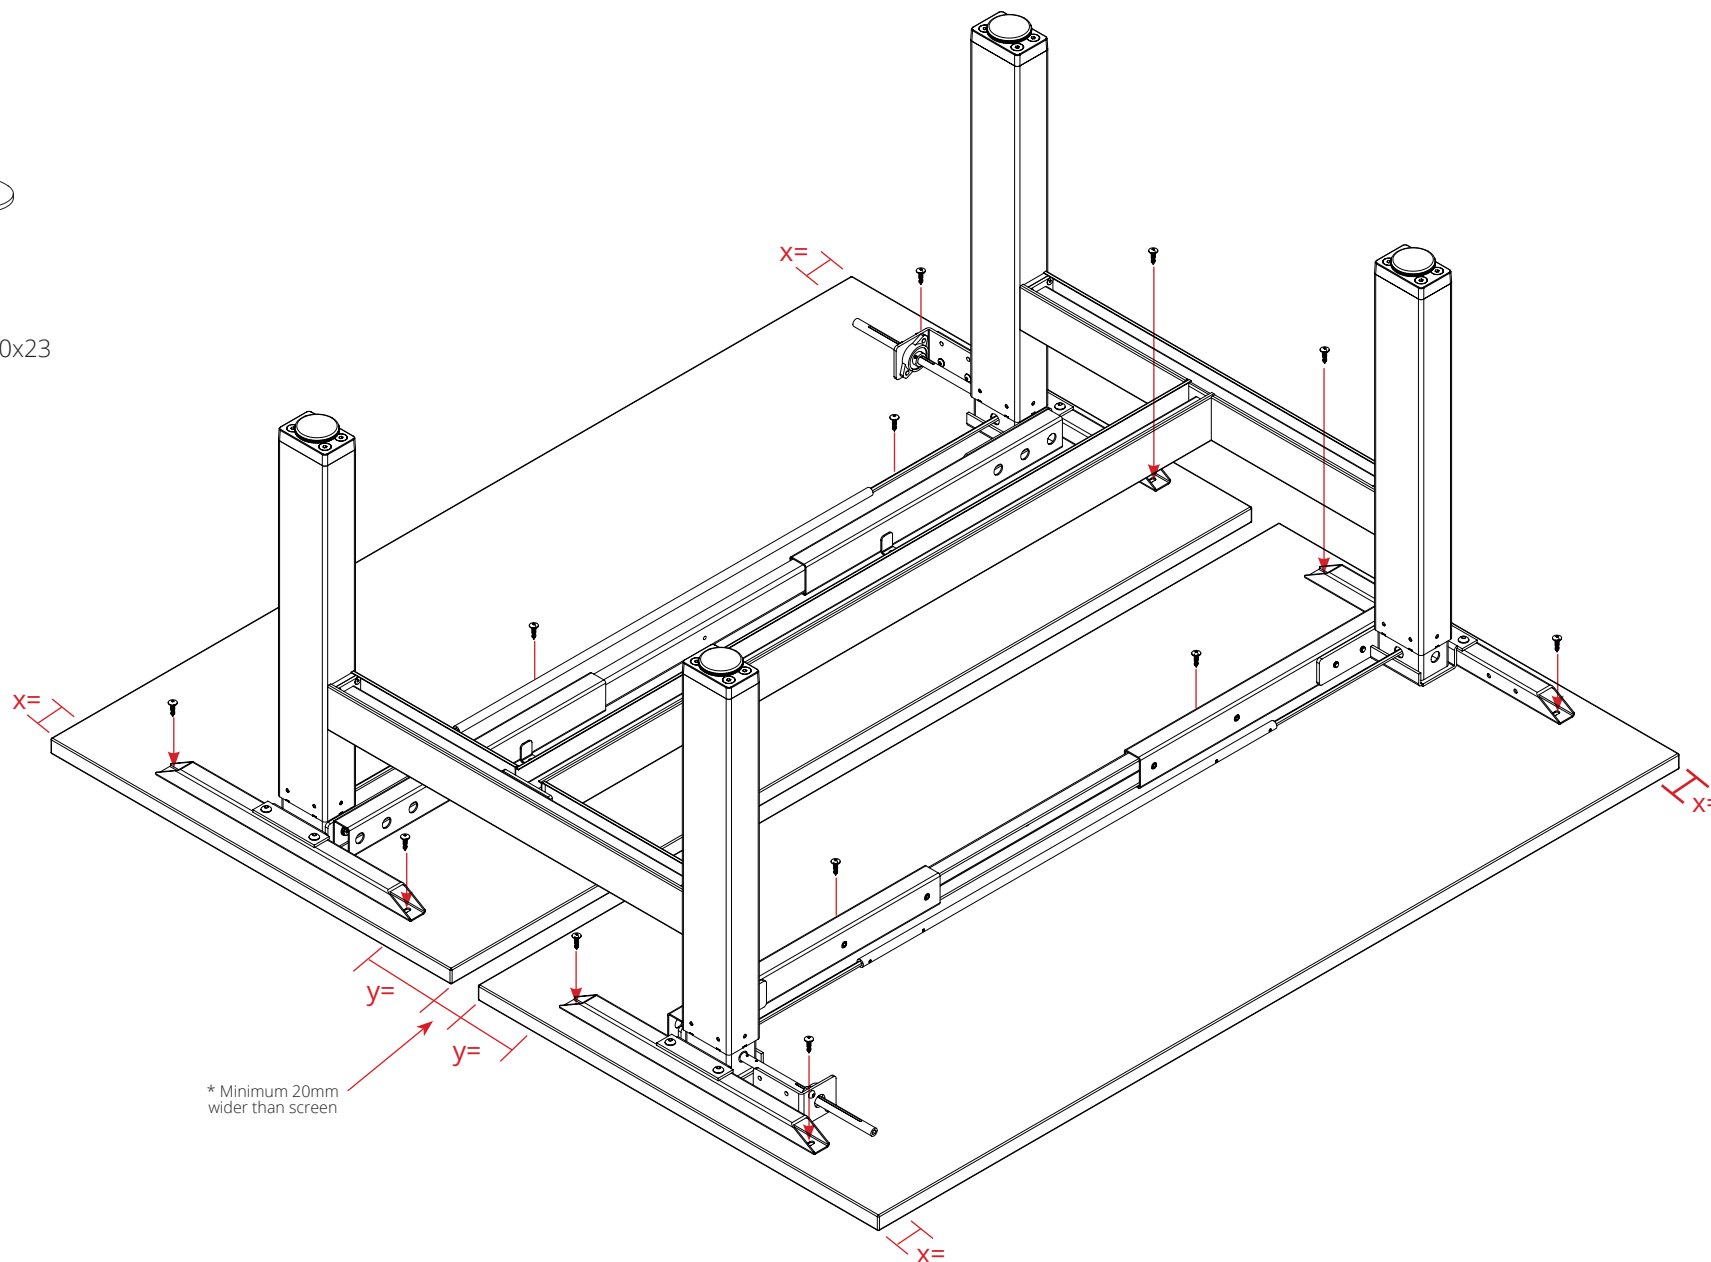 

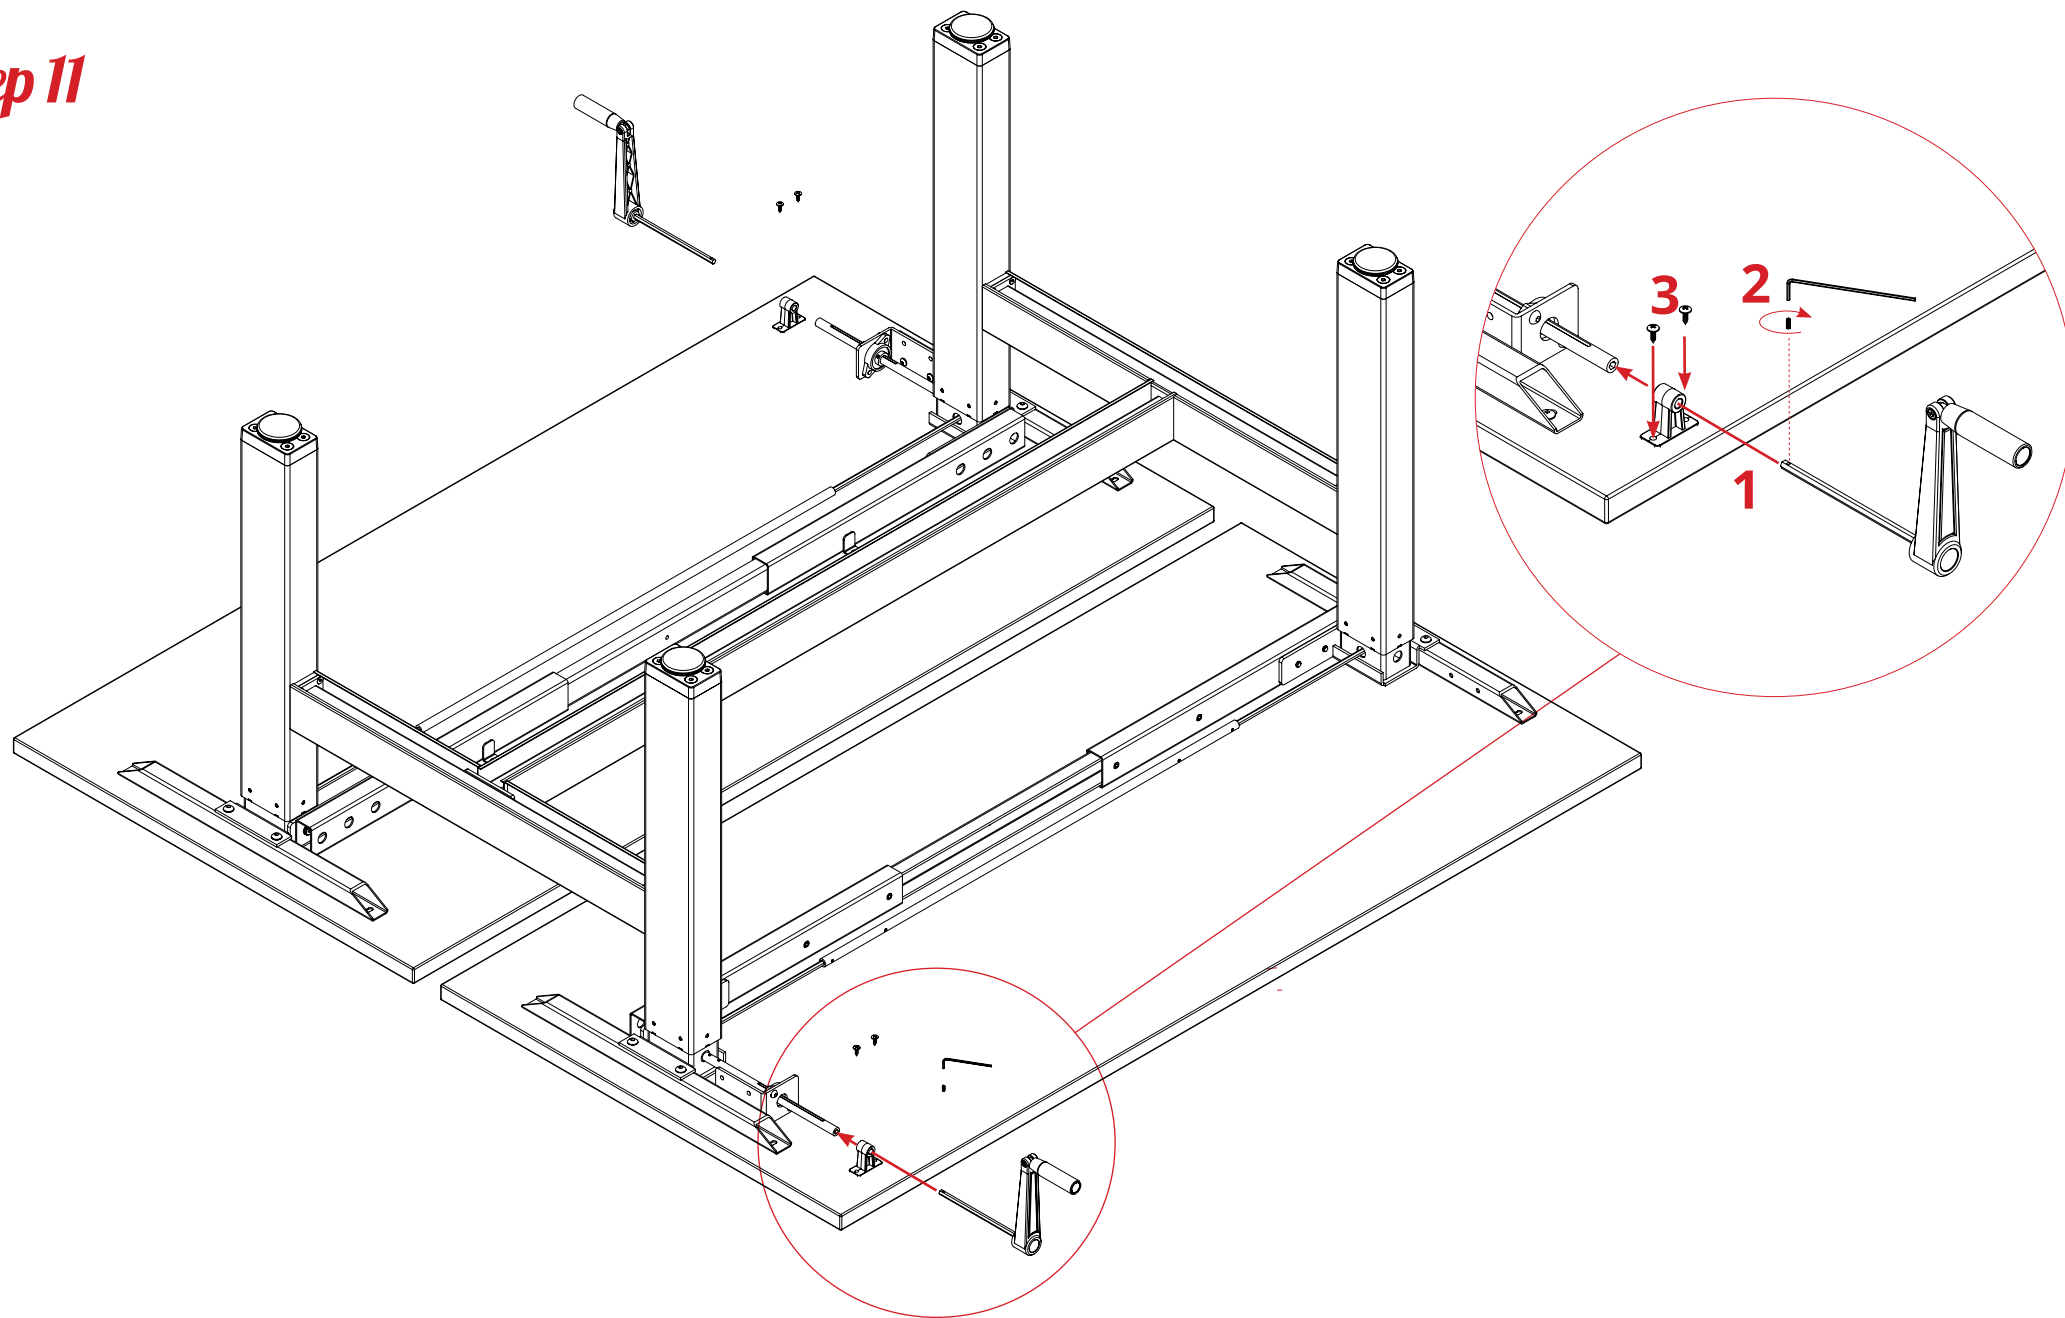 
Step 11

 Completed

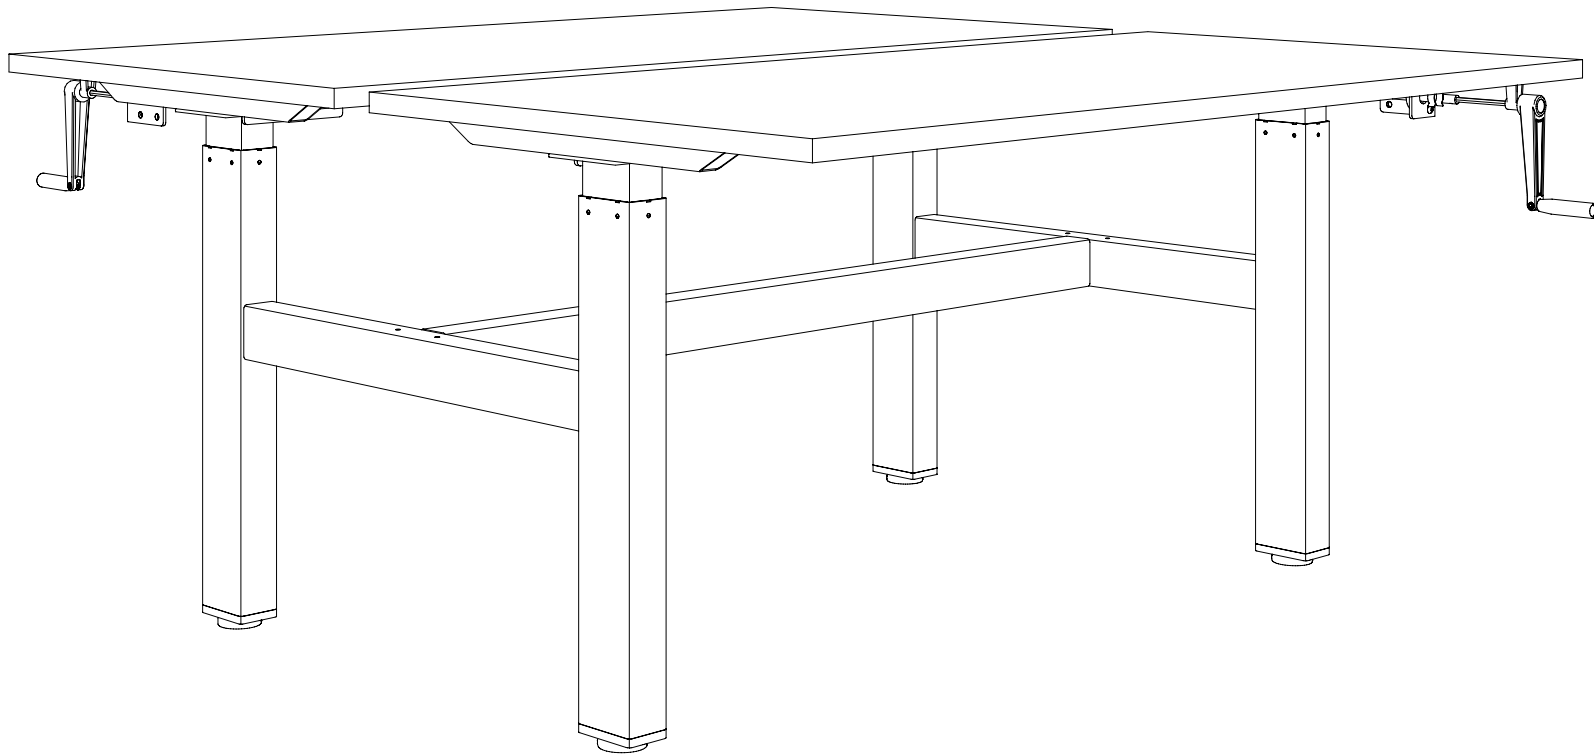


Changing crank handle from right to left operation

 
Step 1

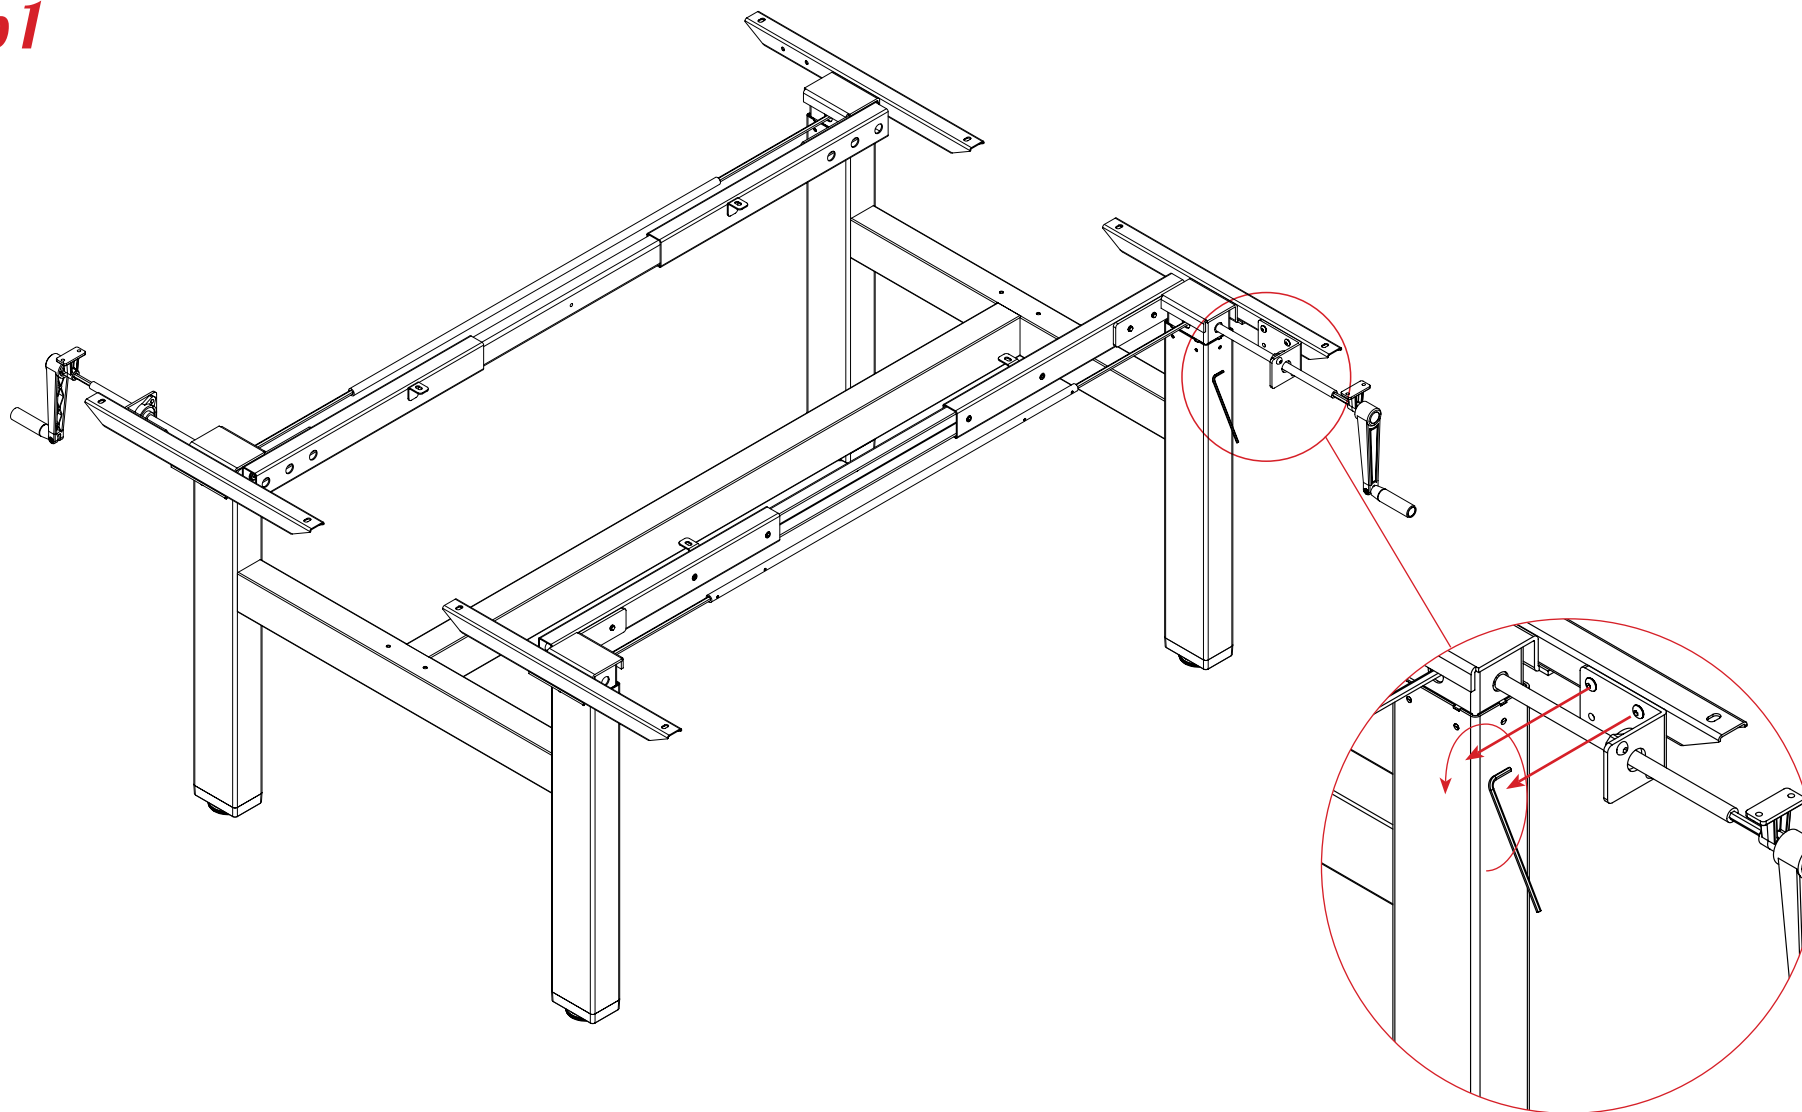


Changing crank handle from right to left operation

  
Step 2

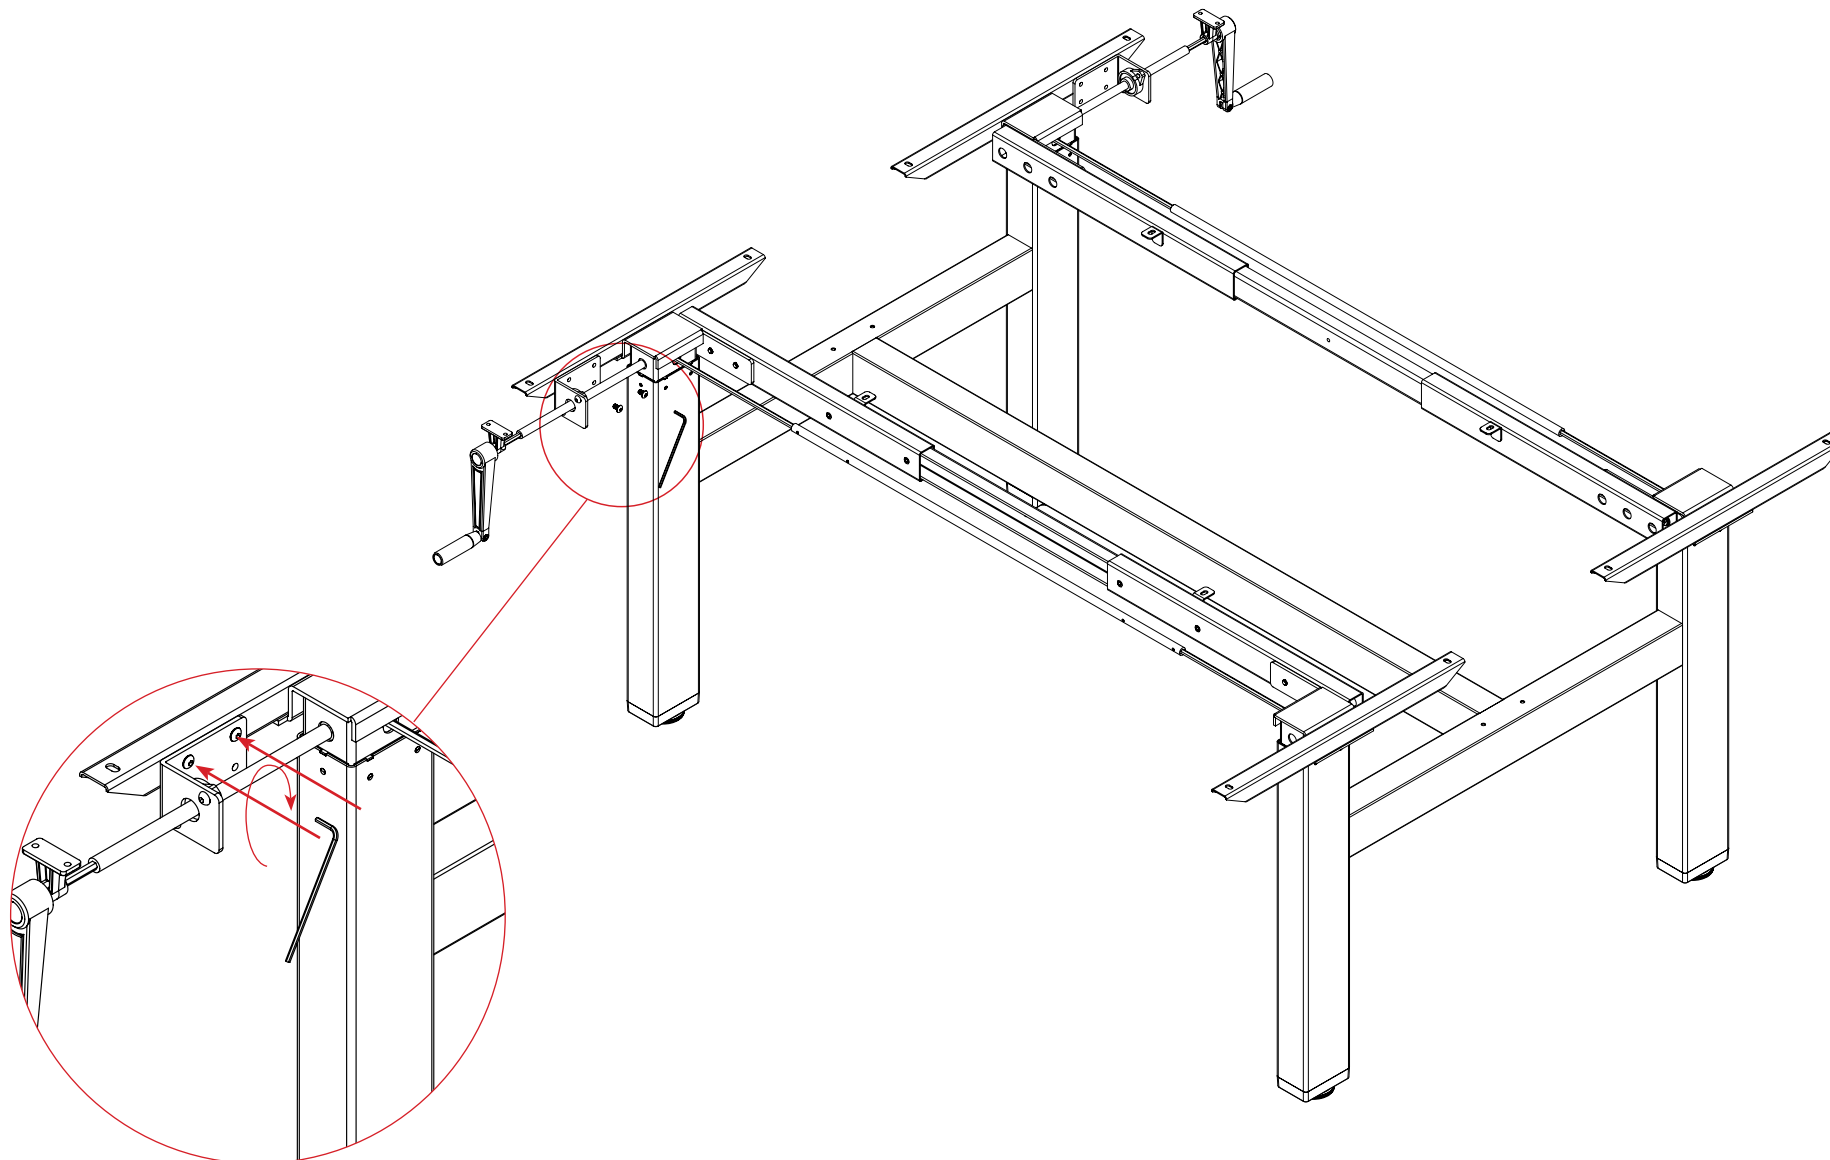


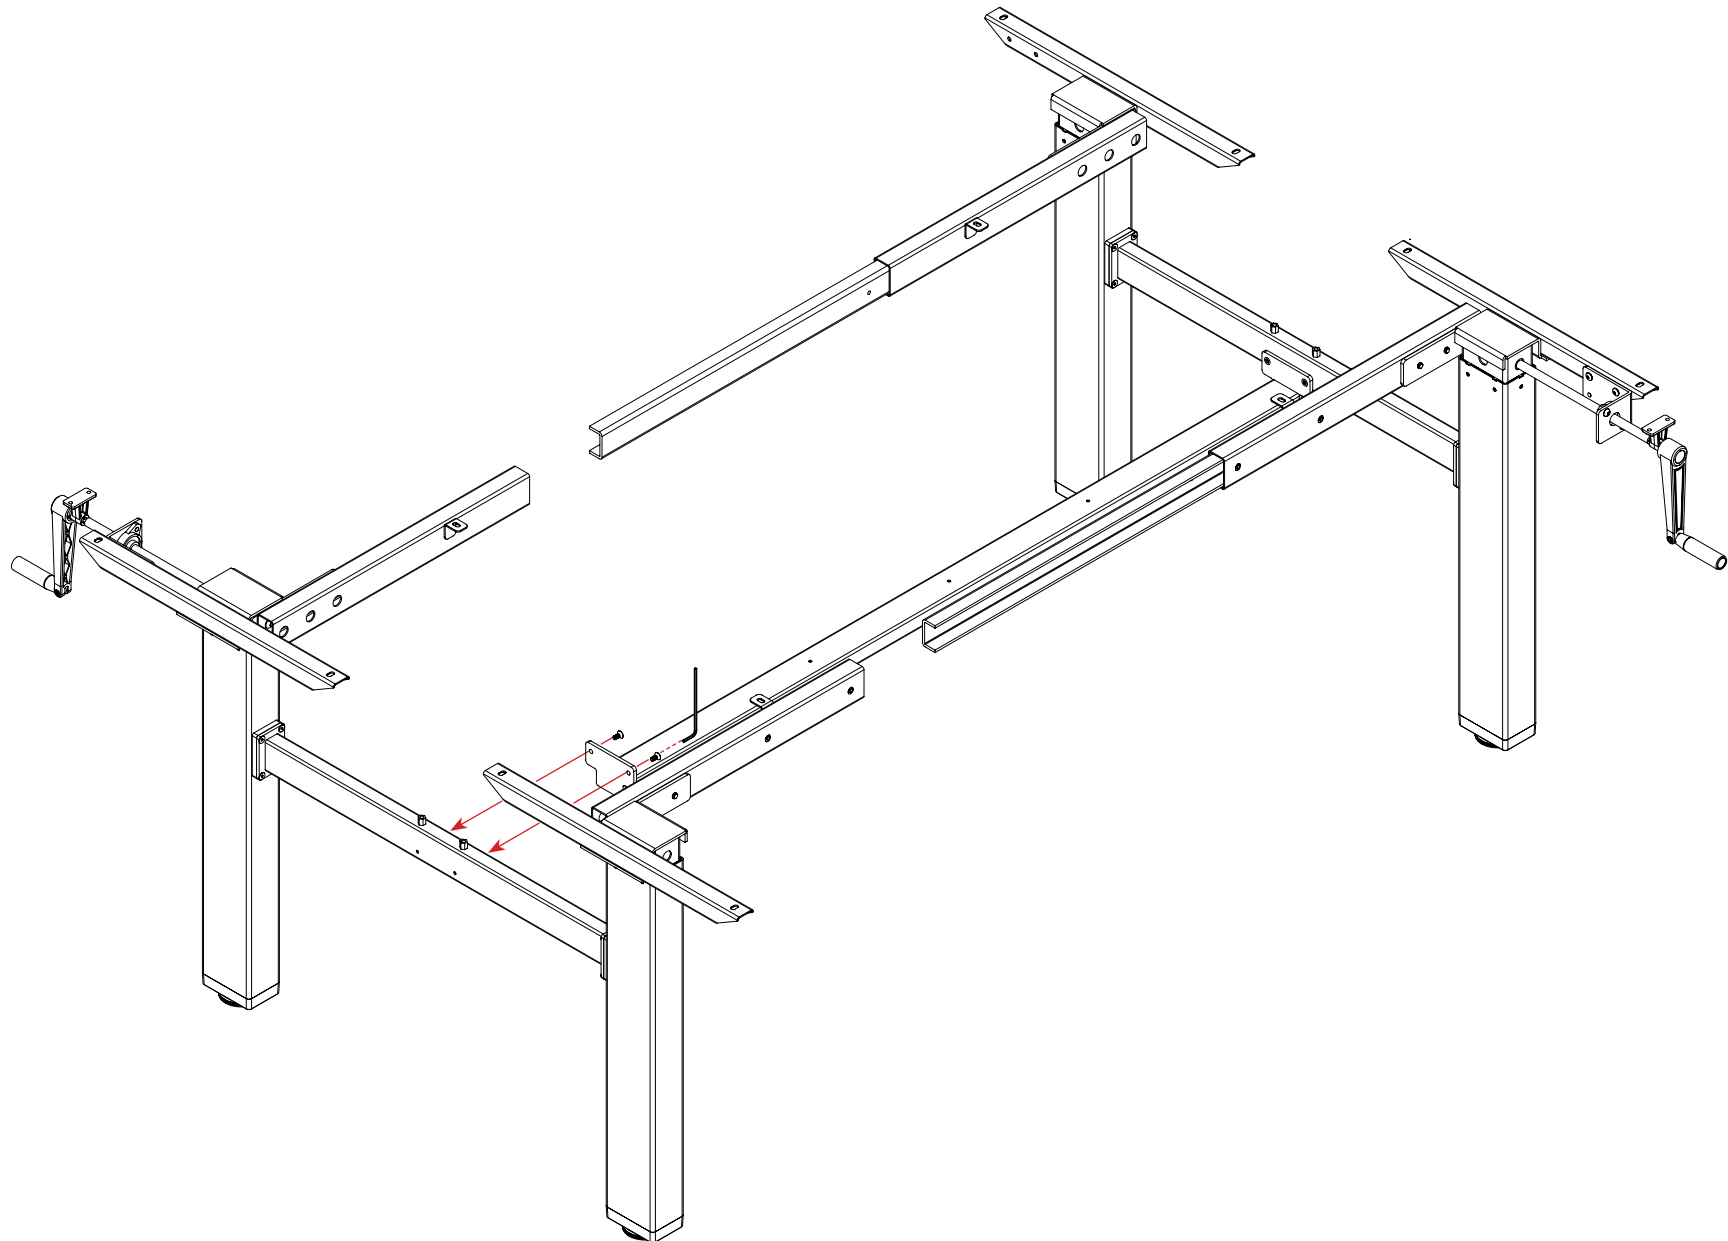Step 1

  Step 2

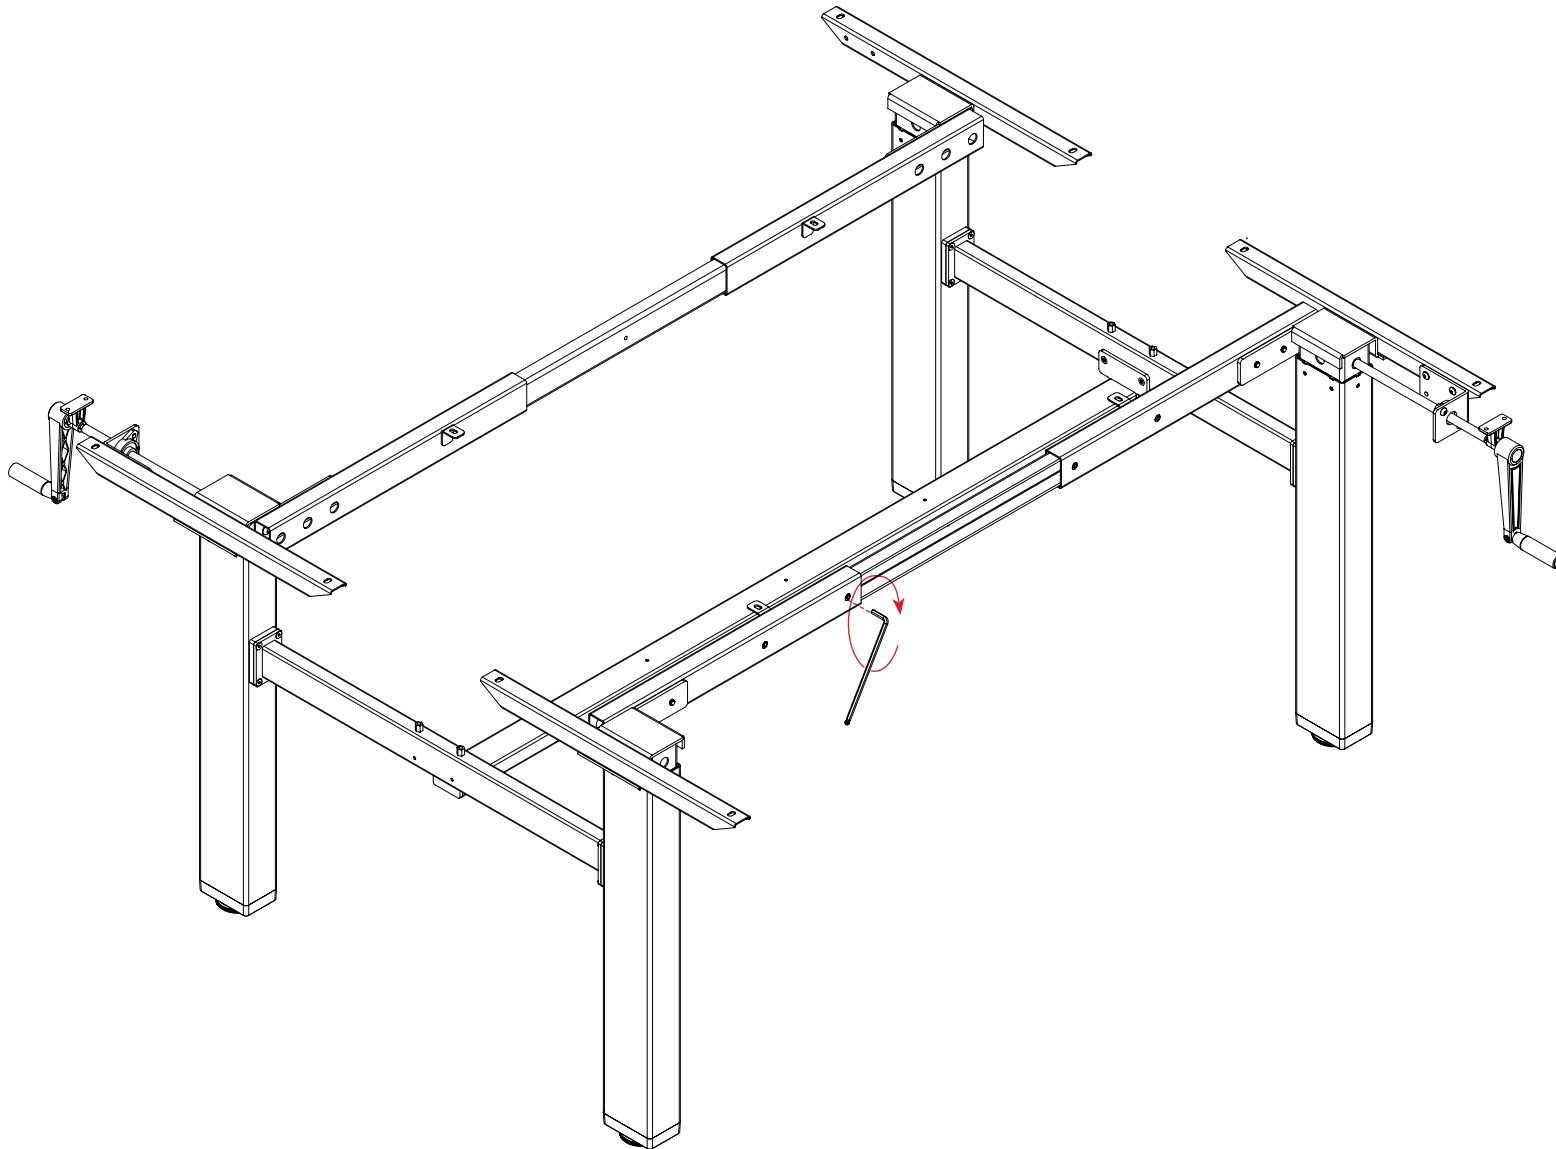


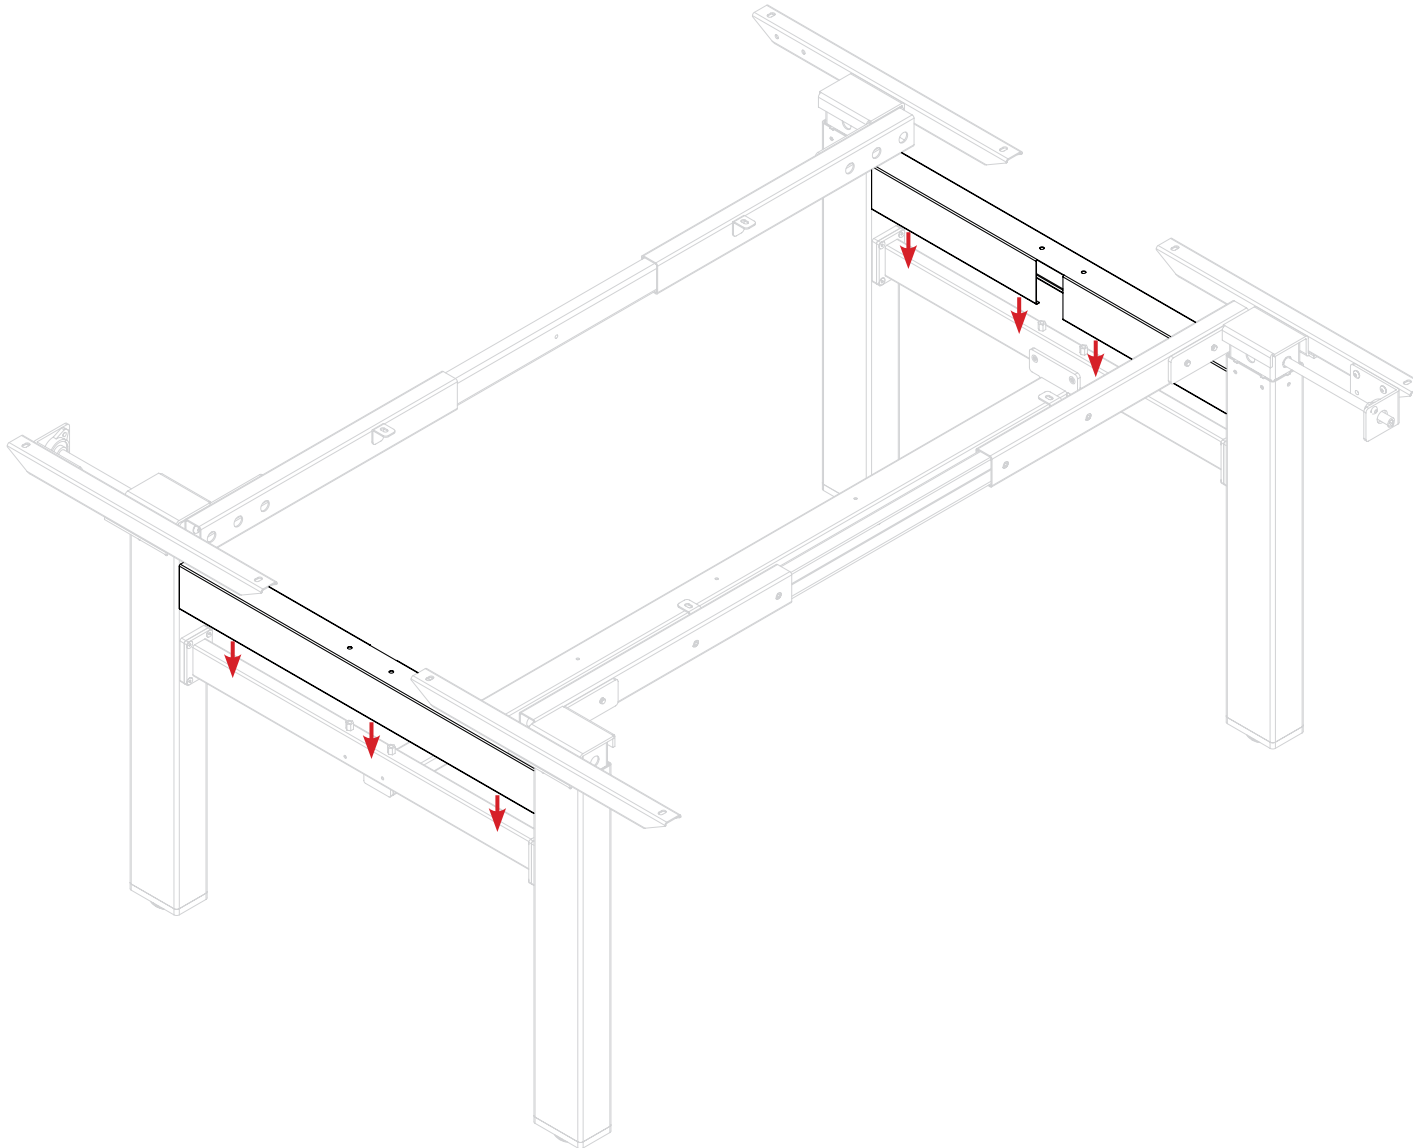 Step 3

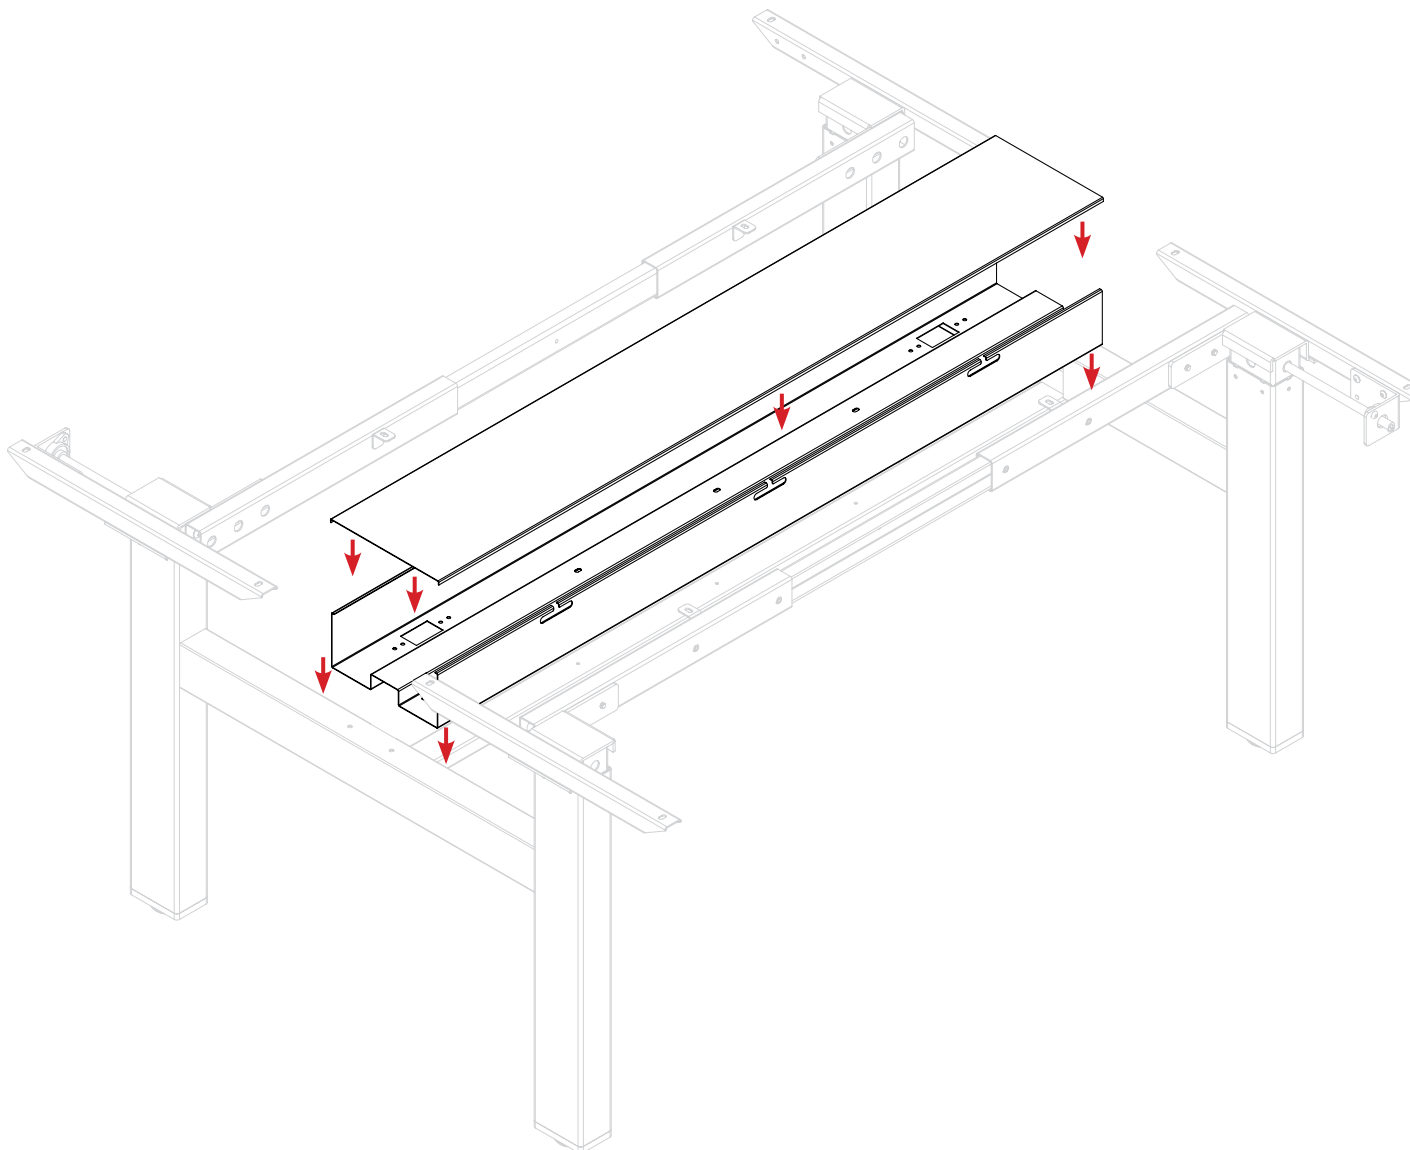
Step 4

Optional cable tray - power/data plates installation guide

 Step 1

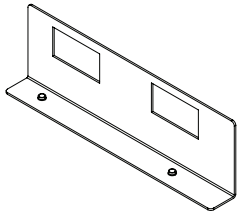


Twin power/data plate

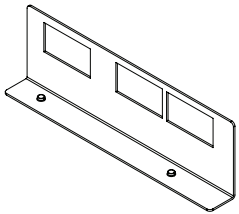 


Quad power/data plate



 4 x Screw + Bolt

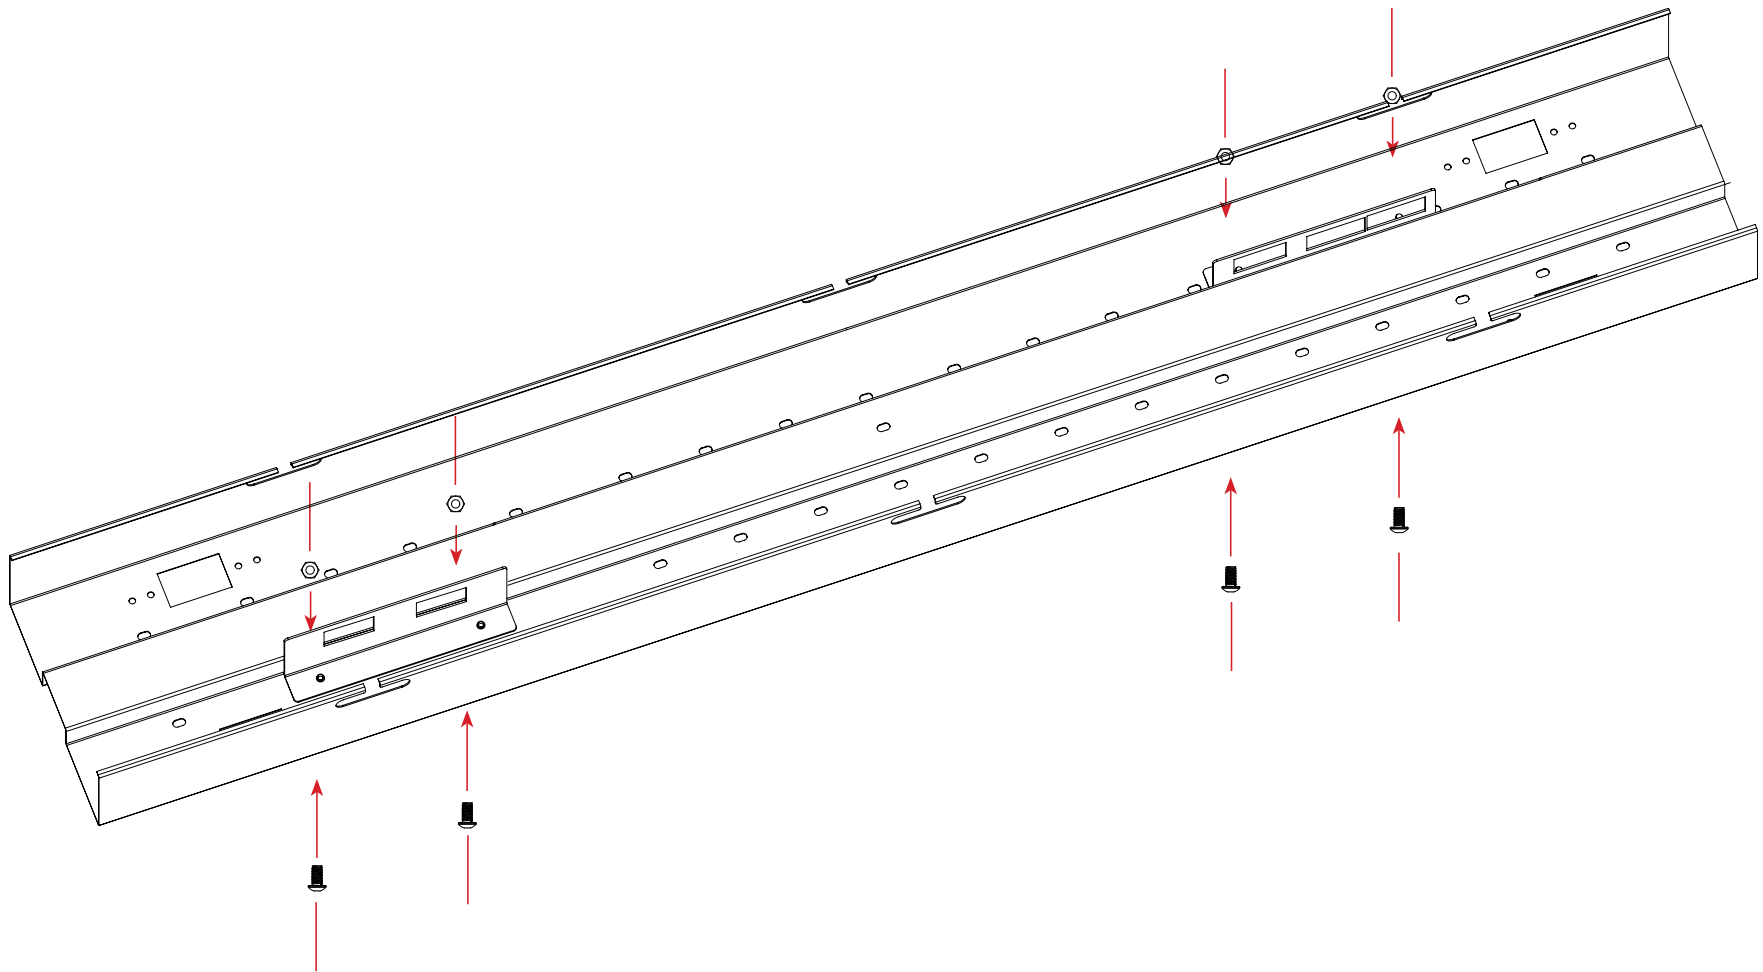

Complete

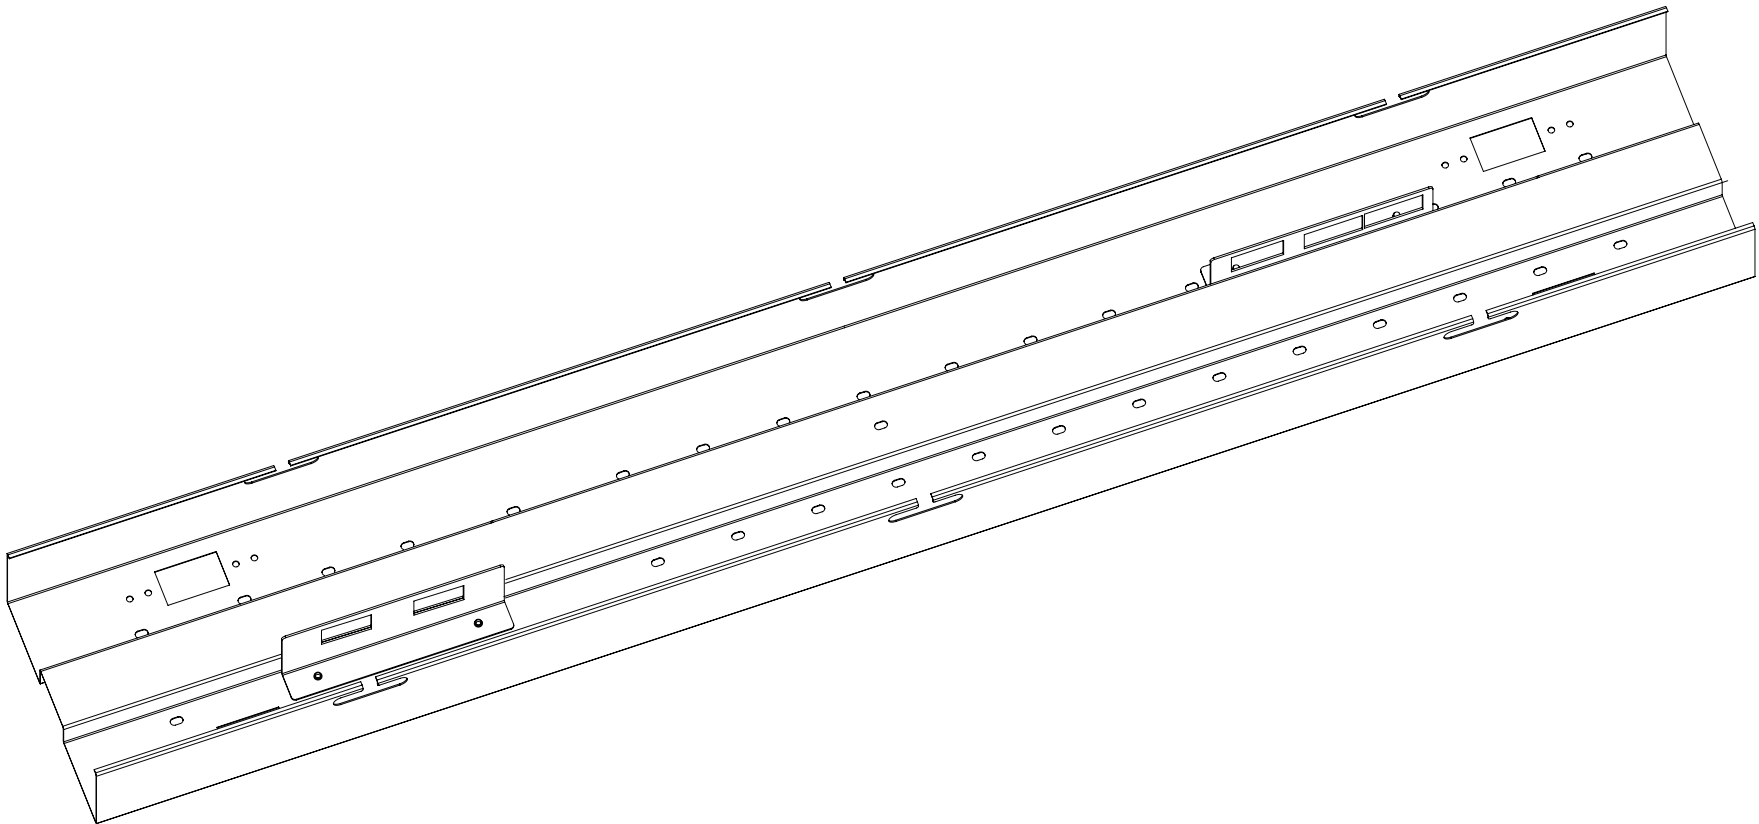 

Directions for use

IMPORTANT!

Please carefully read the assembly manual and direction for use prior to installment, use and maintenance of the table frame to gain a complete understanding of its contents. It provides you with important information about the safety, use, installation and maintenance of the table.

WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.

SAFETY

- The table must be used in a safe manner. Inappropriate use may cause damage to the table and/or cause bodily harm to the user or persons nearby.
- Do not use the table frame to lift people.
- Please retain this operation manual and pass it on to any future owner.

USAGE

- The height-adjustable table is designed for use in dry work environments only.
- The table height is infinitely adjustable within its height range so that it can be set to the user's most ergonomic working height. The user should seek professional help to establish their optimum working height.
- The table has been designed as a device to elevate the users work surface and associated office peripherals. Do not use the table frame for any other purposes than that which it has been designed for. Any other use is at user's own risk!
- Do not crawl, lie or move around under the table frame, and do not sit or stand on the table frame.
- CHILDREN should only use the table when supervised by adults.
- Liability: The manufacturer accepts under no circumstances warranty claims or liability claims for damages arising from improper use or handling of the table frame other than that described in this operation manual.

SET UP AND INSTALLATION

- Assemble the table frame according to the assembly instructions
- Place the table in a safe distance from window frames, radiators, furniture etc. so that persons cannot become trapped.
- Level the table with the adjustable feet ensuring that the table is stable.
- Check that no cables can get jammed.

MAINTENANCE

- The table does not require any maintenance by the user
- The table is only to be cleaned with a wrung cloth.

TECHNICAL DATA

Height Range: 680-1130mm