


# Axis Double-Sided System

Installation Guide


TOOLS REQUIRED: Power drill, rubber mallet

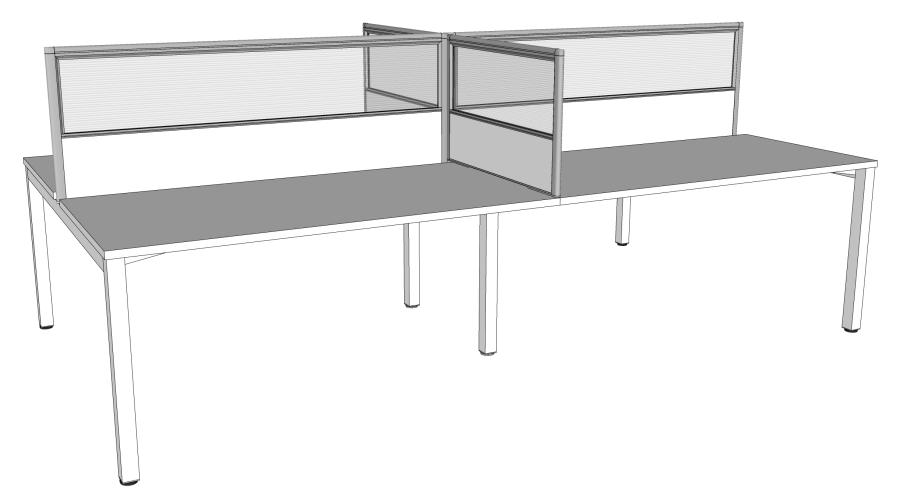

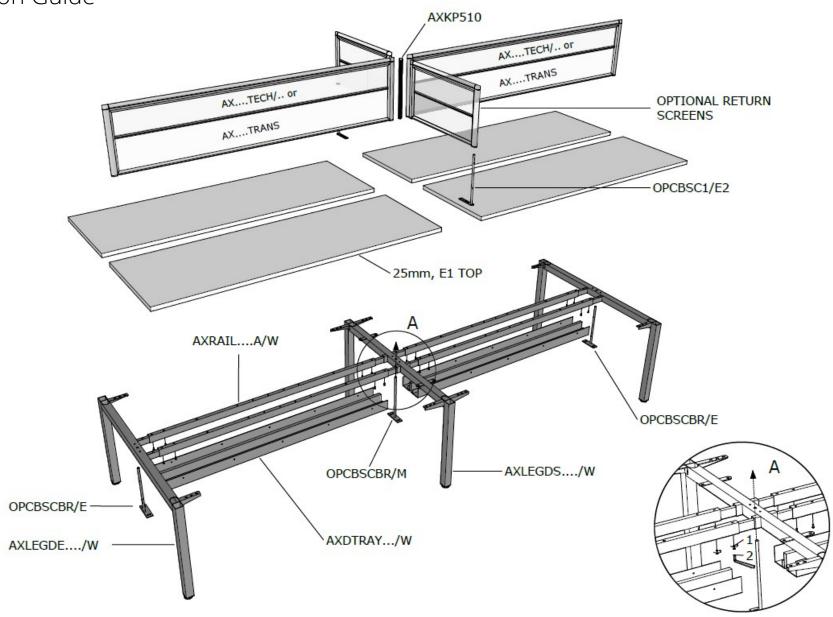


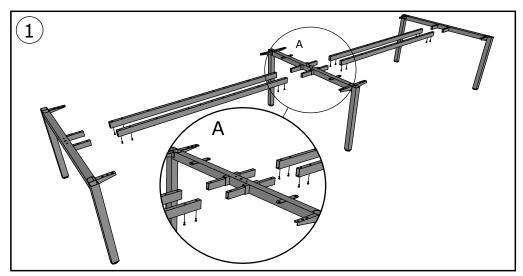


Assemble frames & rails together, <u>loosely</u> (1 turn from tight).

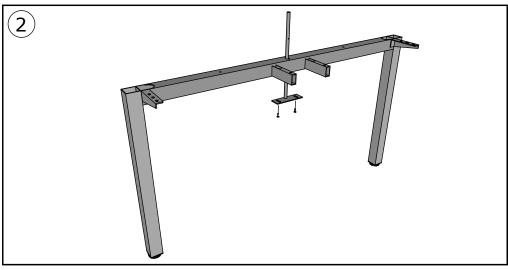

Assemble screen brackets to frame, <u>loosely</u> (1 turn from tight).

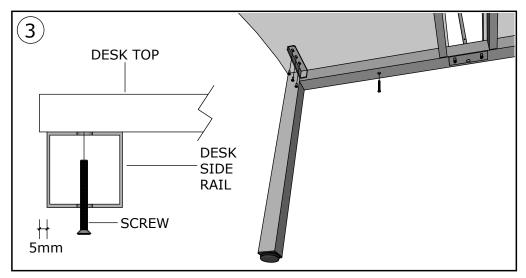


Fix desk top with 5mm overhang over metal frame. Where desktops but together, make sure these are fitted tight together.

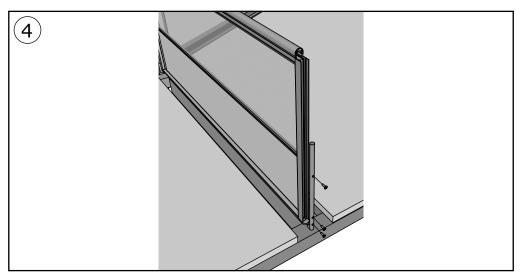


Carefully remove end seal on screen & fit screen between end brackets & screw self tappers to fix screen tightly.




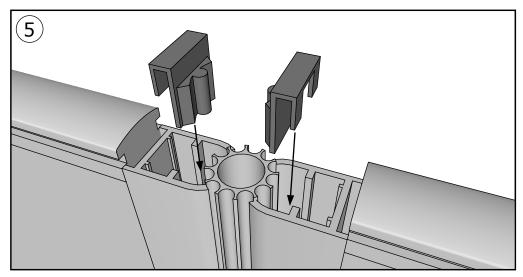


Slide screen pole over bracket & attach screens to pole with top slug connectors.

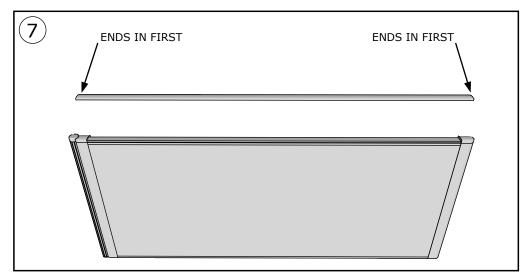

If for whatever reason you have to remove the top seal, then to refit, slightly arc in the middle, placing the 2 ends into location, & gently tap down.

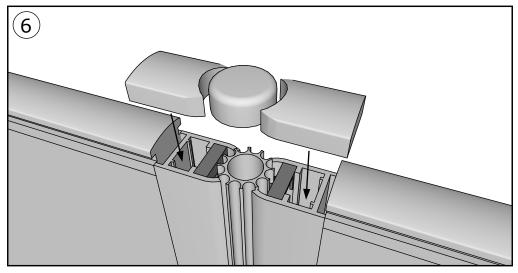



If not using wing screens then gently attach the 3 caps simultaneously tapping into position.

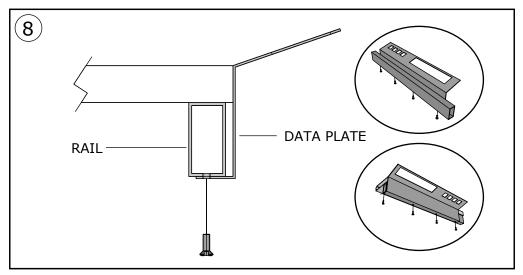

Fit data rails with screws into rails.



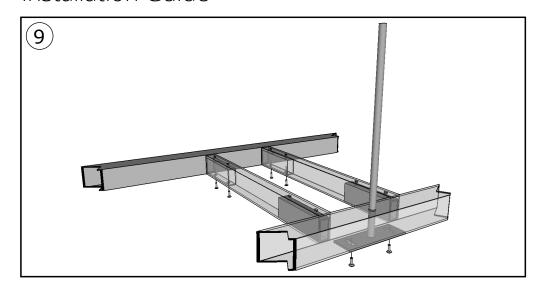

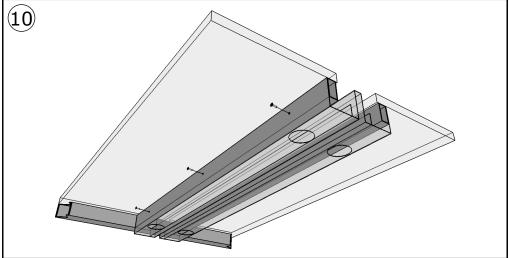

<u>Fully tighten</u> all rails to frame screws, & then screen bracket screws.

Attach cable trays with screws provided.