

motionoffice

arc 3 Assembly Instructions



PARTS LIST:


- MOES (L&R Pairs)
- MOCS14 x 3
- MLOOPC60BO x 3

COMPONENTS LIST:

8 - Pins




Arc 3 Assembly Instructions




Recommended
2-person Step


To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

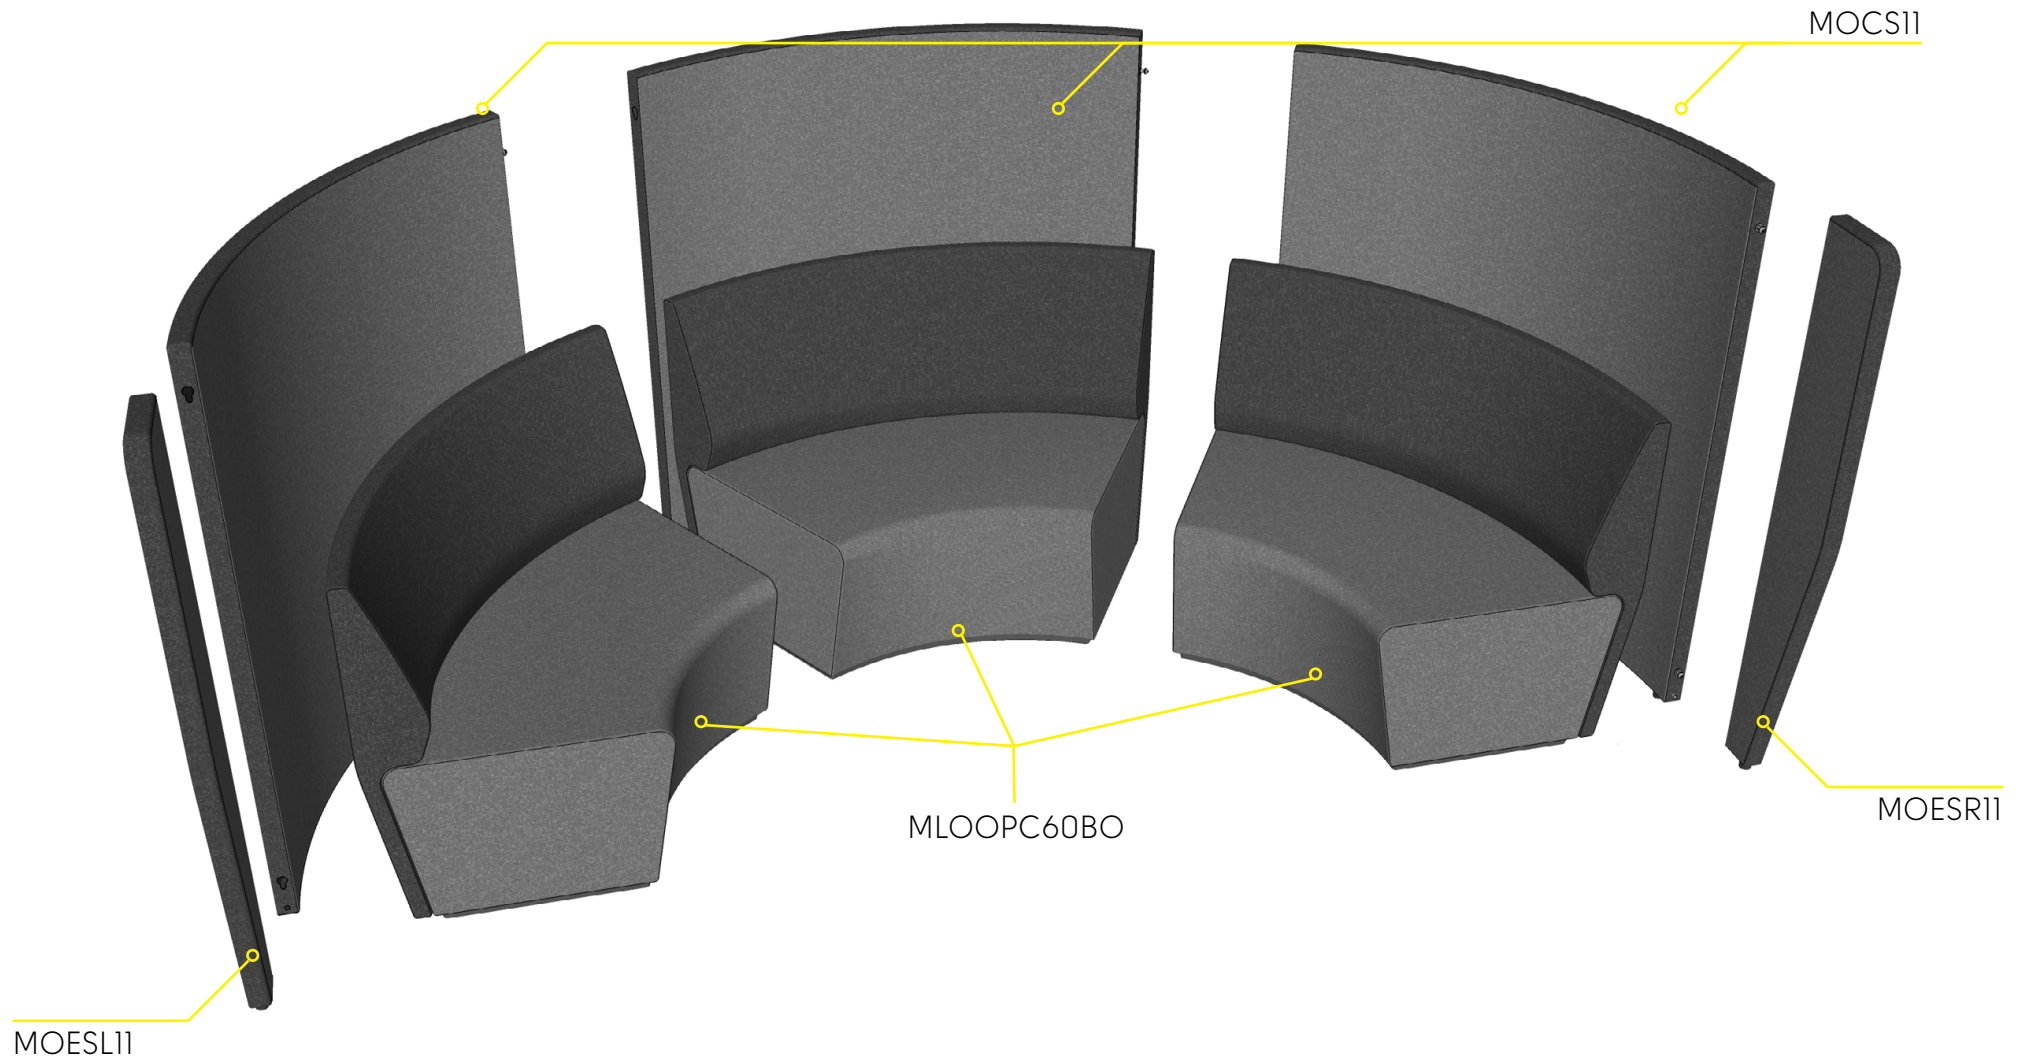

Arc 3 Assembly Instructions

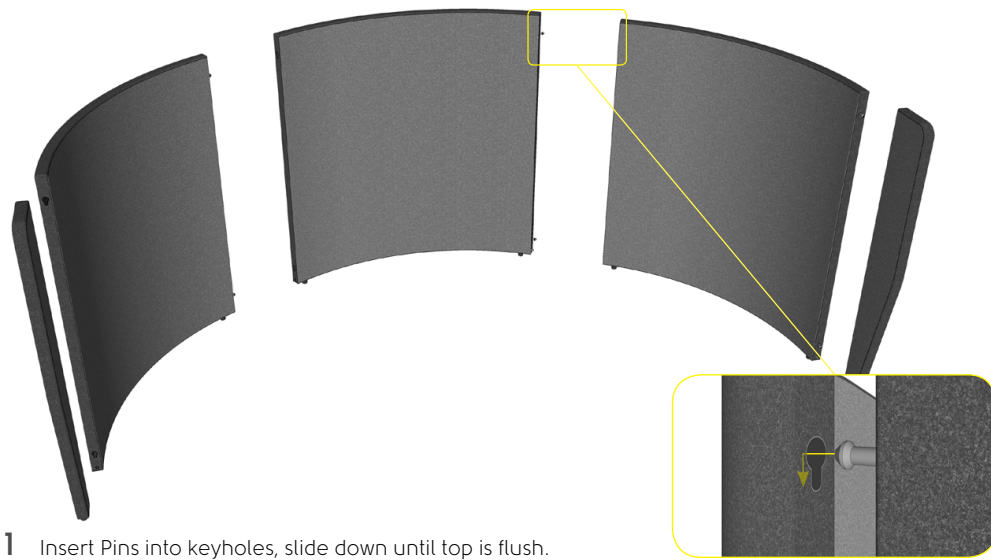

1 Insert Pins into keyholes, slide down until top is flush.

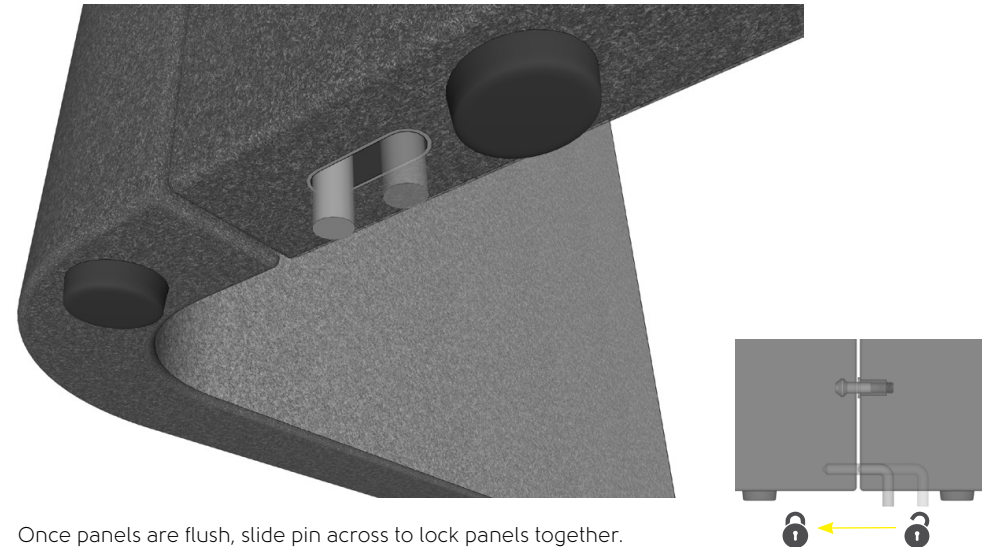

2 Once panels are flush, slide pin across to lock panels together.

3 Place loop Ottomans as shown in this diagram from the inside outwards.

