



---

# Mochi Assembly Guide

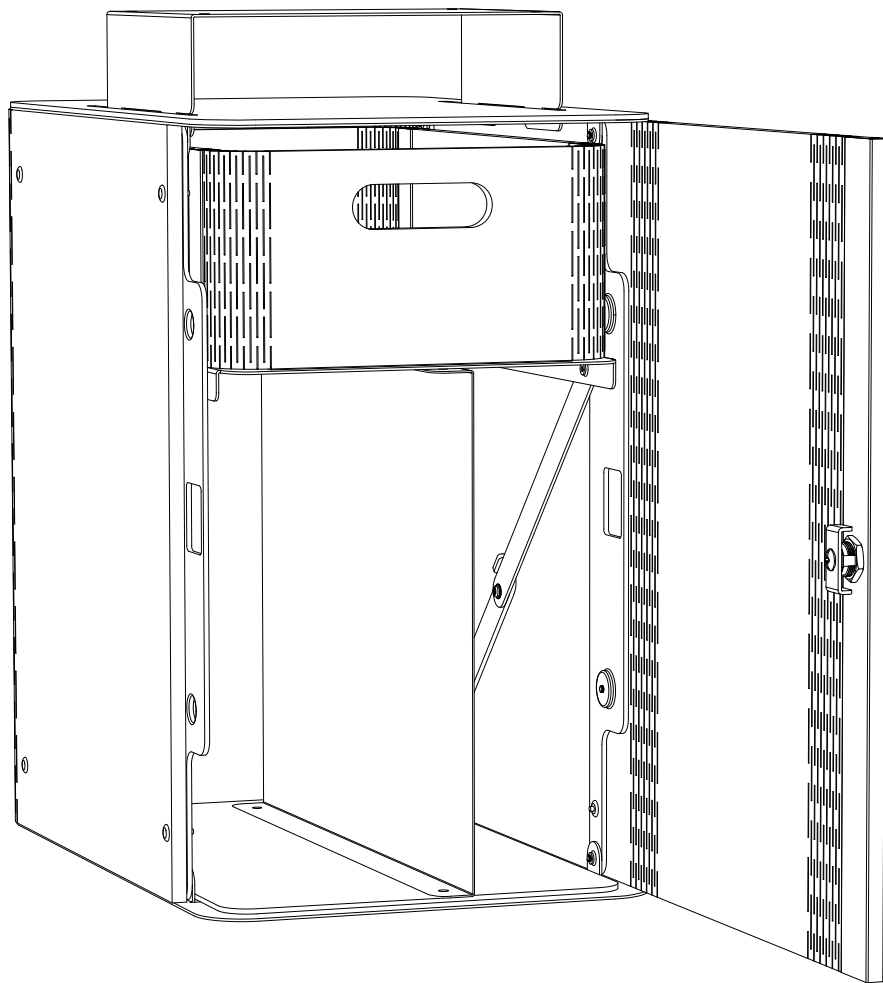


Components .....	1
Handle Installation .....	2
Lock Installation .....	3-4
Foldable Frame Deployment .....	5
PET Wrap Installation (Right Handed) .....	6-8
PET Wrap Installation (Left Handed) .....	9-11
Laptop Divider Installation .....	12
Drawer Installation .....	13
Hanging Bracket Installation .....	14-15

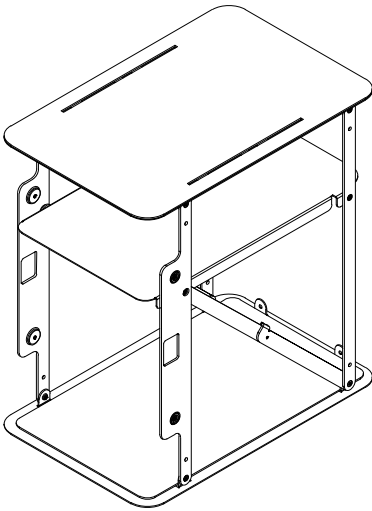


Foldable Frame



Handle

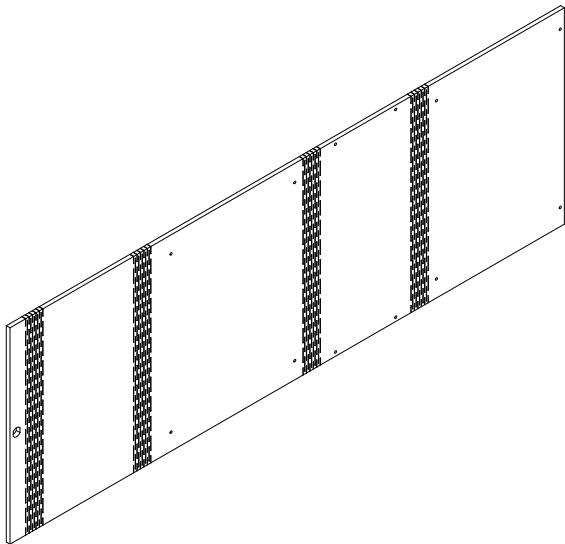


PET Wrap

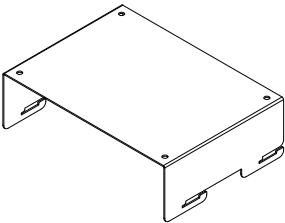

Hanging Bracket




Tapping Screw




x 12

PET Fastener (Male)




x 12


PET Fastener (Female)

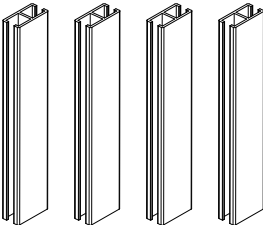

H-Bracket

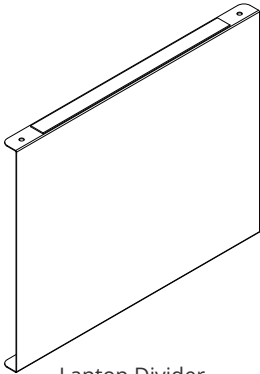


Laptop Divider

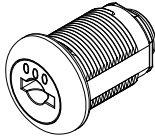

Door Lock




Lock Nut

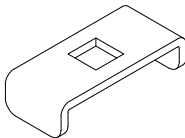


Lock Latch




Lock Screw

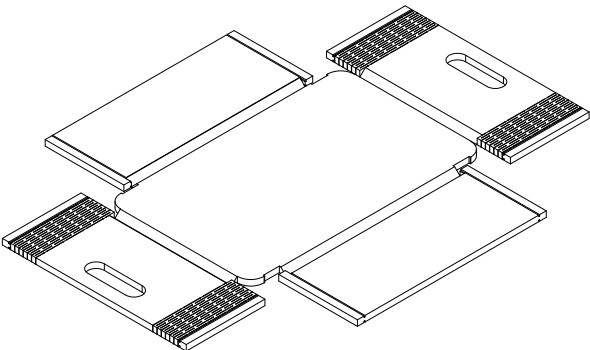


PET Drawer

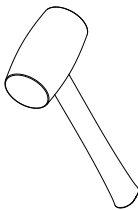

Rubber Mallet

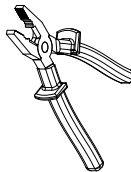


Pliers

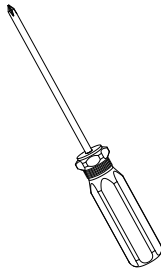


Philips Head  
Screwdriver

Step 1: Slot in Handle at the edge of PET Wrap as shown

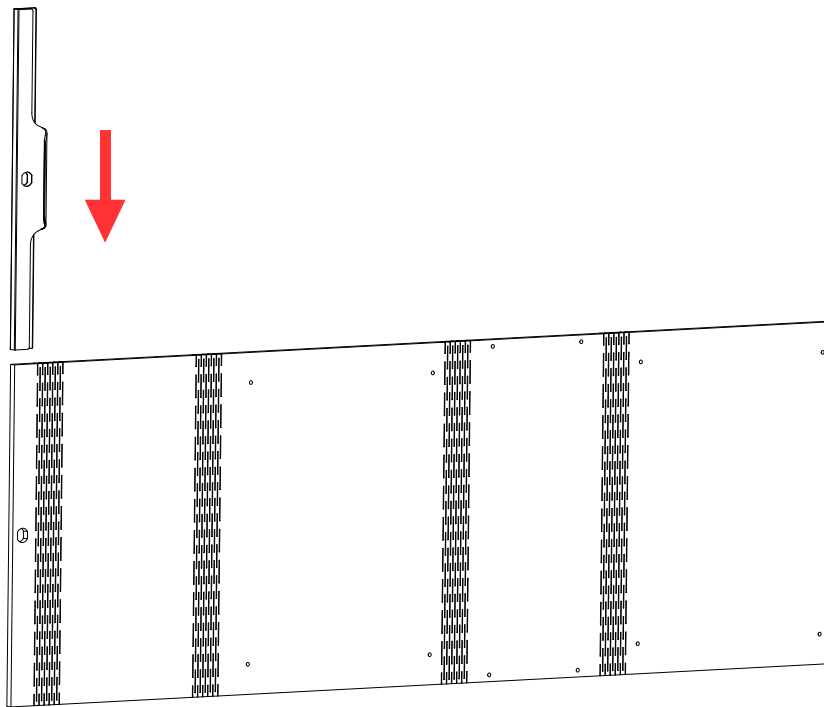


Step 2: Align key hole on Handle and PET Wrap

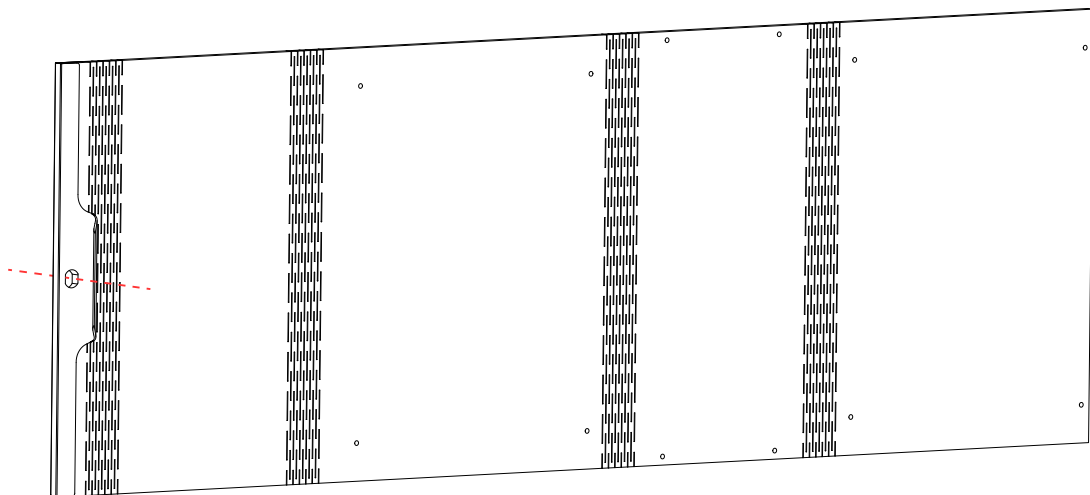





Step 3: Insert the lock through the lock hole and fasten it with the Lock Nut.

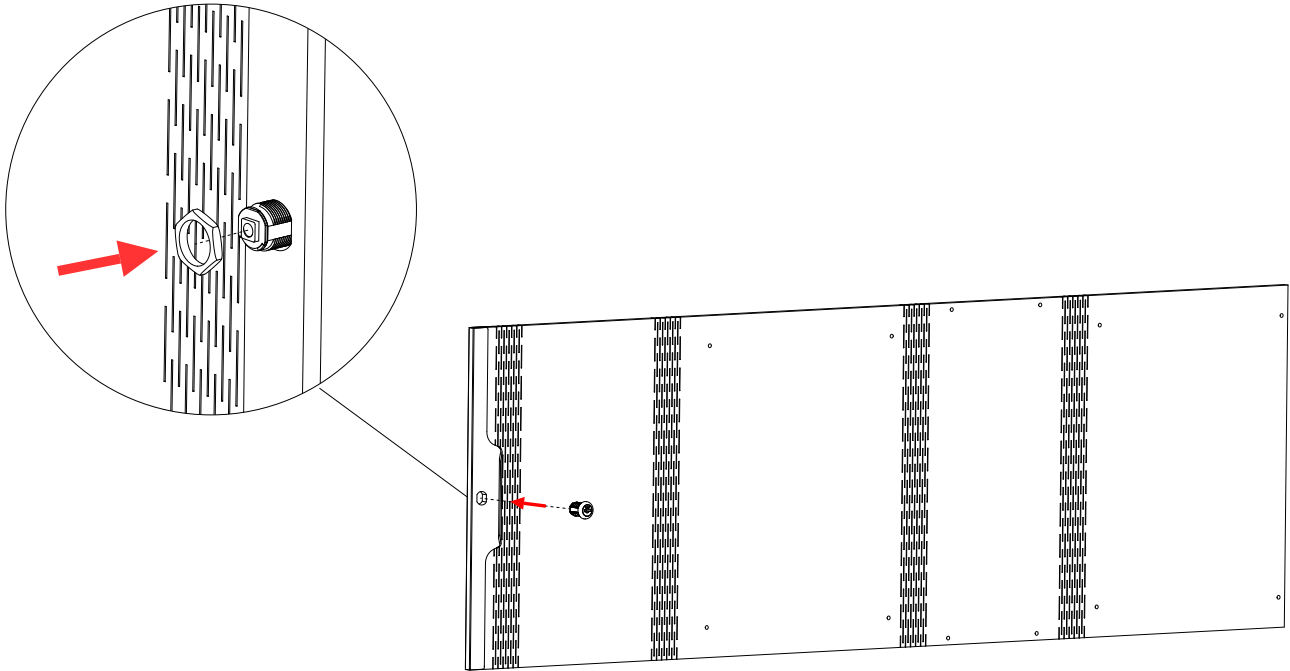


Step 4: Tighten the Lock Nut using a plier or spanner.

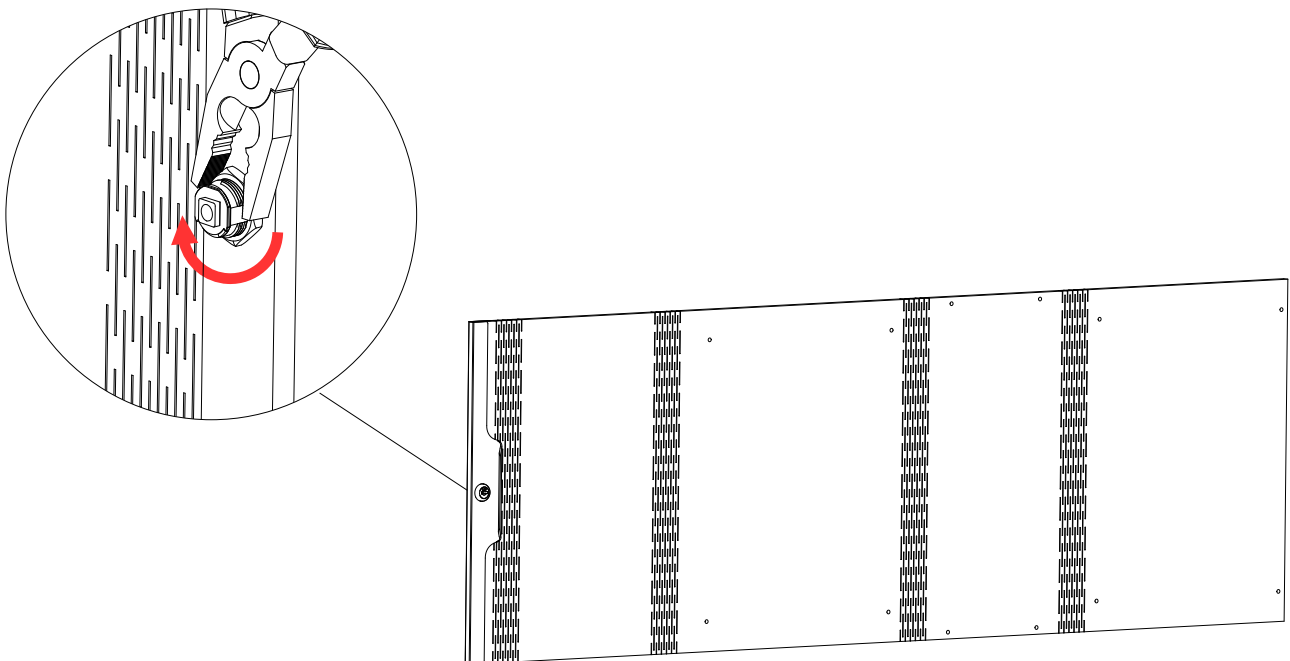


Step 5: Place Lock Latch in position and fasten with Lock Screw.

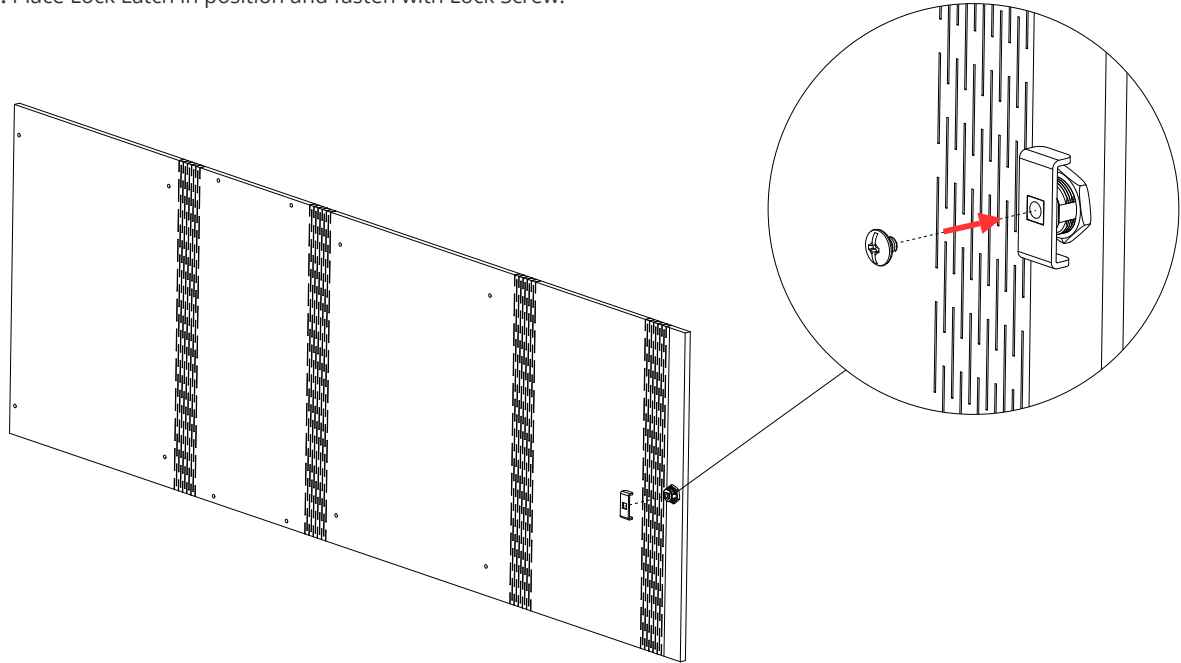


Step 6: Tighten Lock Screw with screwdriver

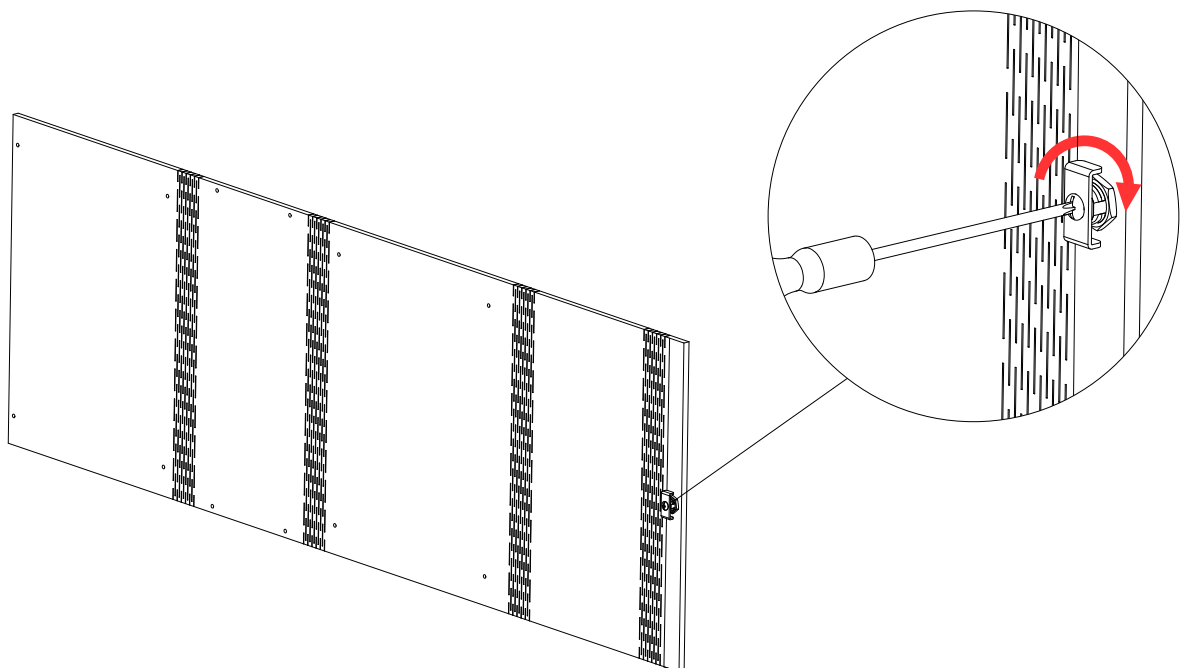


Step 1: Deploy Foldable Frame as shown.

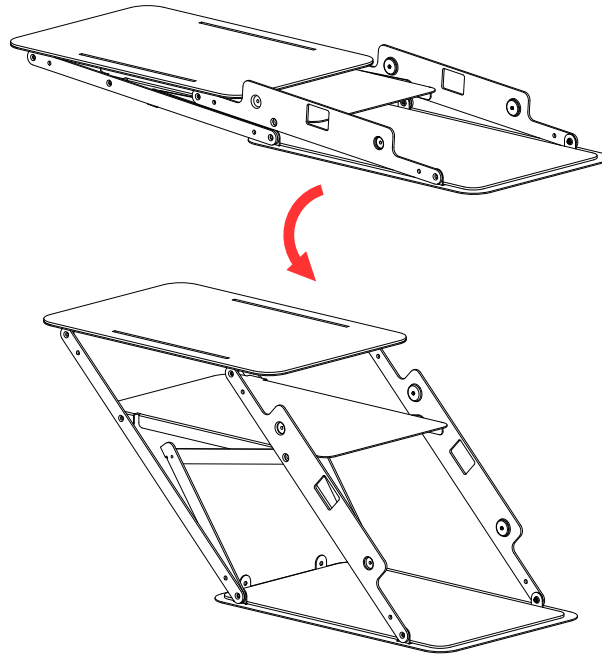


Step 2: Ensure that the diagonal linkage is straight.

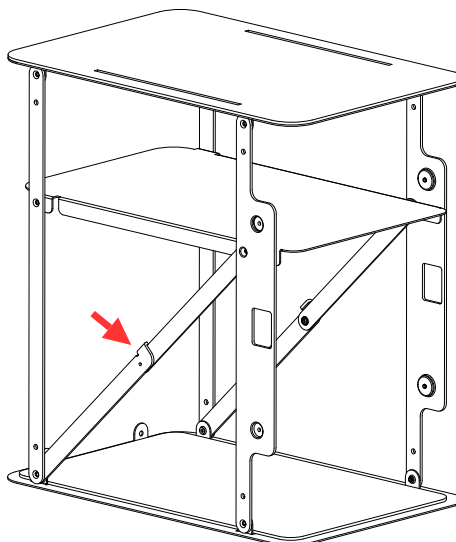


**Step 3:** For right handed door orientation, place PET Wrap around the Foldable Frame as shown.

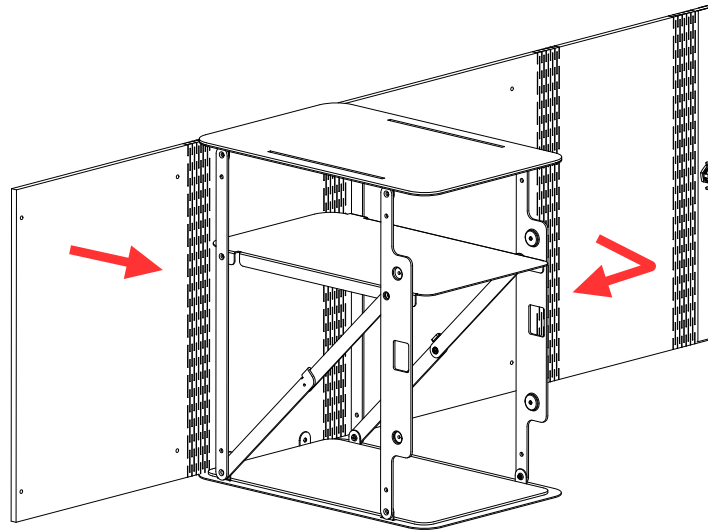


**Step 4:** Place PET Wrap around the Foldable Frame as shown.

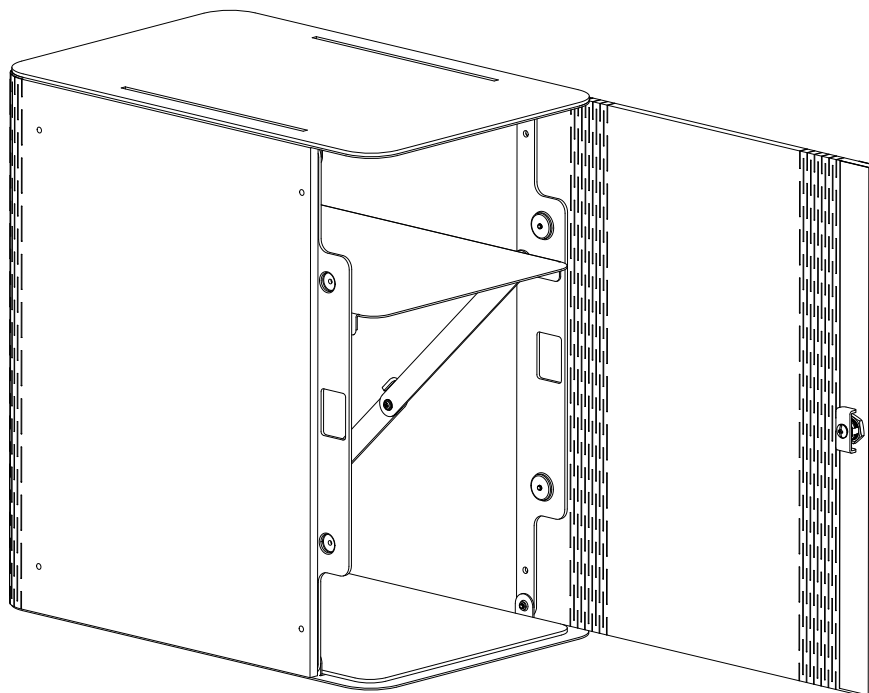


**Step 5:** Secure the PET Wrap by aligning the PET Fasteners as shown. Ensure that the Female PET Fastener is inside and Male PET Fastener is outside.

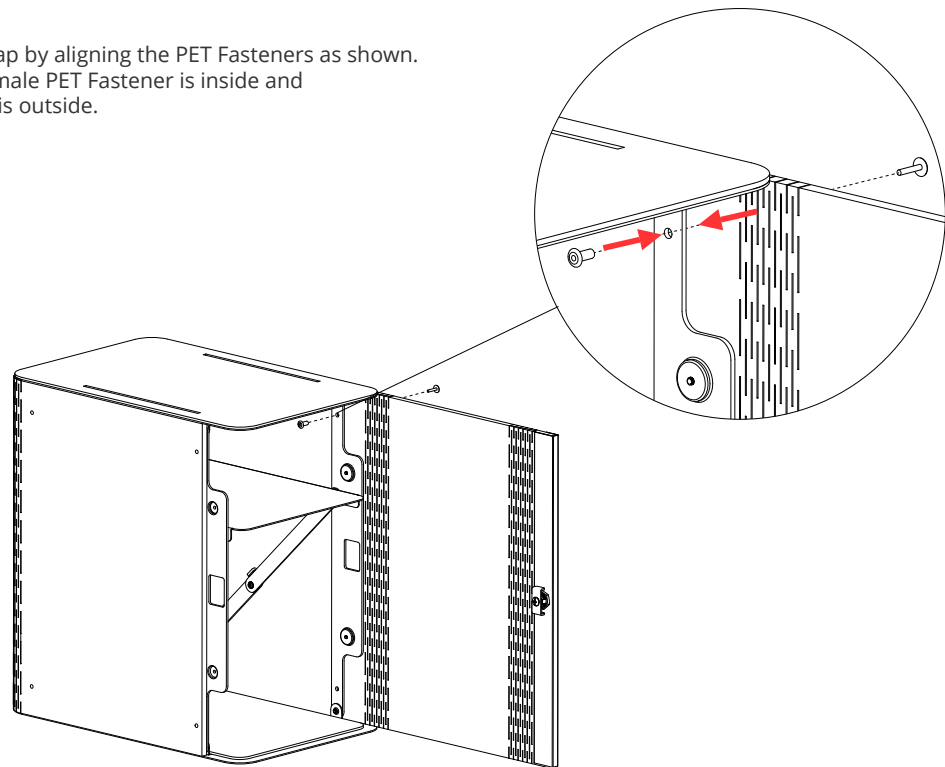


**Step 6:** Use a rubber mallet to tap on the PET Fastener to ensure that it is properly secured.

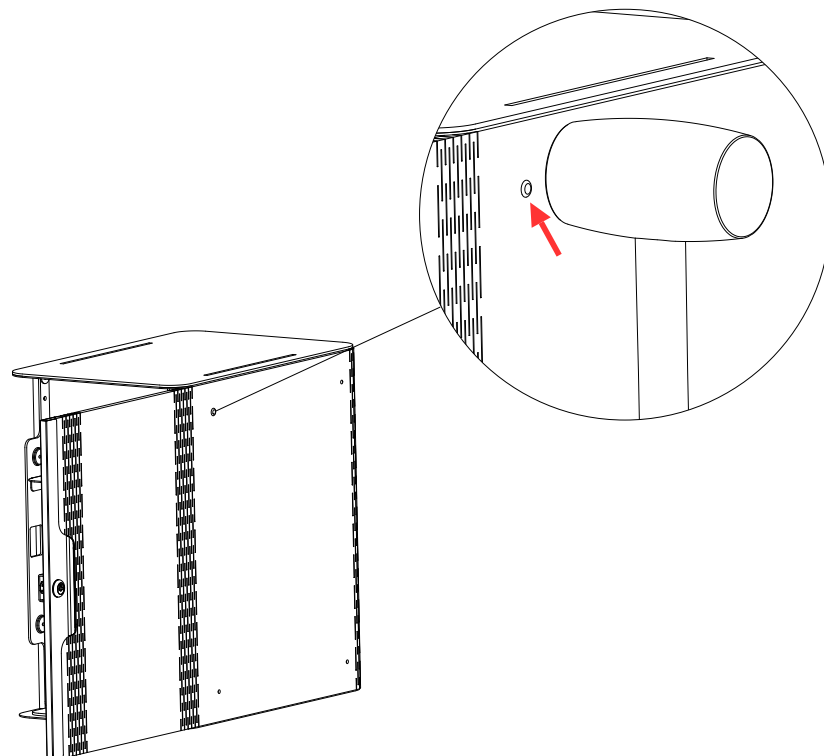


Step 7: There are a total of 12 PET Fasteners to apply on the PET Wrap. Location as indicated below.

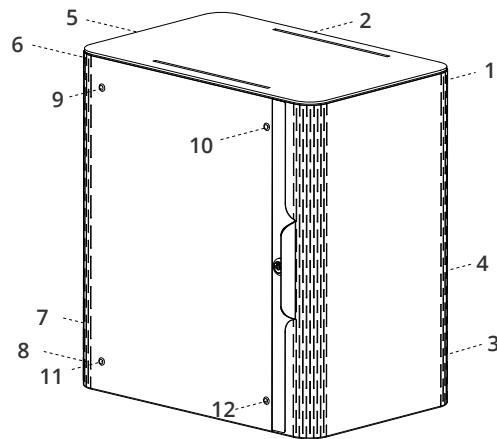


Step 8: Complete

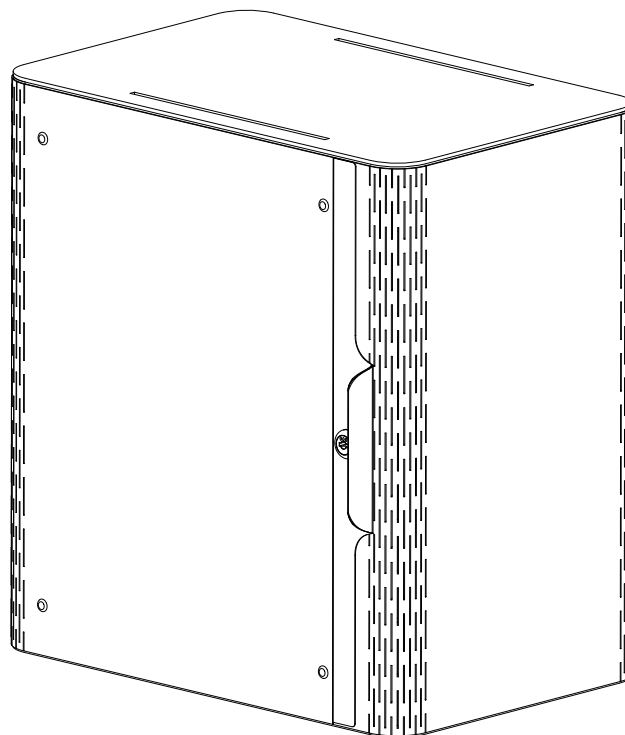


**Step 9:** For left handed door orientation, place PET Wrap around the Foldable Frame as shown.

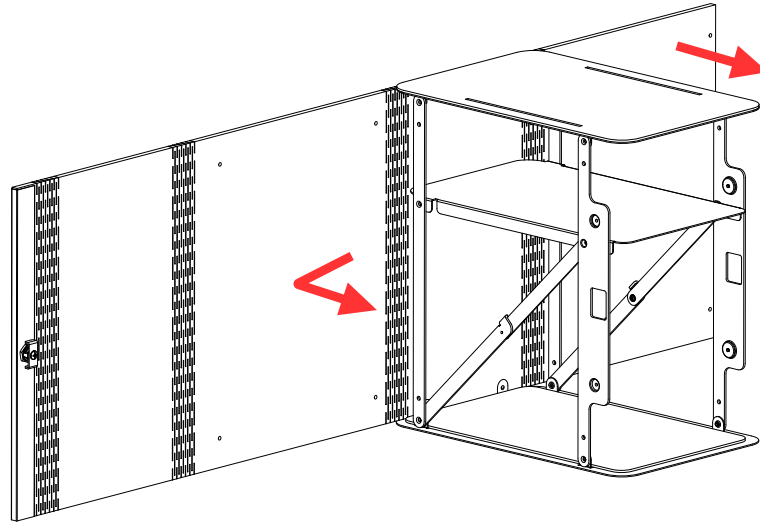


**Step 10:** Place PET Wrap around the Foldable Frame as shown.

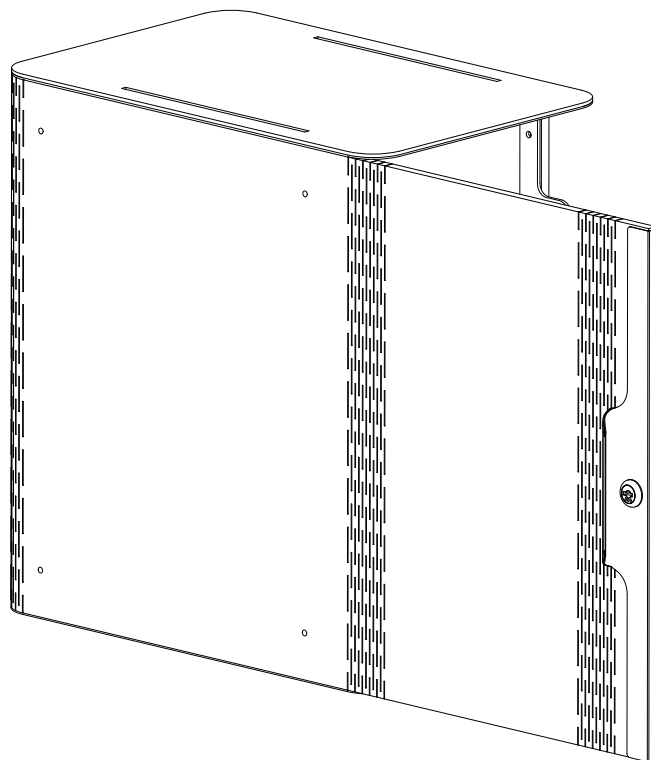

**Step 11:** Secure the PET Wrap by aligning the PET Fasteners as shown. Ensure that the Female PET Fastener is inside and Male PET Fastener is outside.

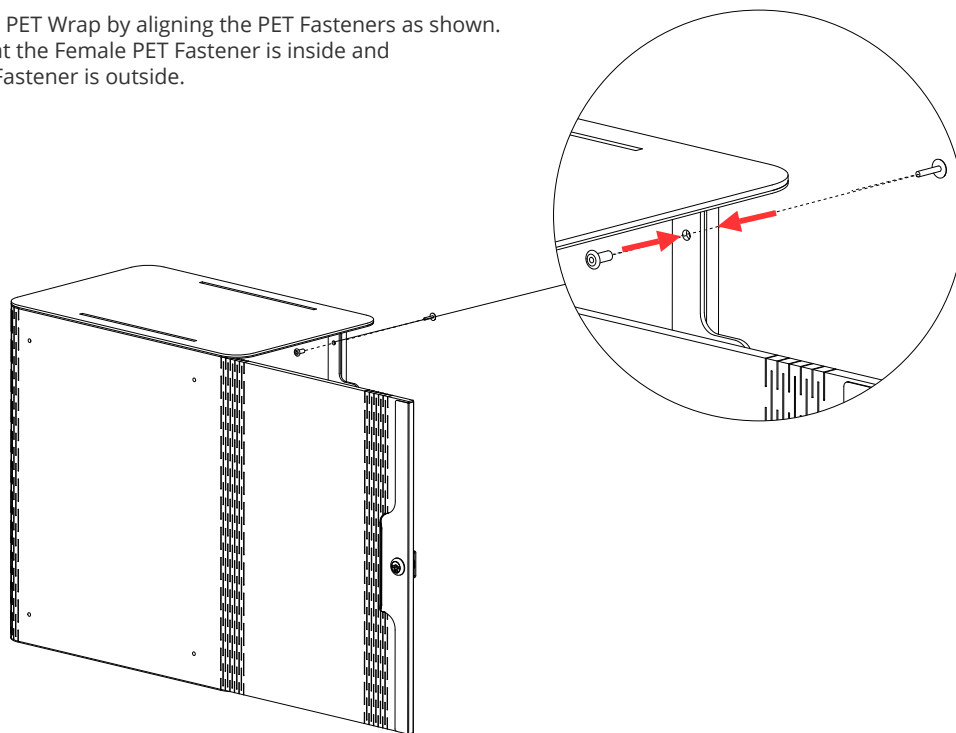


**Step 12:** Use a rubber mallet to tap on the PET Fastener to ensure that it is properly secured.

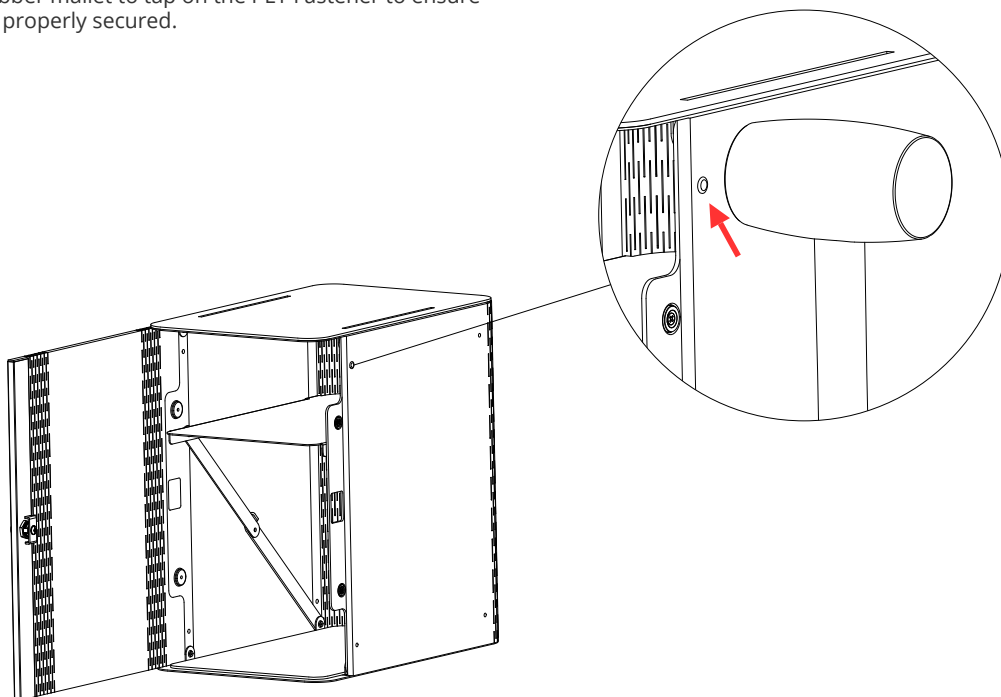





Step 13: There are a total of 12 PET Fasteners to apply on the PET Wrap. Location as indicated below

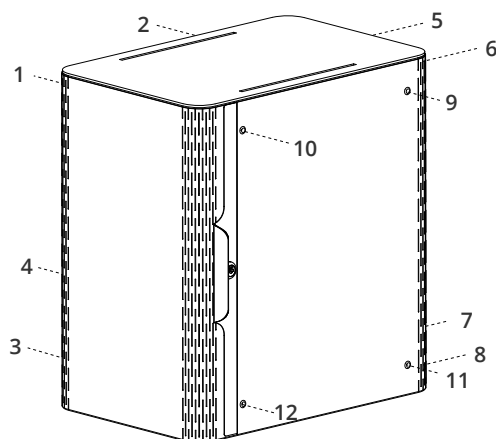


Step 14: Complete

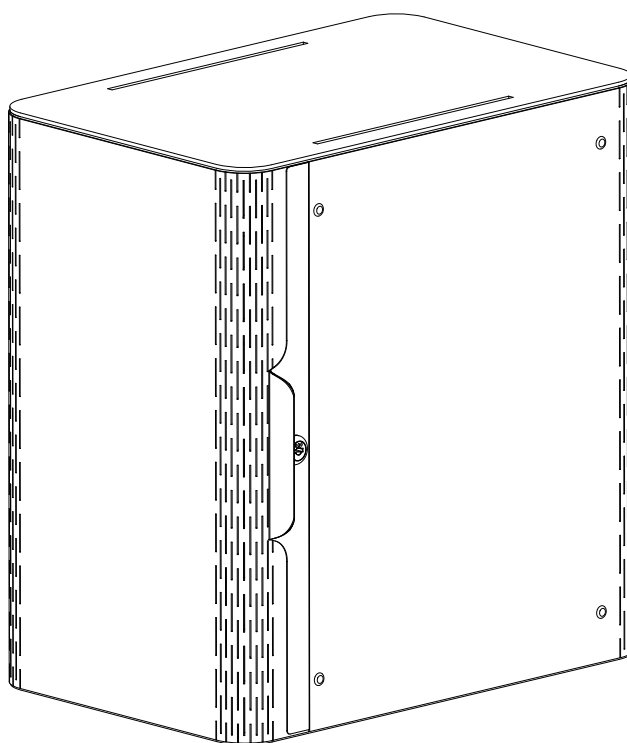


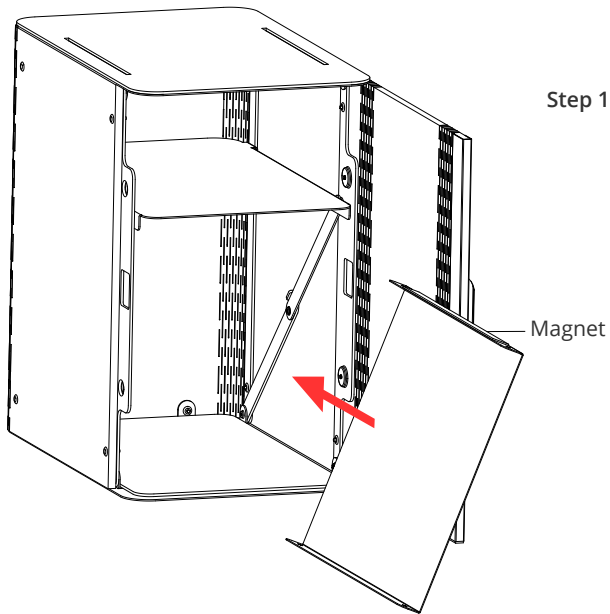

Step 1: Slide in the Laptop Divider at an angle with the magnet facing up.

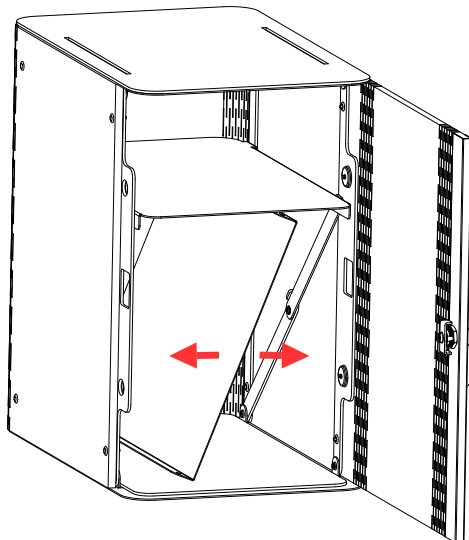


Step 2: Adjust placement of Laptop Divider to preference.

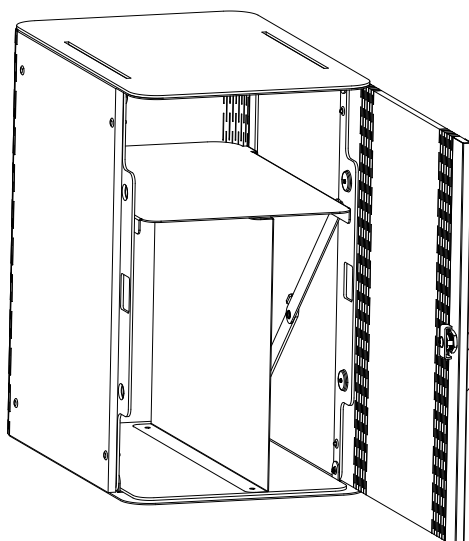


Step 3: Straighten Laptop Divider to upright position. Allow the tight fitting to secure the location of the Laptop Divider.


Step 1: Fold PET Drawer sides upright.

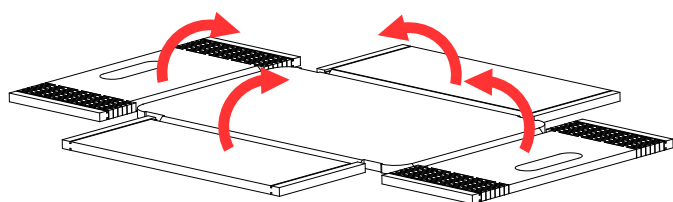


Step 2: Bend each corner and insert H-Bracket to fasten the corners.

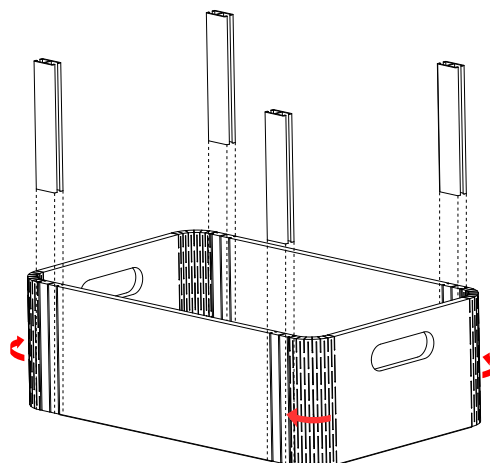


Step 3: Repeat on all 4 corners.

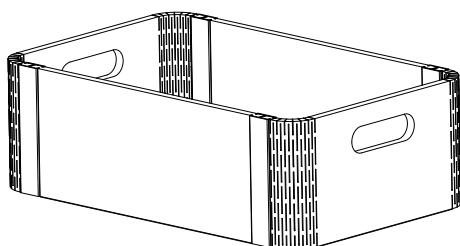


Step 4: Slide in PET Drawer to upper shelf.

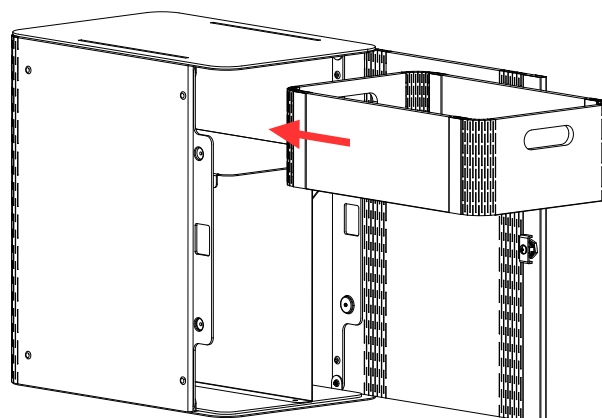


Step 1: Place Hanging Bracket 100mm from front edge of worktop.

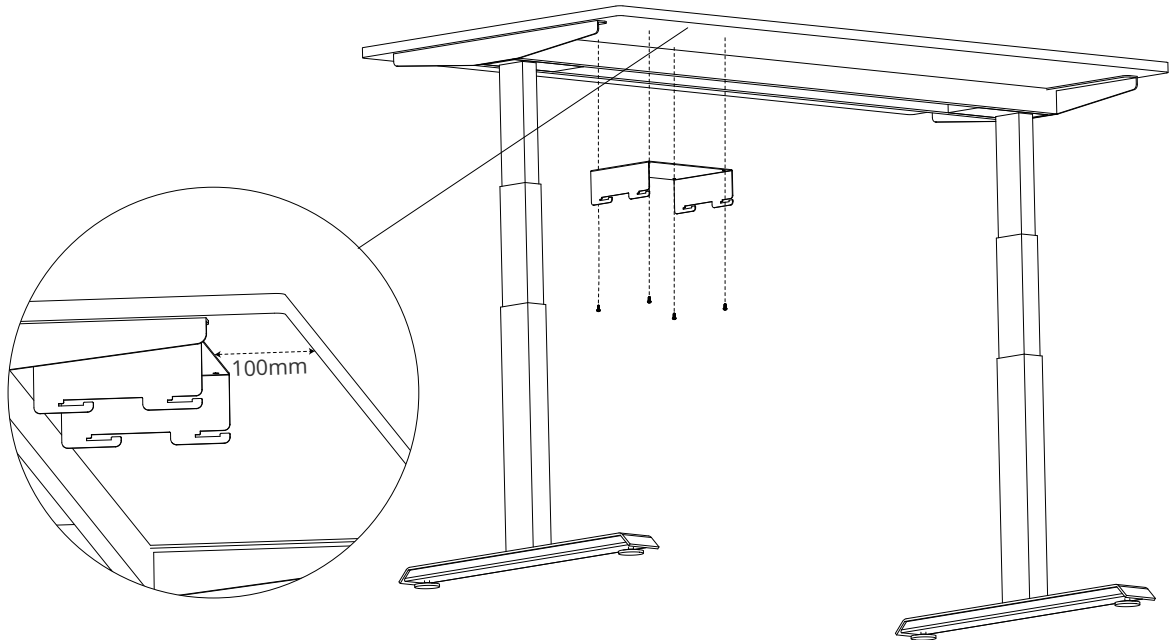


Step 2: Secure Hanging Bracket by screwing in 4 tapping screws.

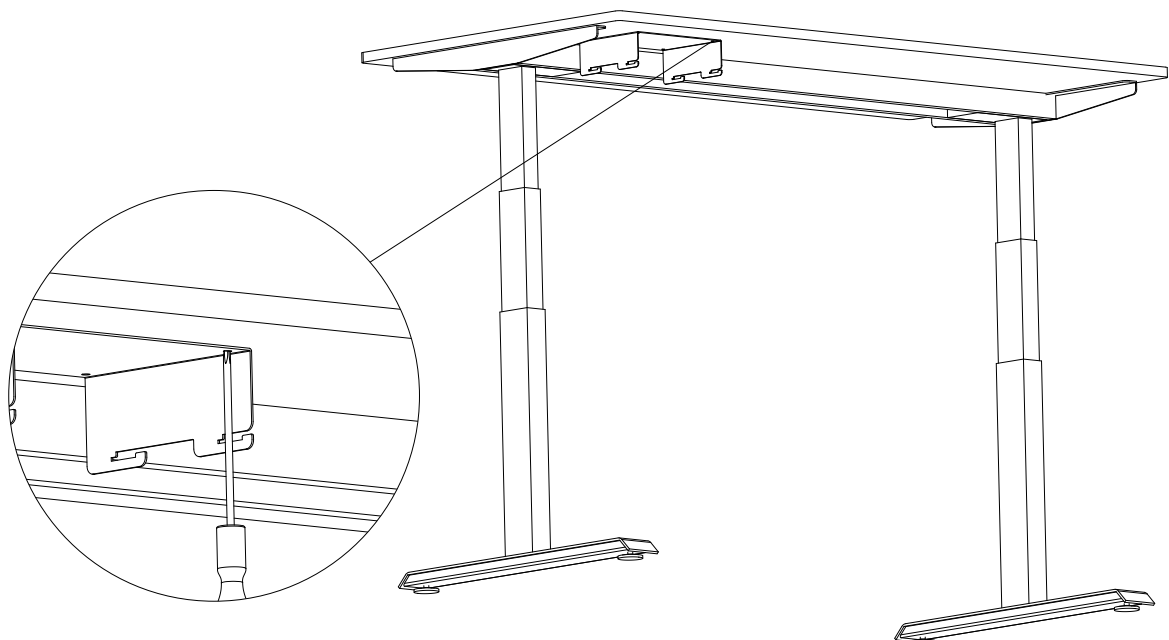


Step 3: Lift storage to Hanging Bracket and insert hook through opening as shown.

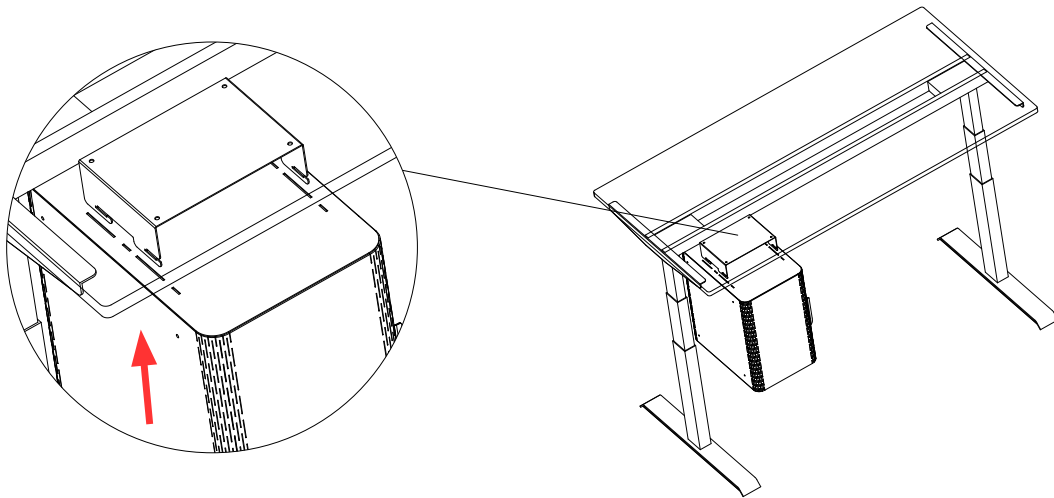

Step 4: Push storage towards the back to allow storage to be securely hooked.

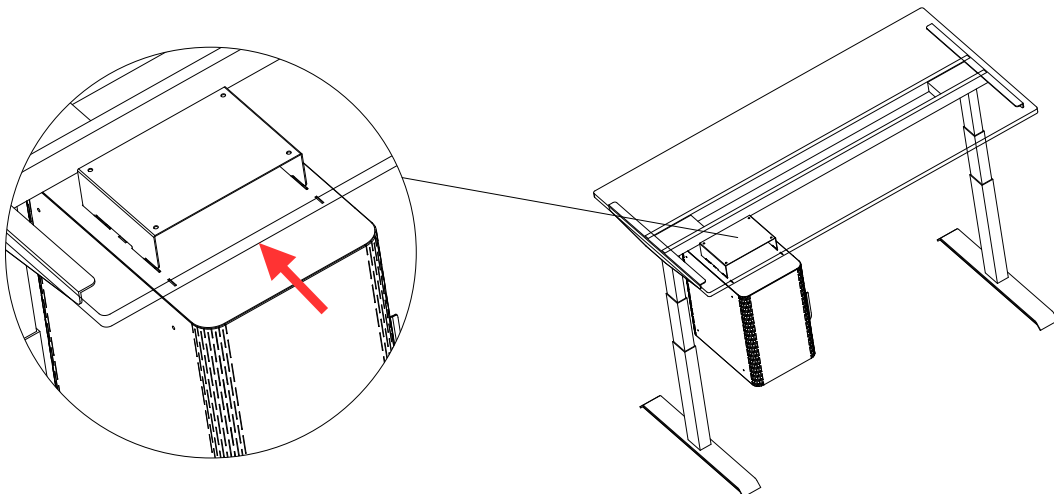

Step 5: Storage is in secured position as shown.

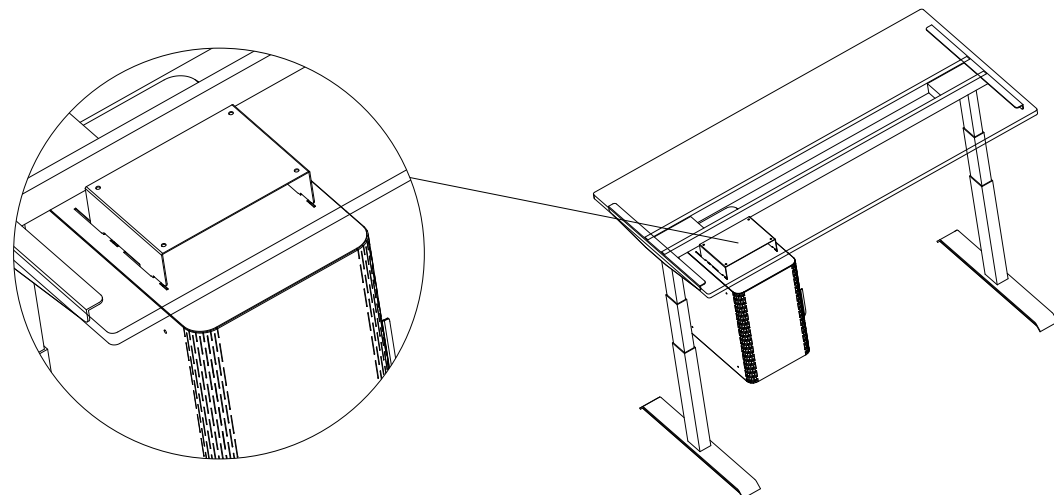

Please contact [info@workspace48.com](mailto:info@workspace48.com) if you are missing any parts, have difficulty with assembly, or have any product related questions.