


Array Dimmable Lamp


Assembly Guide

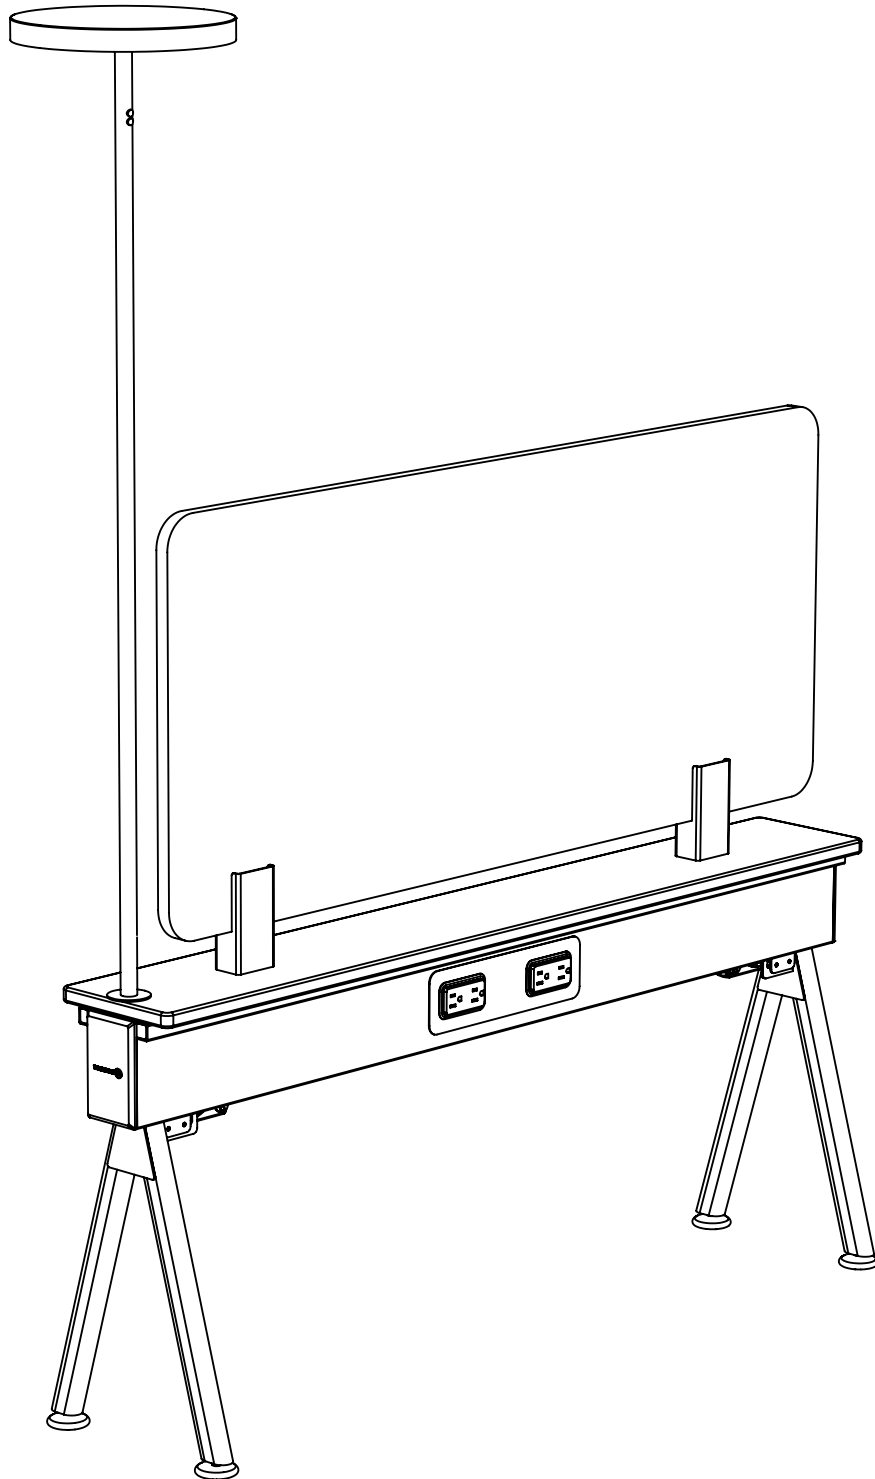


Array Dimmable Lamp Components	3
Assembling Dimmable Lamp	4-5
Installation on Linear Power Beam	6-10
Deployment on Linear 6 Pack	11
Installation on 3 way post	12-16
Installation on 4 way post	17-21
Dimmable Lamp User Controls	23

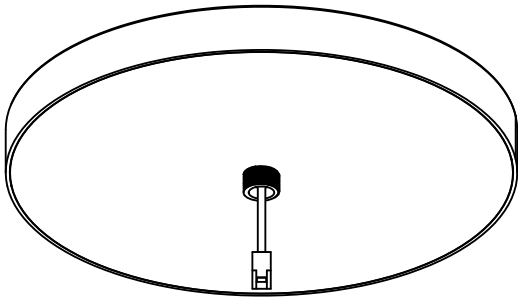


Lamp Shade

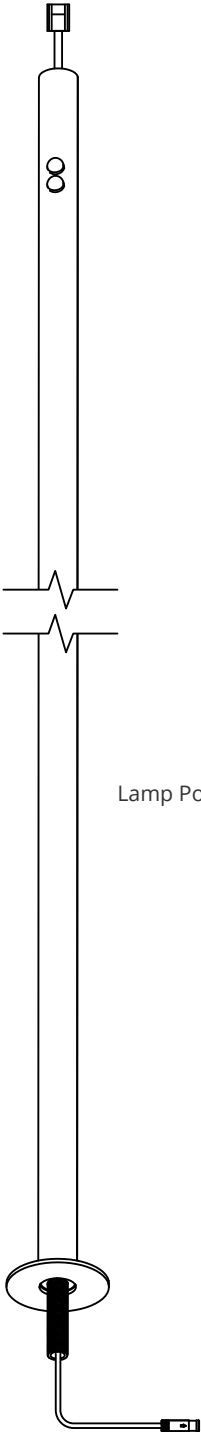

Lamp Pole

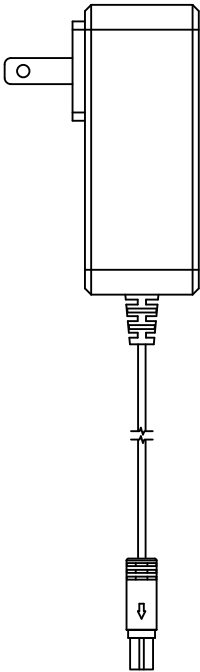


Adaptor

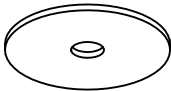


50mm Round Plate




M10 Butterfly Nut

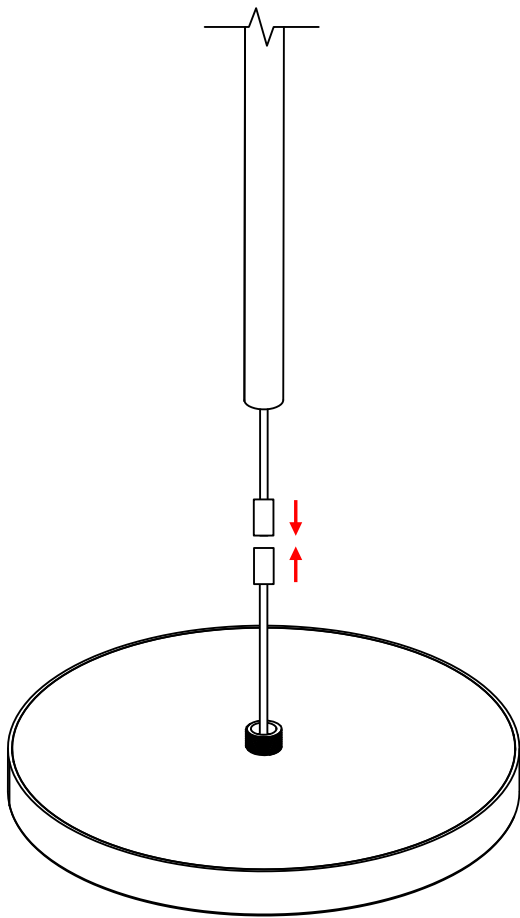


Step 1: Connect the plugs.

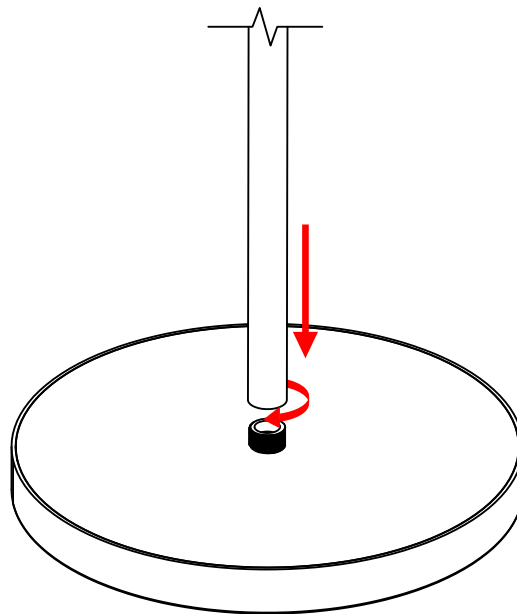


Step 2: Screw the Lamp Pole onto the lamp head by turning clockwise.

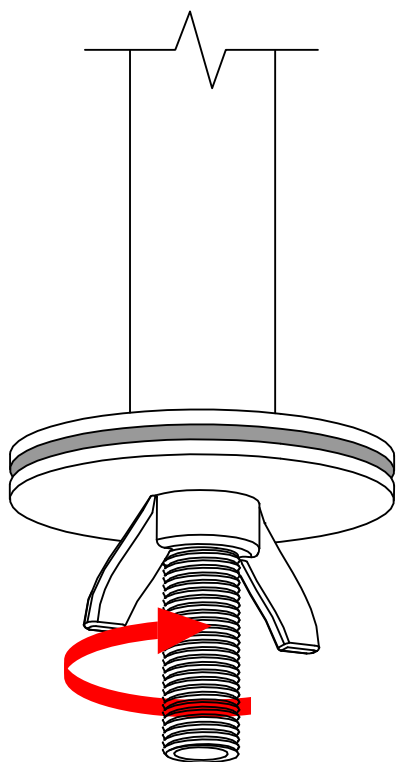


Step 3: Turn counterclockwise to remove the Butterfly Nut and 50mm Round Plate.

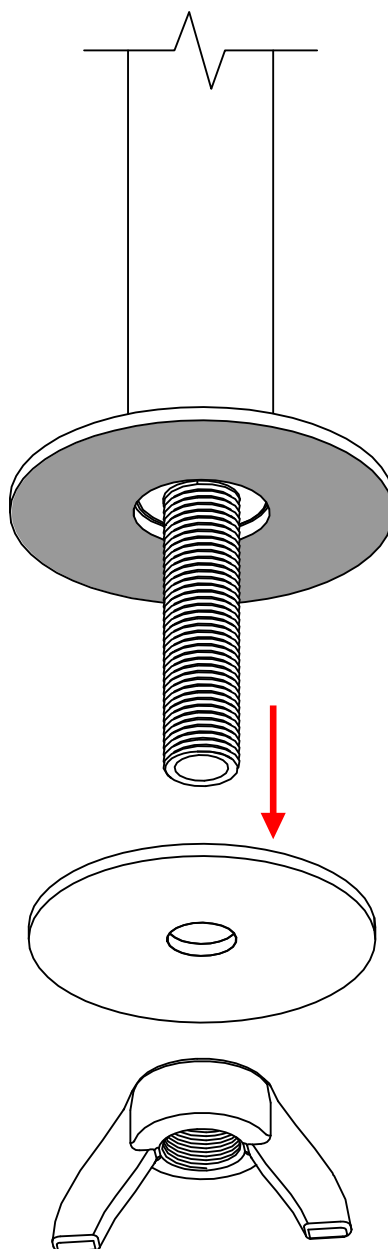


Installation to Linear Power Beam

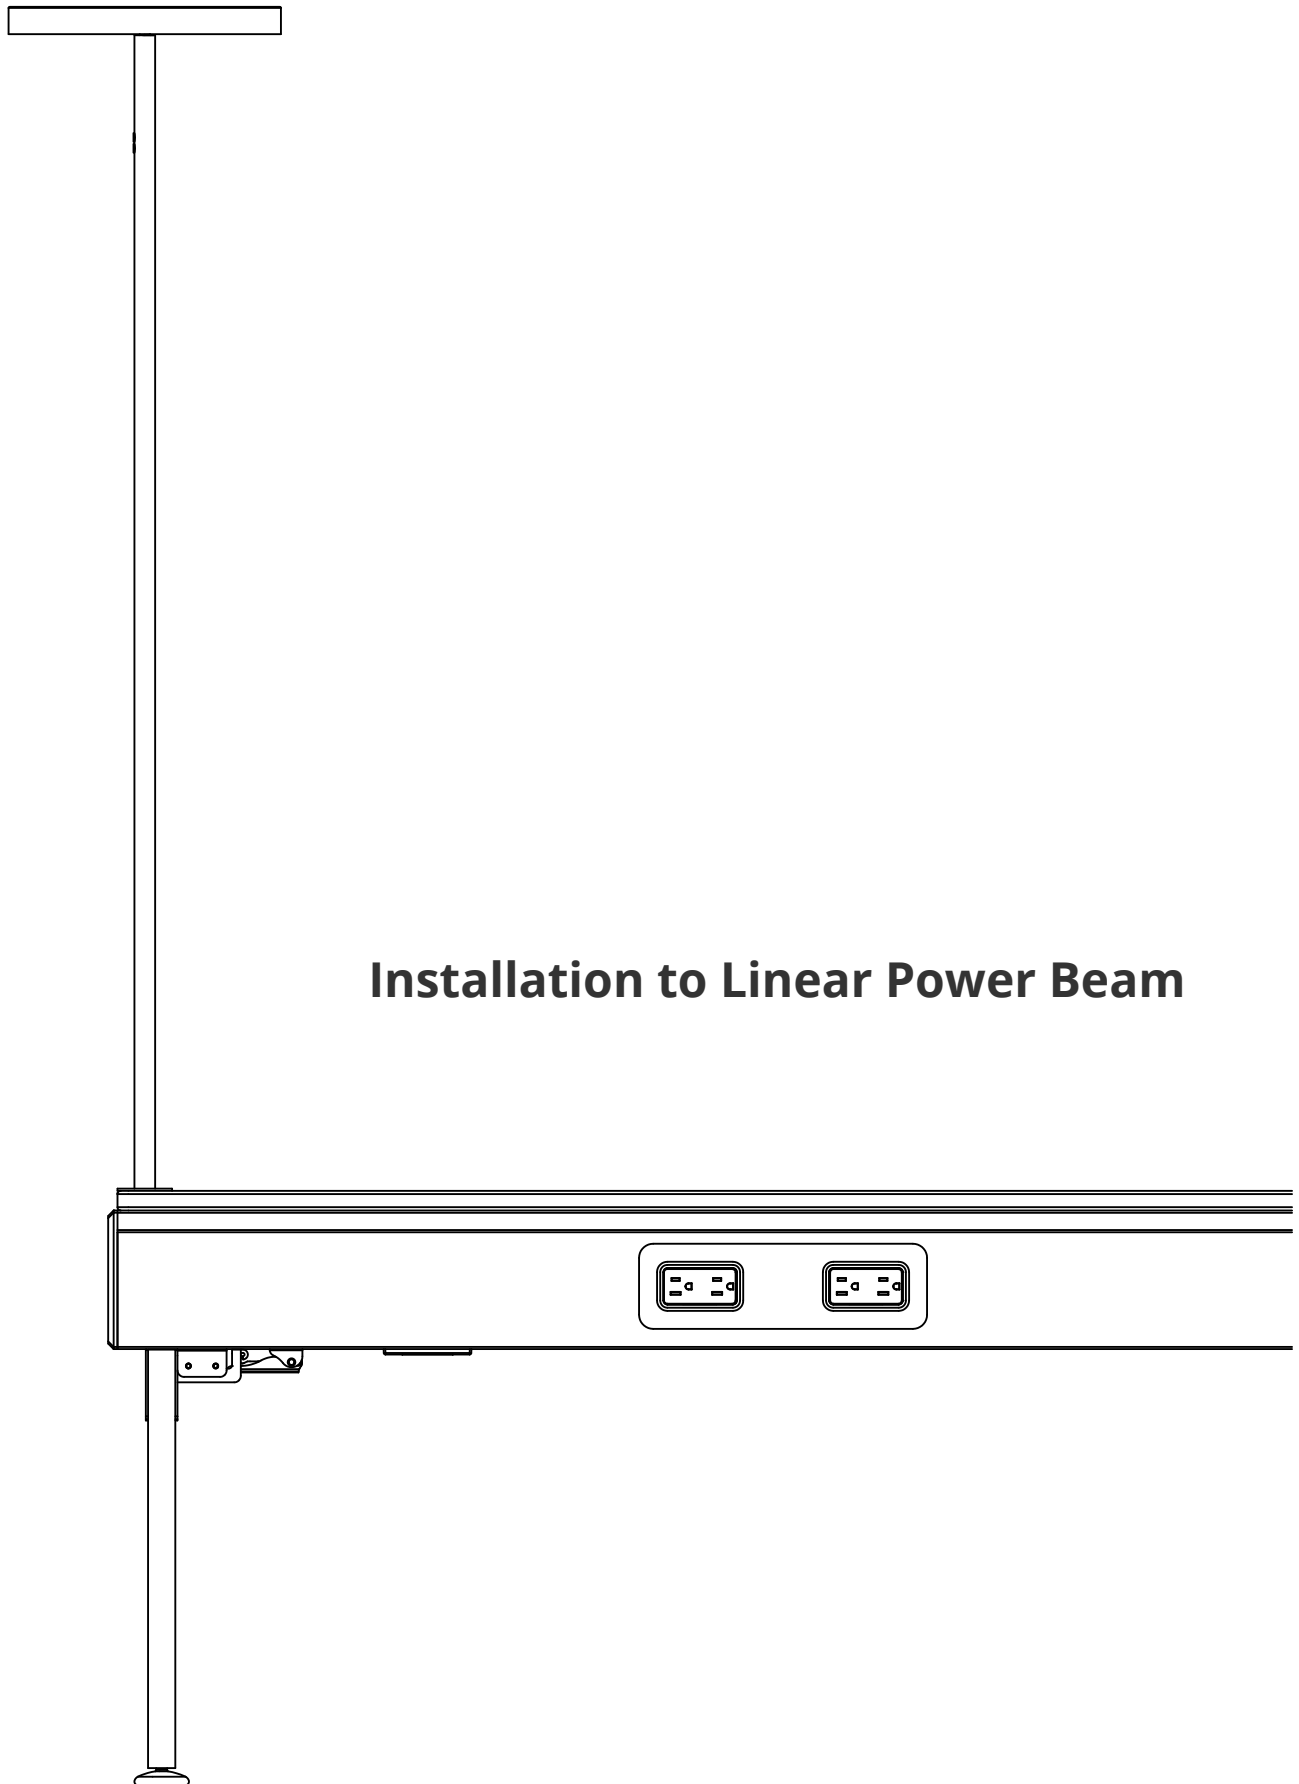


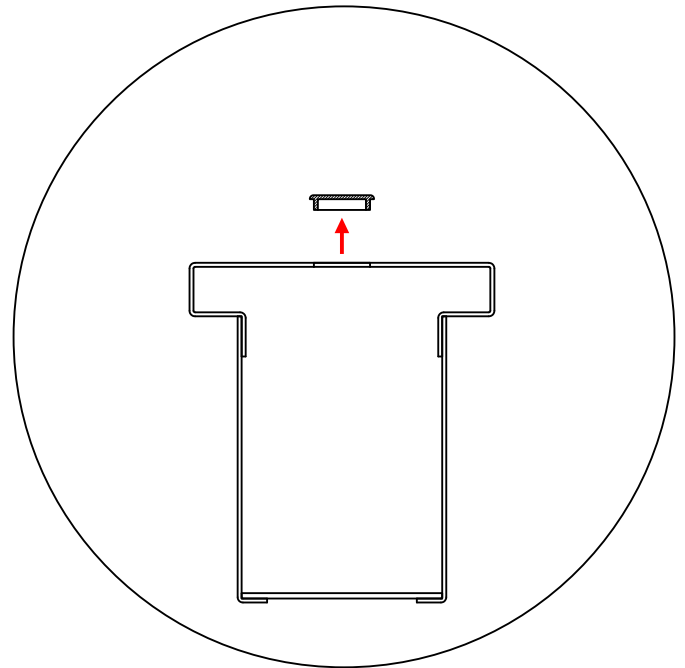


Same steps applies to Basic Power Beam

Step 4: Remove Round Hole Cover

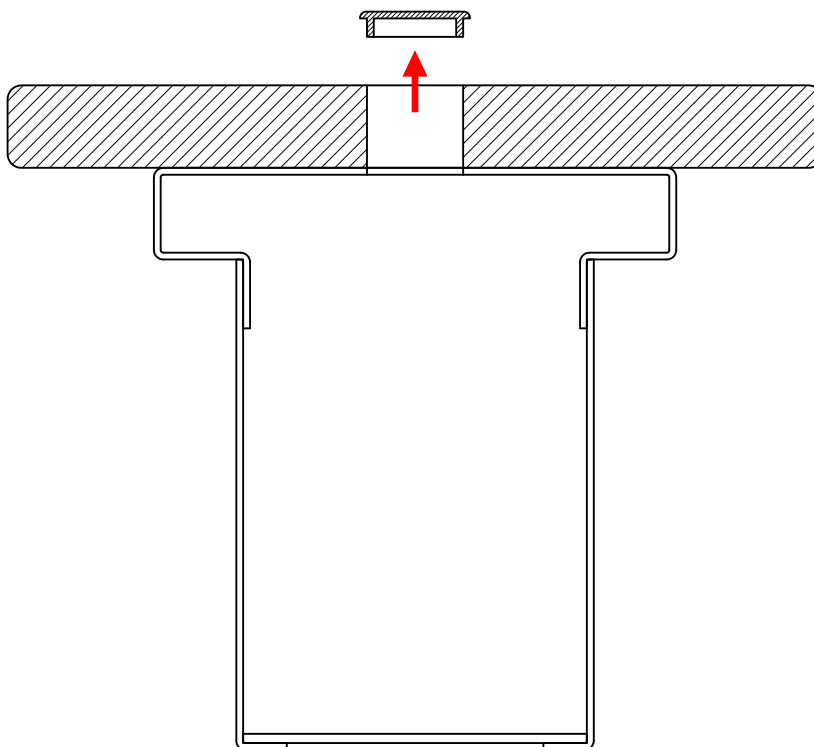


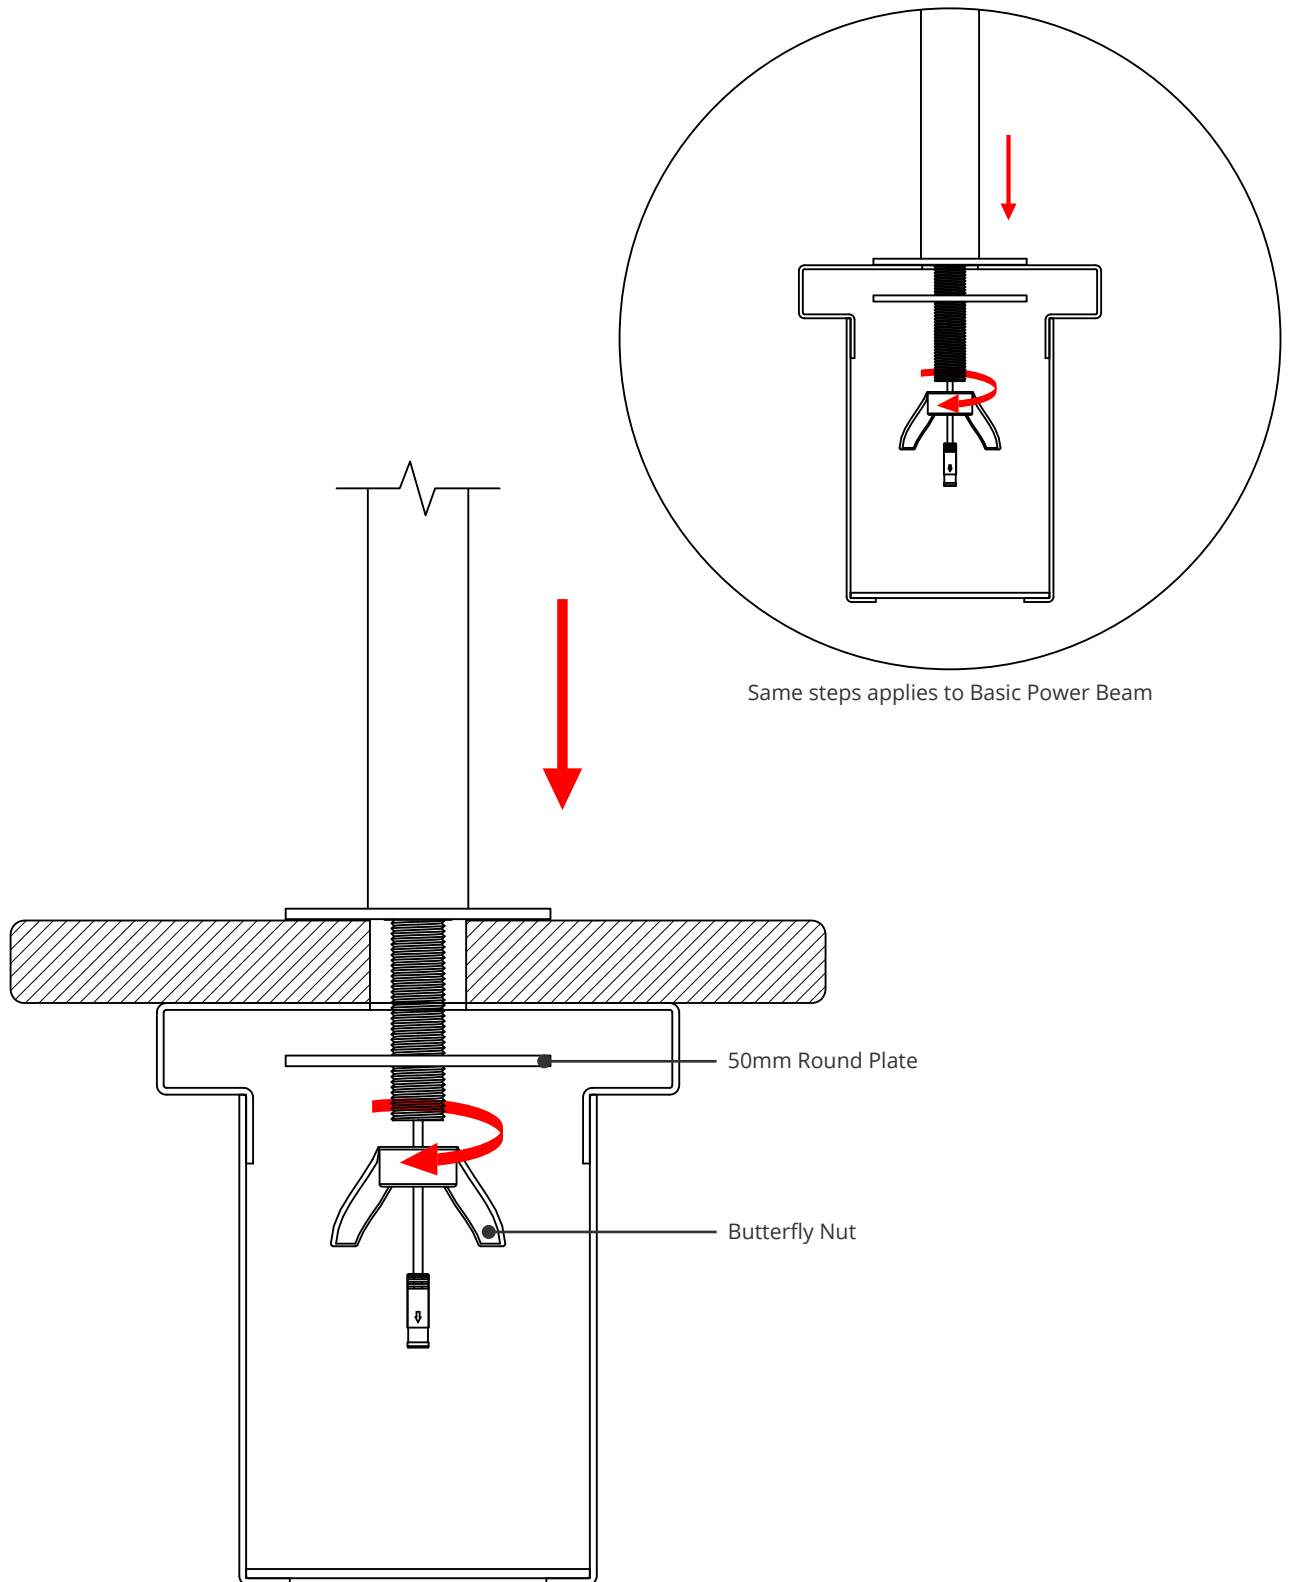


Step 5: Insert the threaded rod into the hole on the wooden work surface. Slide the 50mm Round Plate and the Butterfly Nut (Through the wire). Then tighten them onto the threaded rod by turning clockwise.

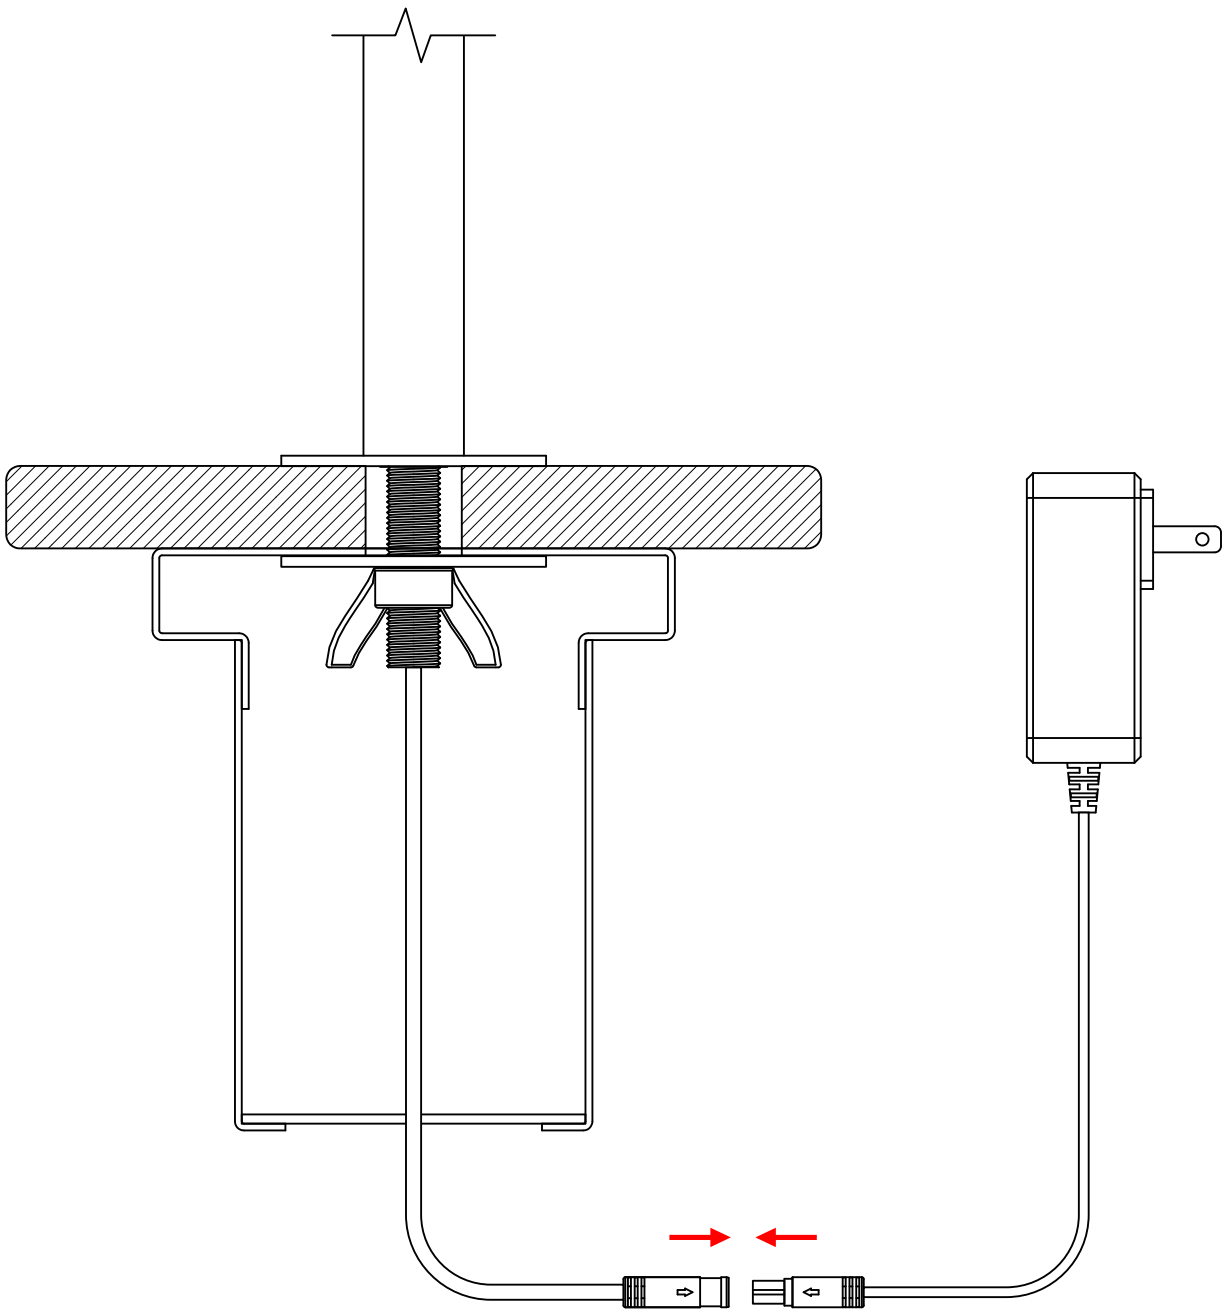


Step 6: Connect the Lamp Pole wire to Adaptor

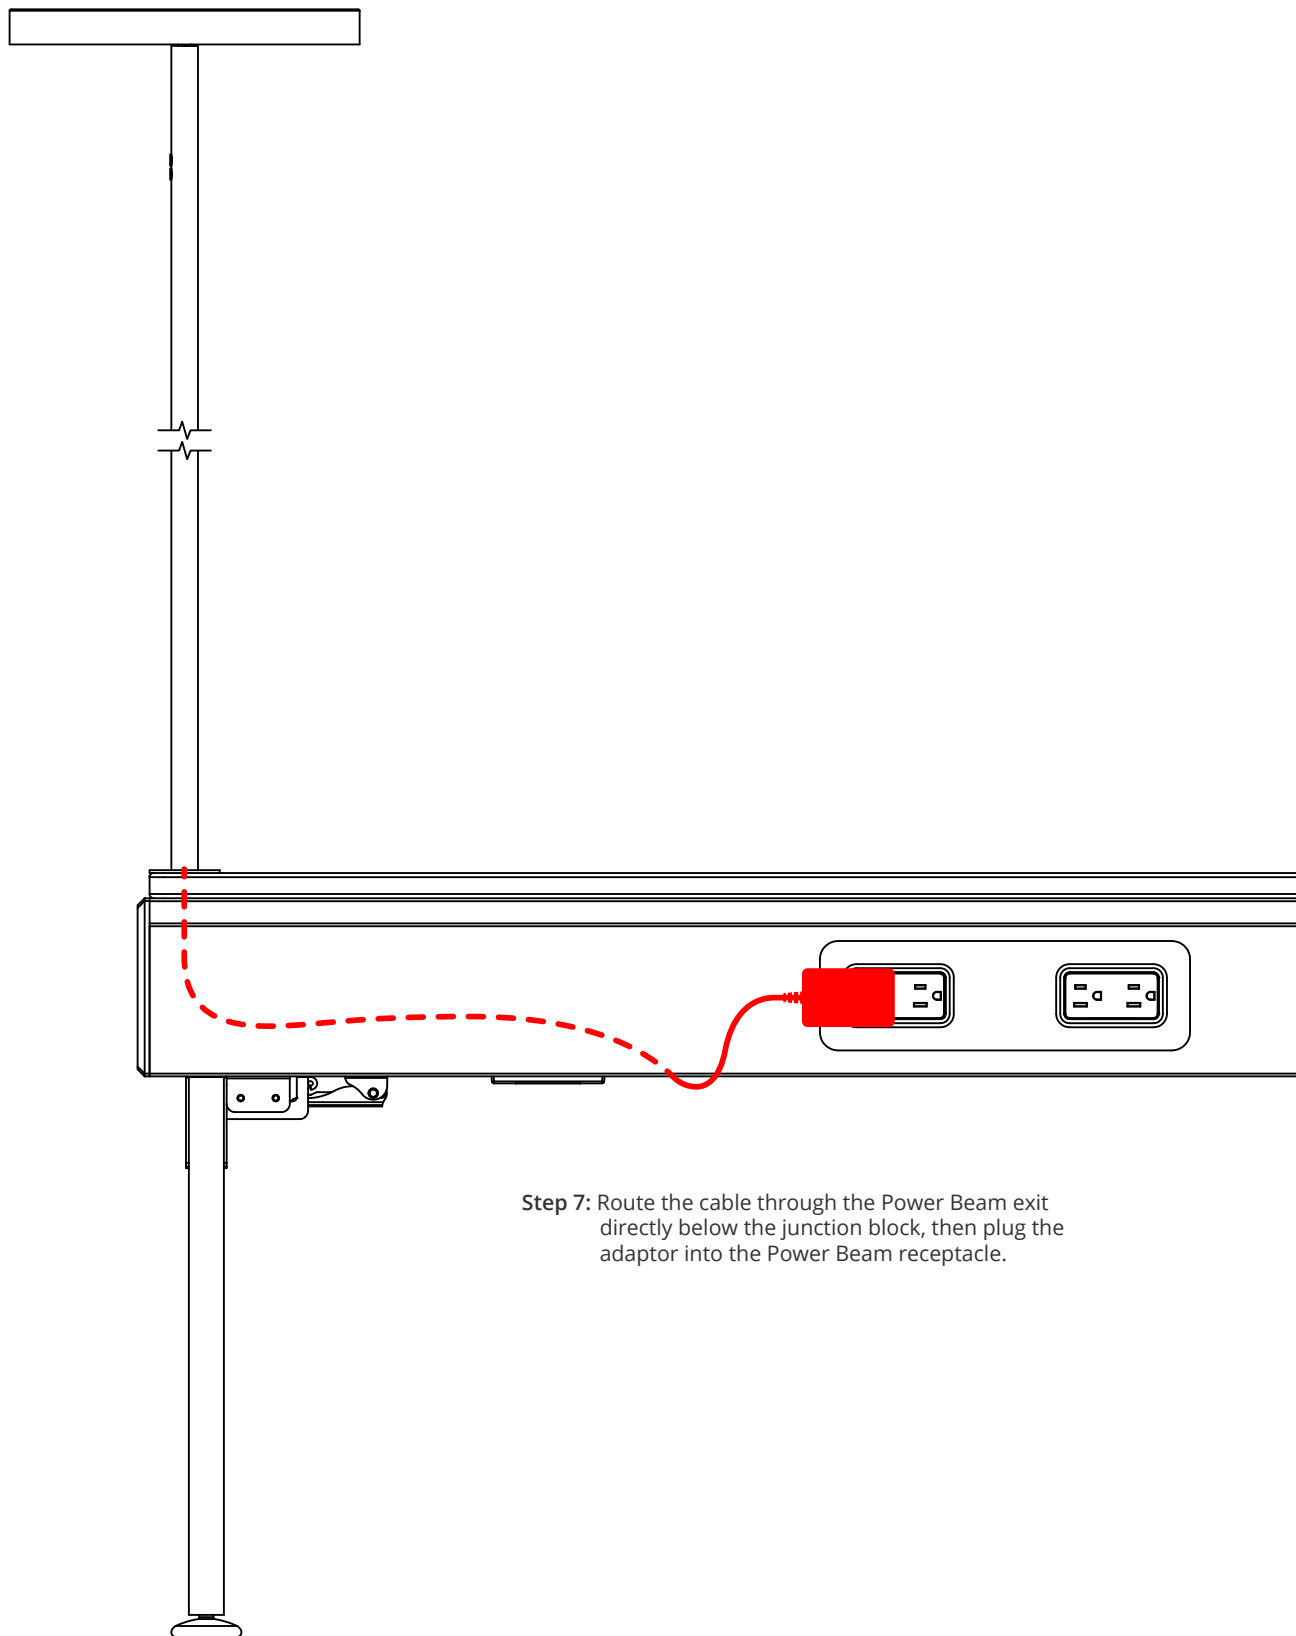


Step 7: Route the cable through the Power Beam exit directly below the junction block, then plug the adaptor into the Power Beam receptacle.

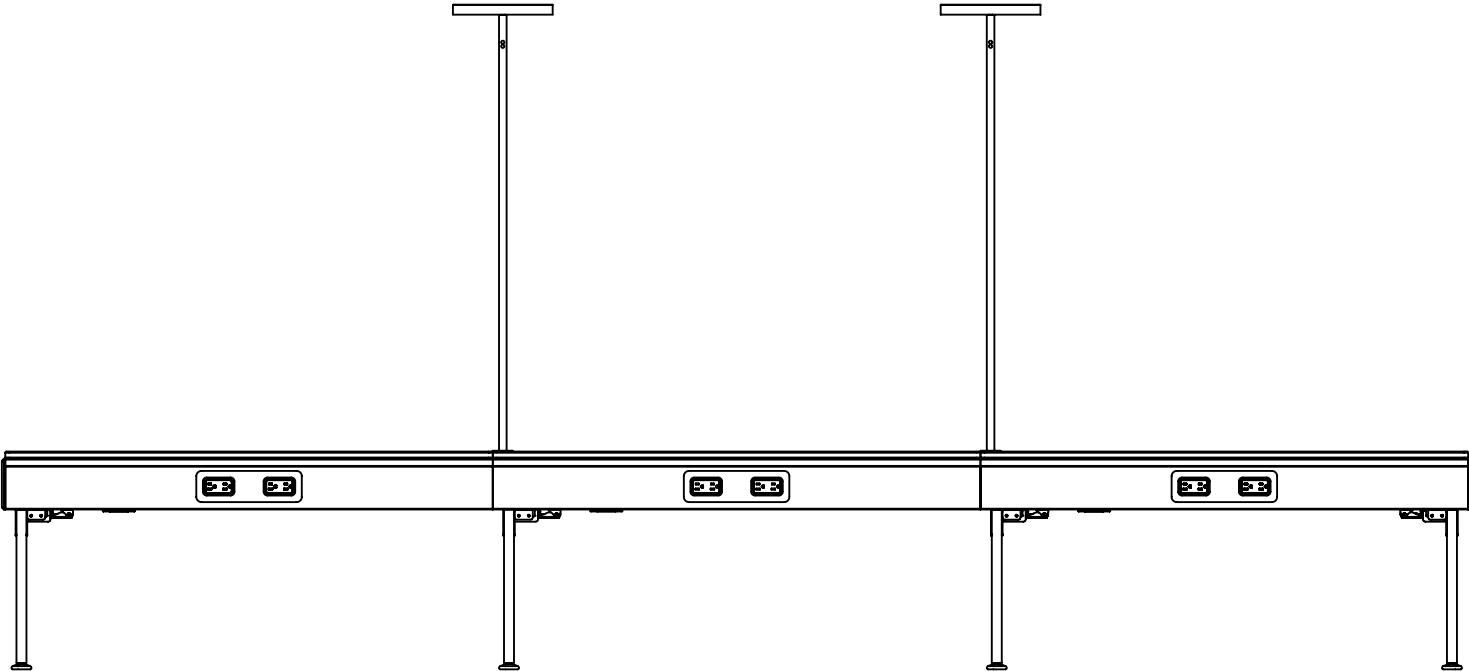

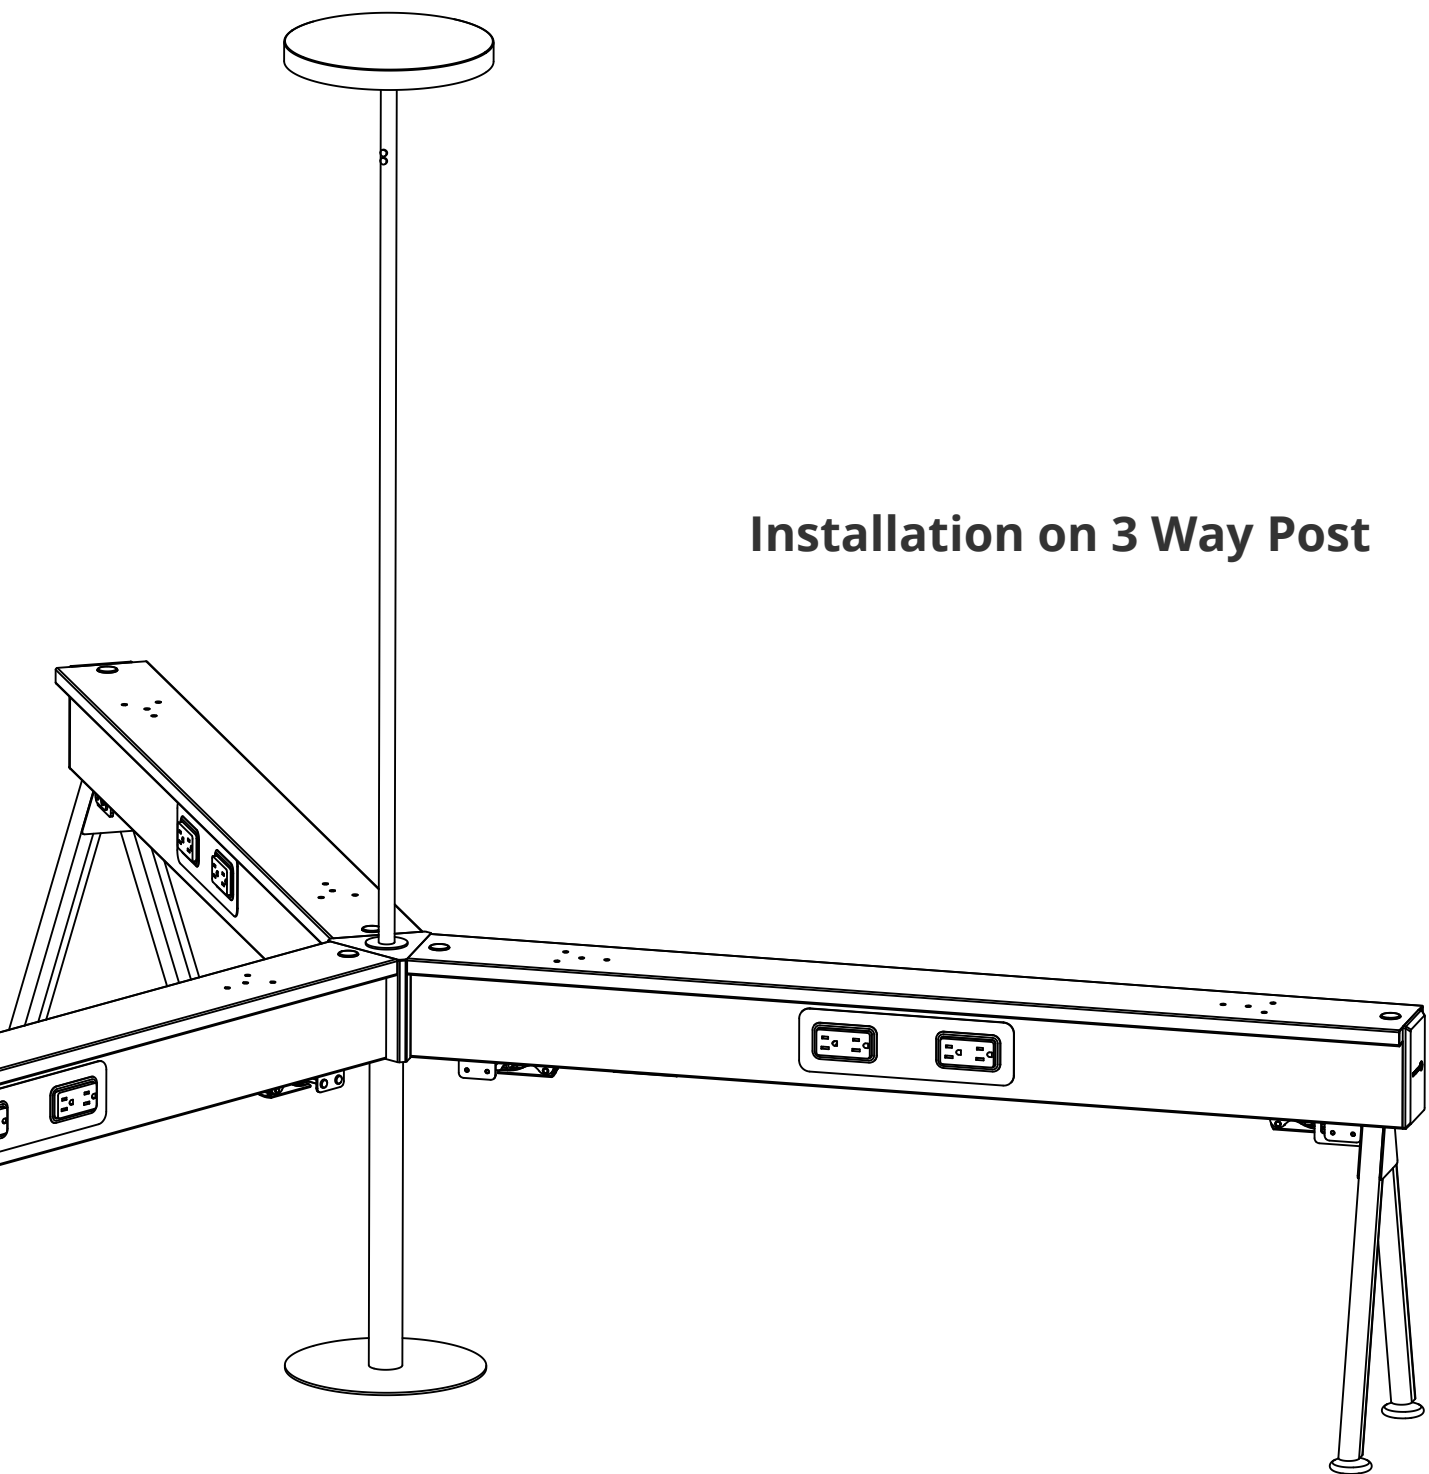



Installation on 3 Way Post

Step 1: Remove Round Hole Cover

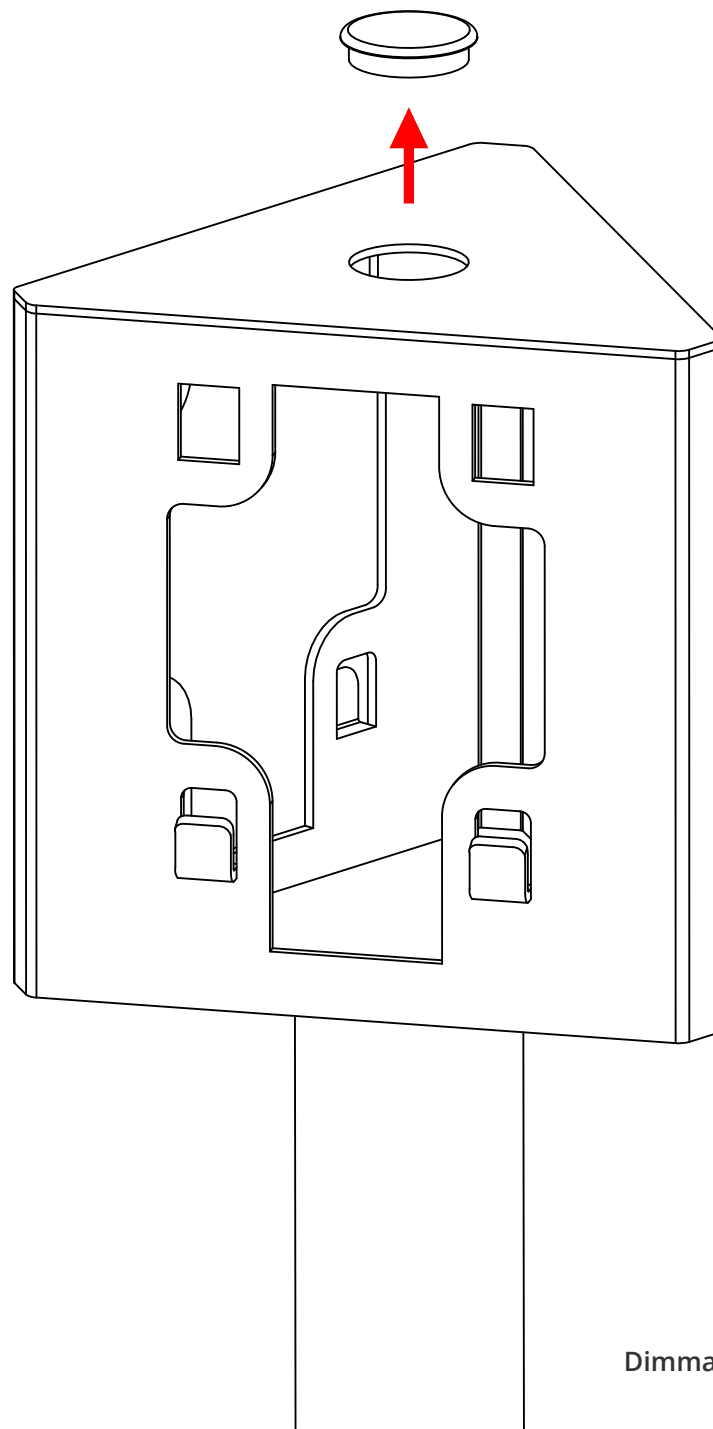


Step 2: Insert the threaded rod into the hole. Slide the 50mm Round Plate and the Butterfly Nut (Through the wire). Then tighten them onto the threaded rod by turning clockwise.

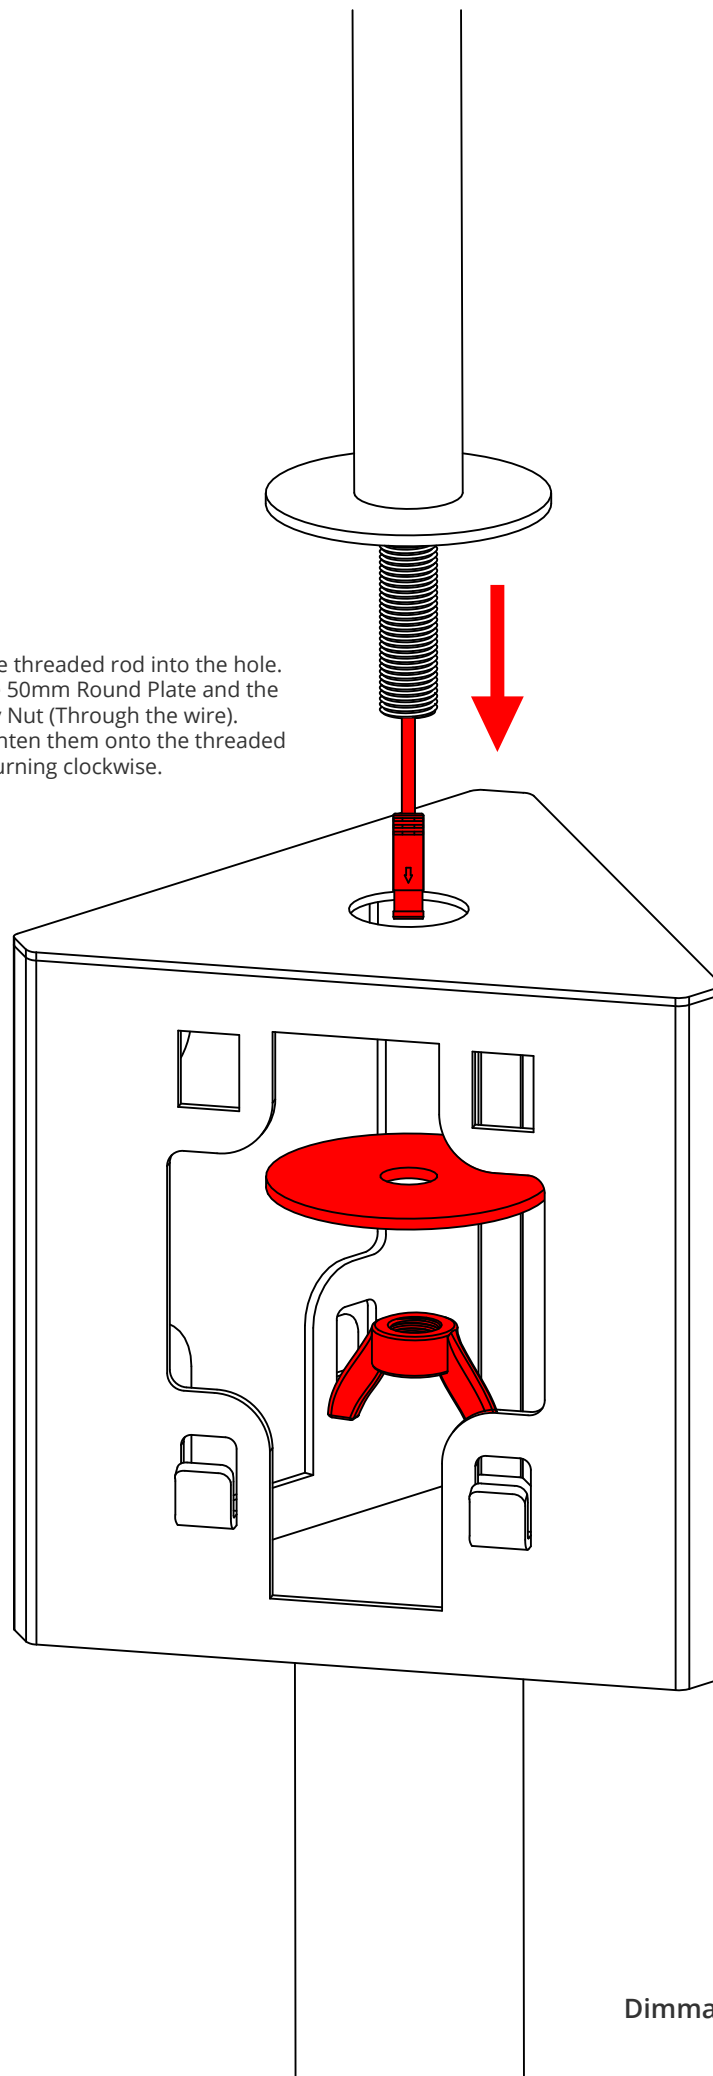


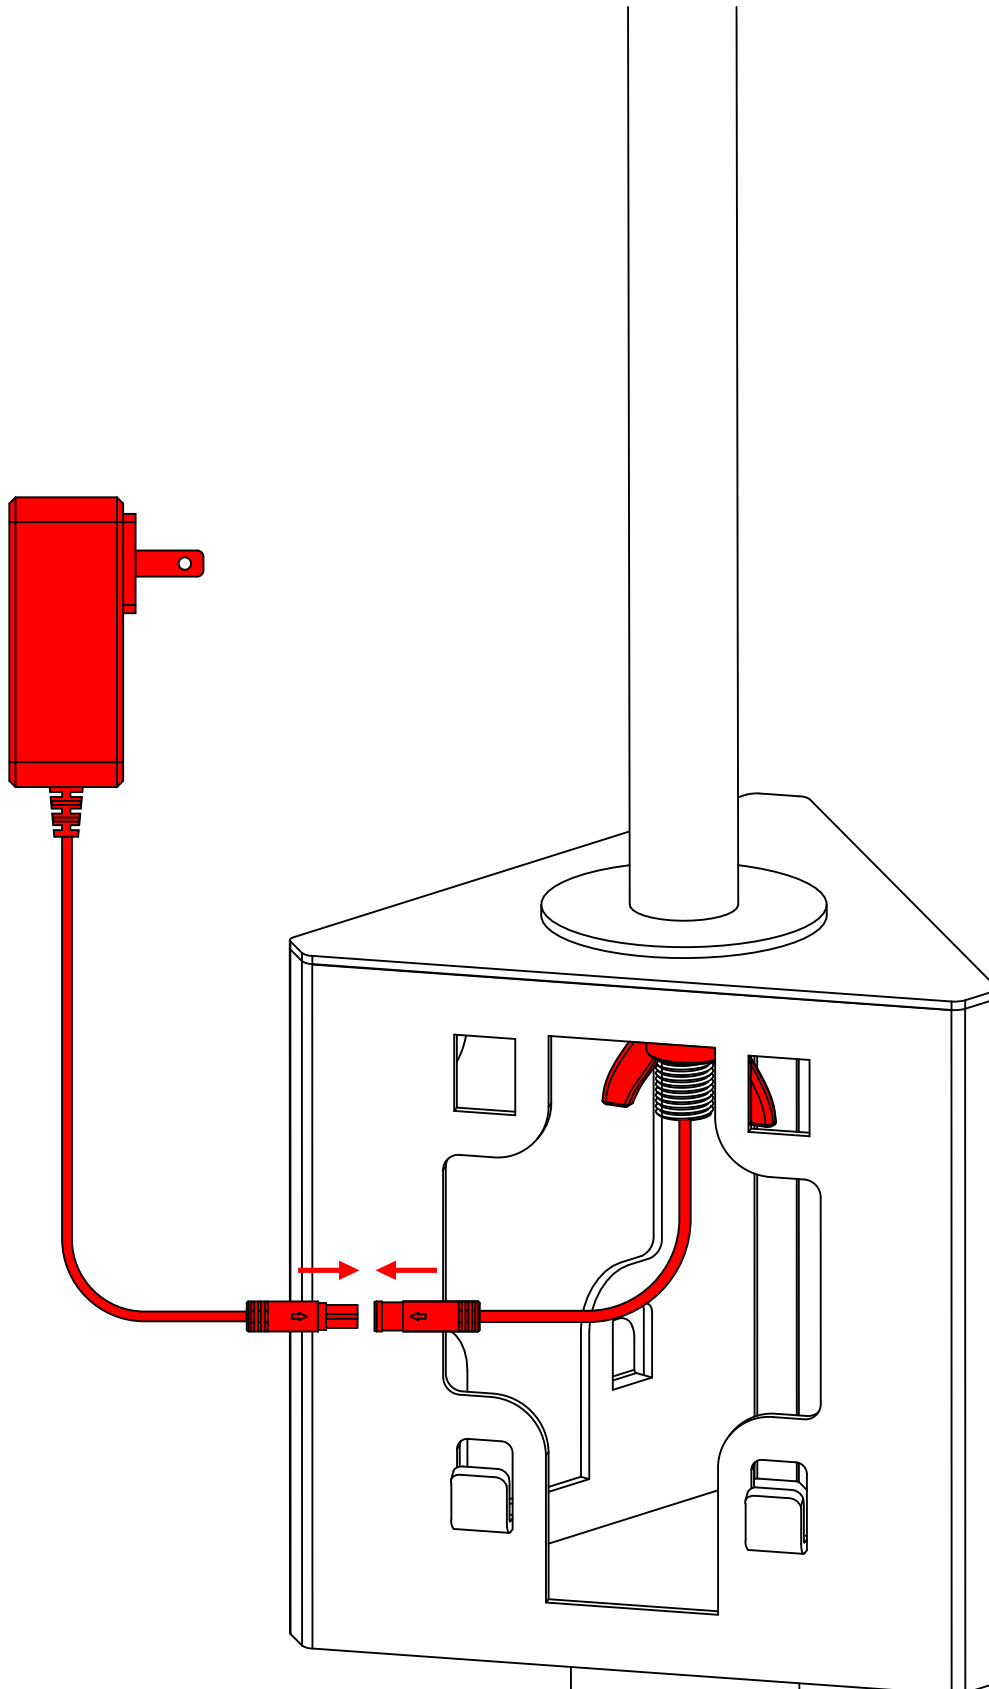

Step 3: Connect the Lamp Pole wire to Adaptor

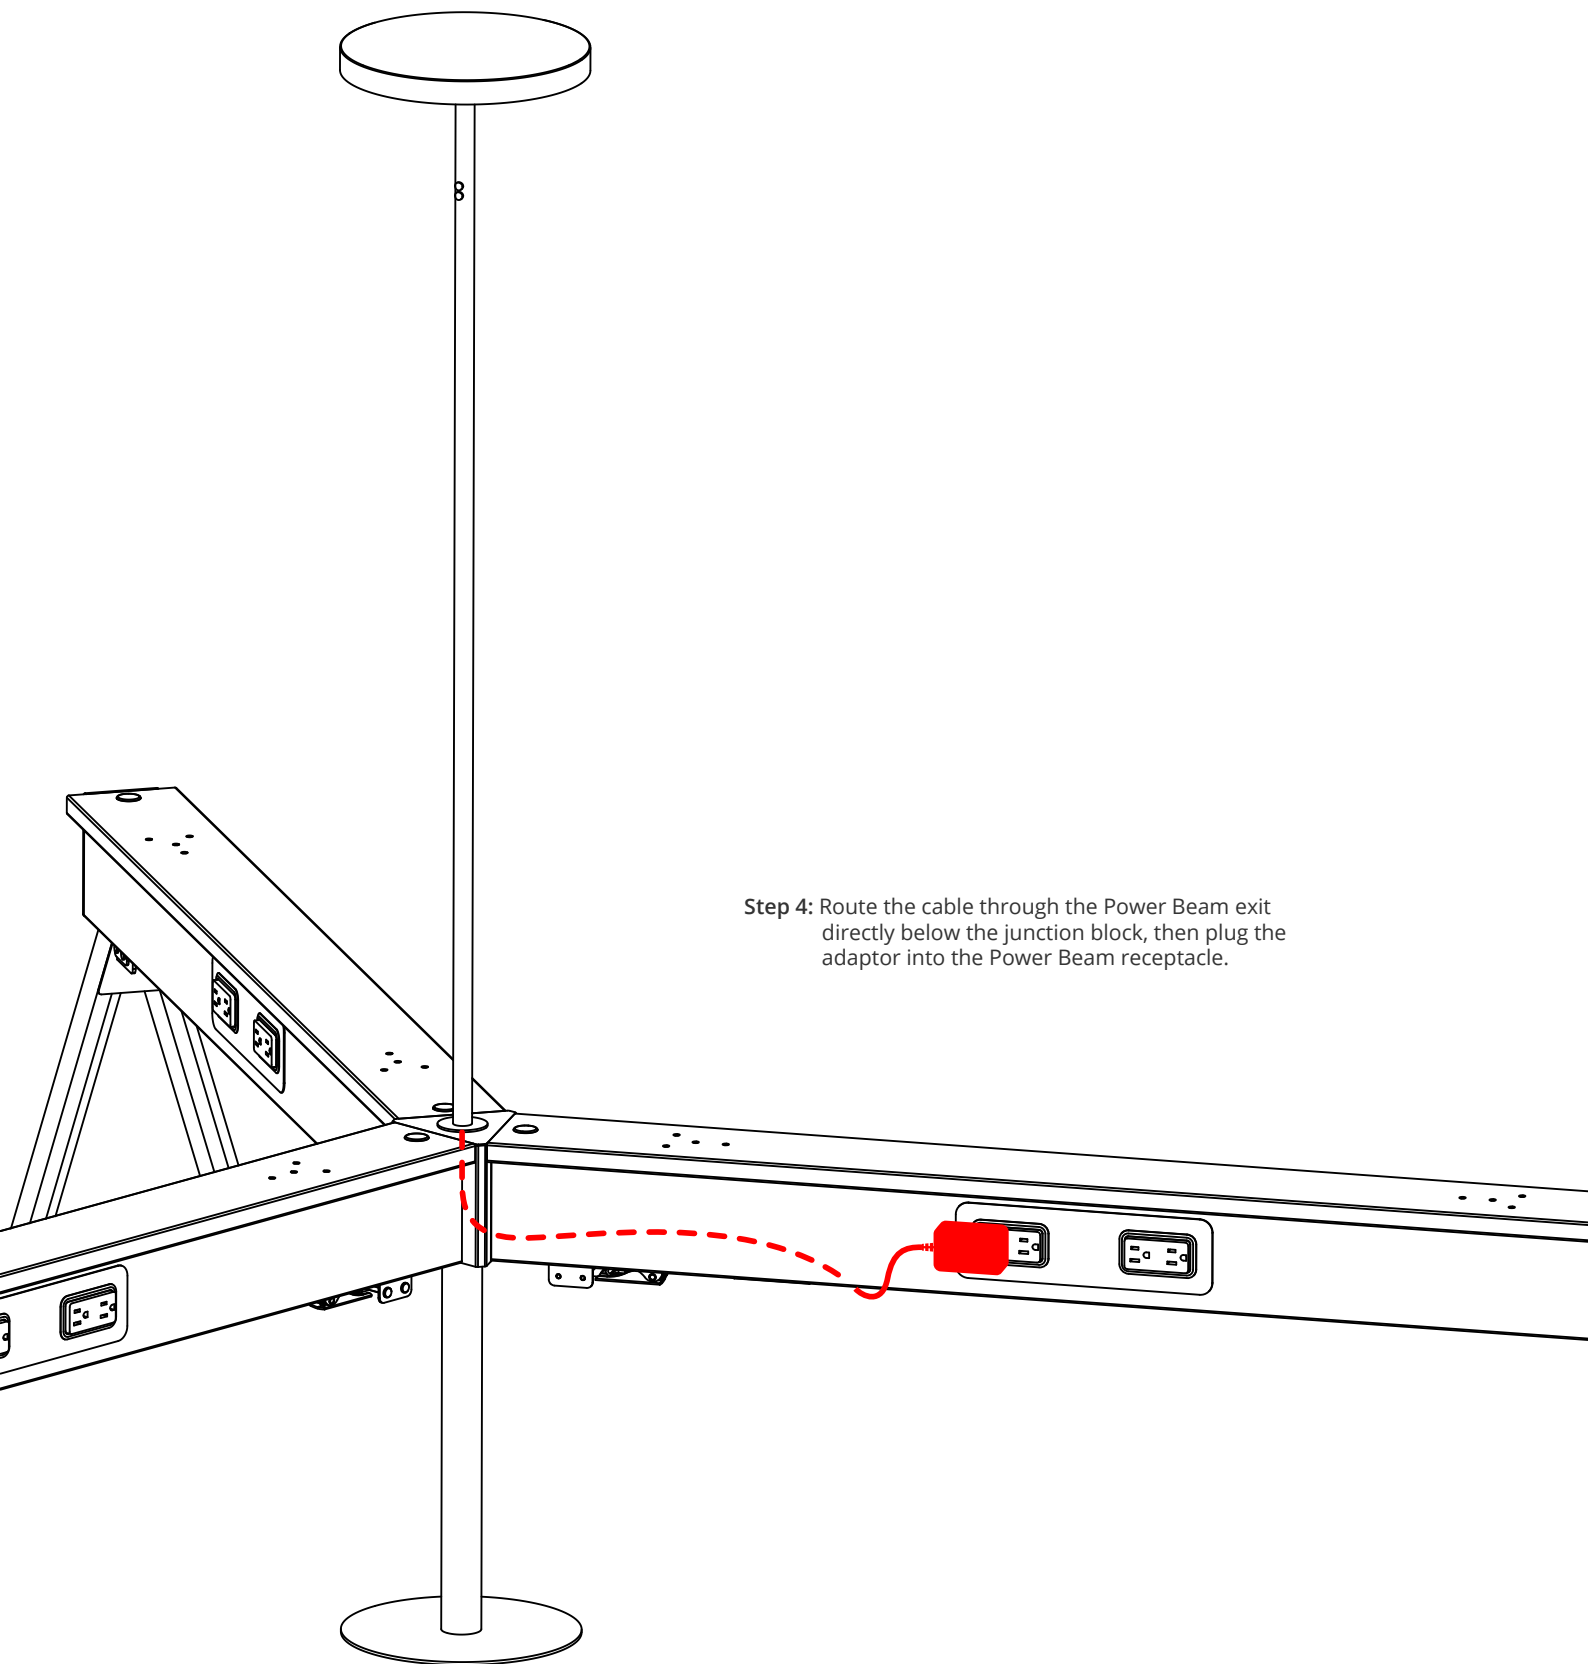


Step 4: Route the cable through the Power Beam exit directly below the junction block, then plug the adaptor into the Power Beam receptacle.

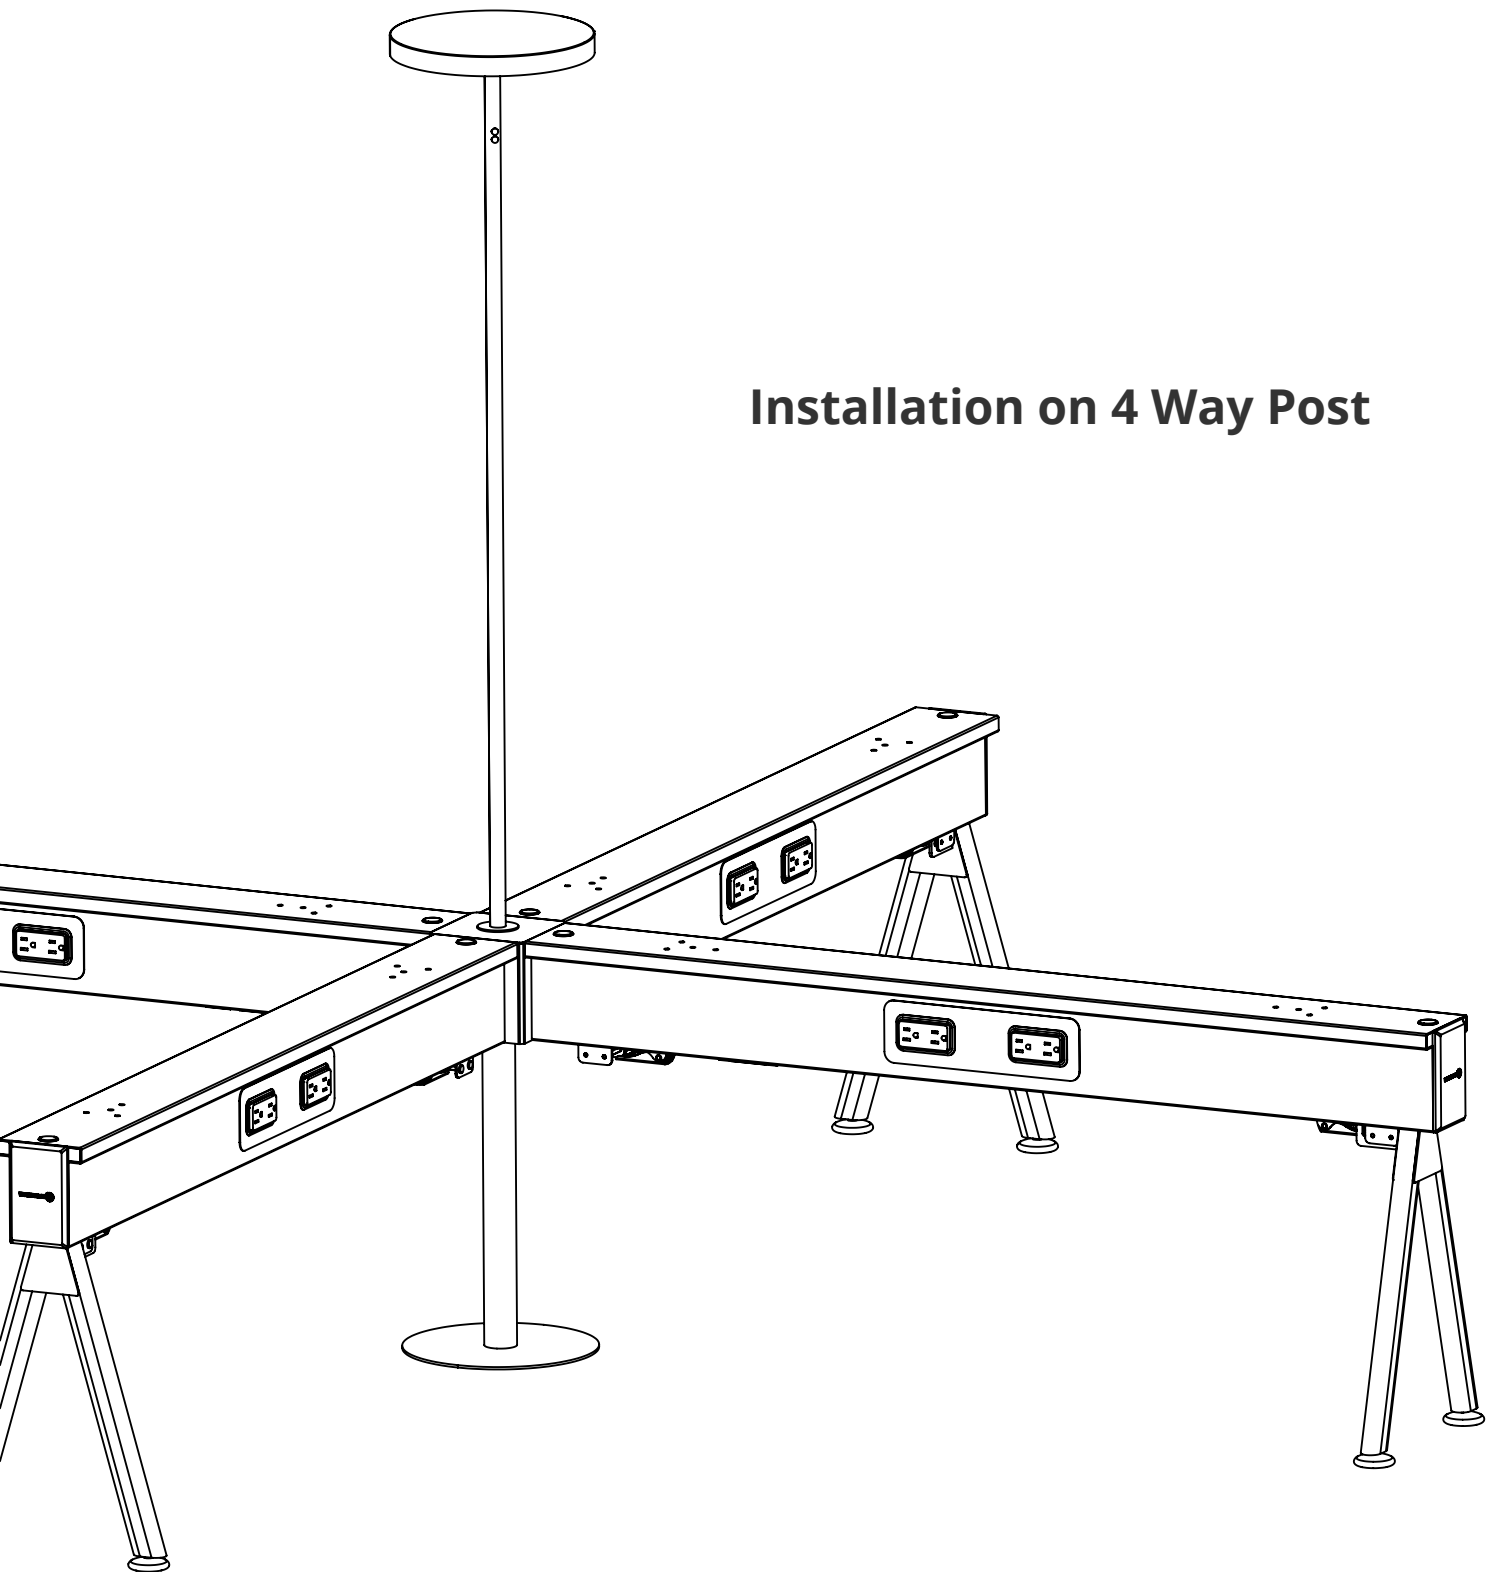



Installation on 4 Way Post

Step 1: Remove Round Hole Cover

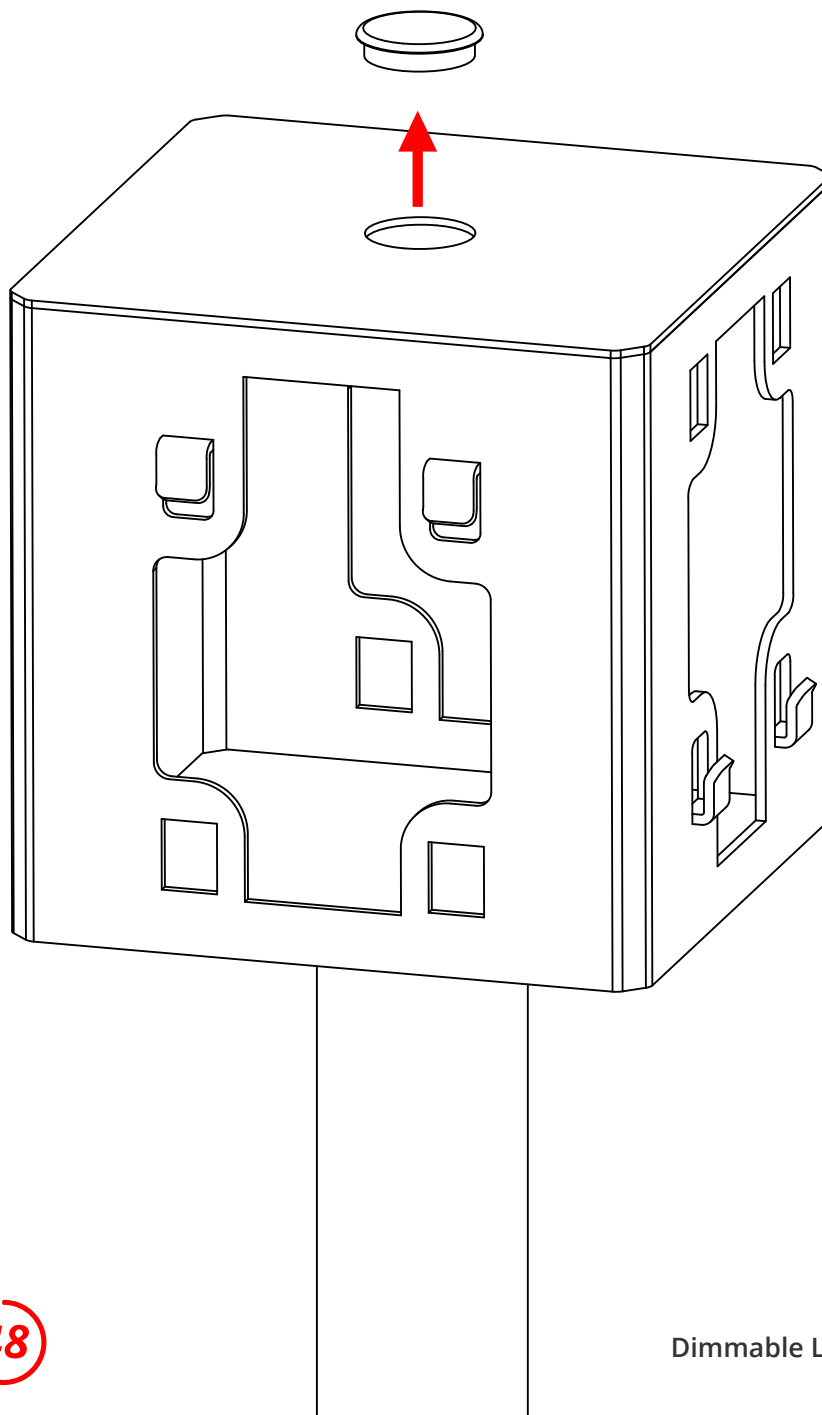



Step 2: Insert the threaded rod into the hole. Slide the 50mm Round Plate and the Butterfly Nut (Through the wire). Then tighten them onto the threaded rod by turning clockwise.

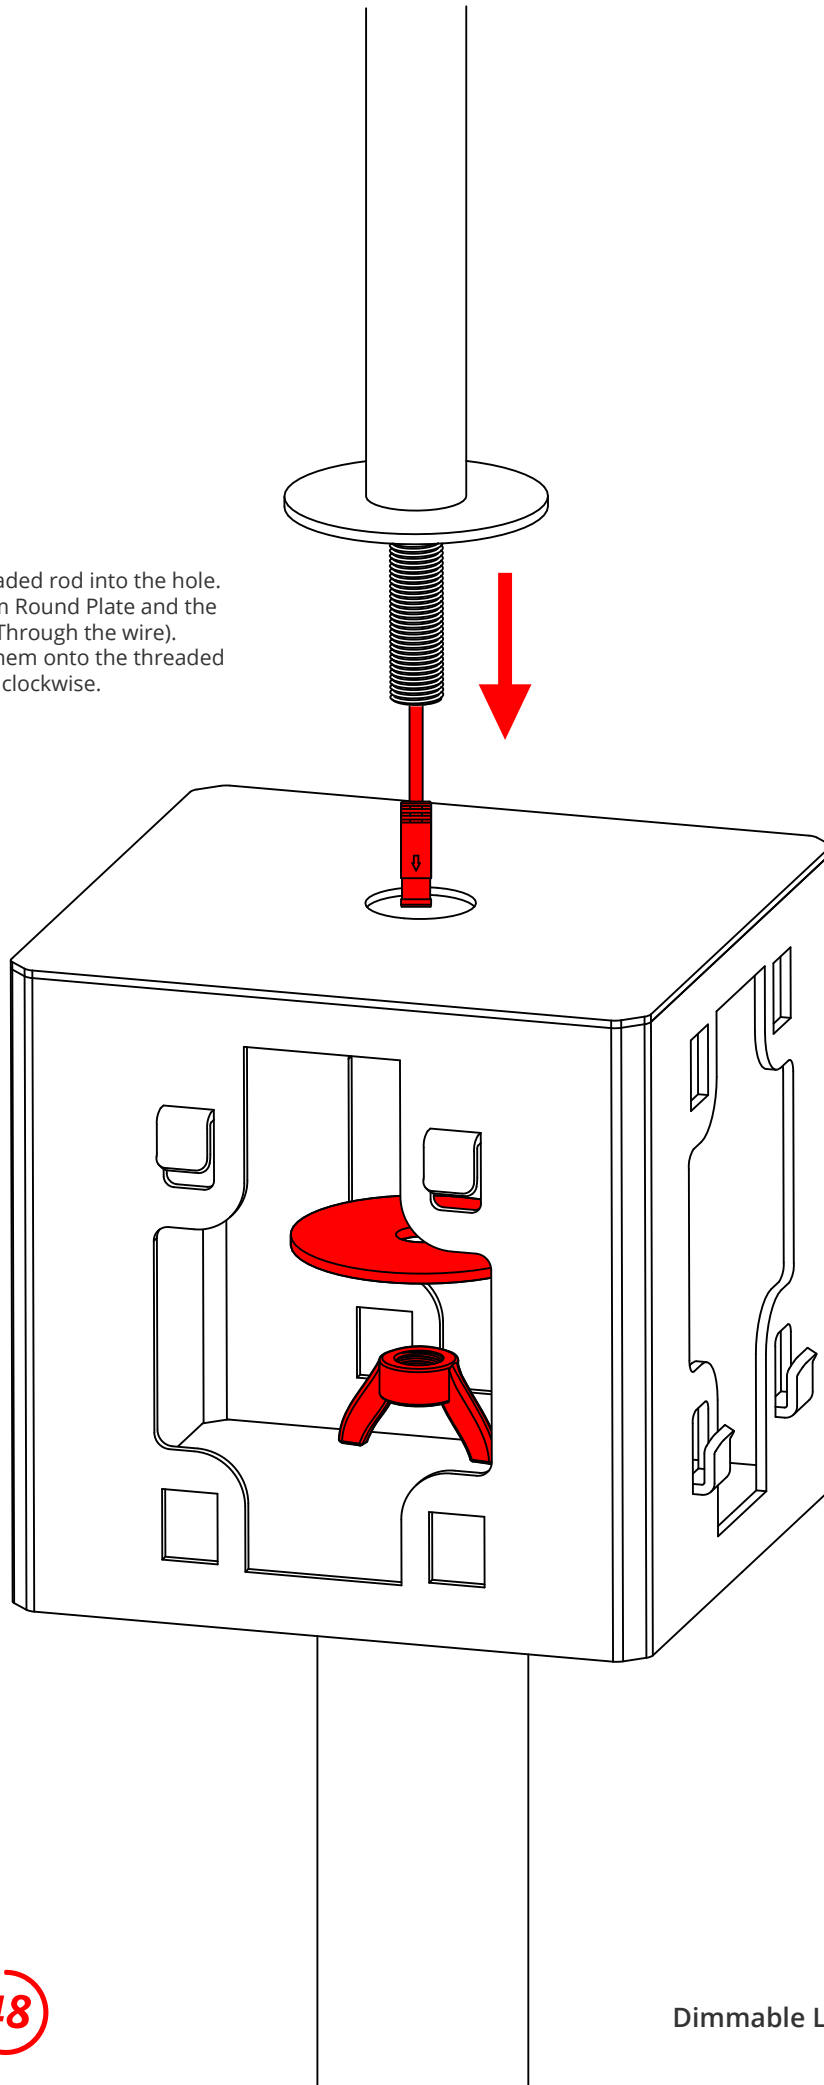

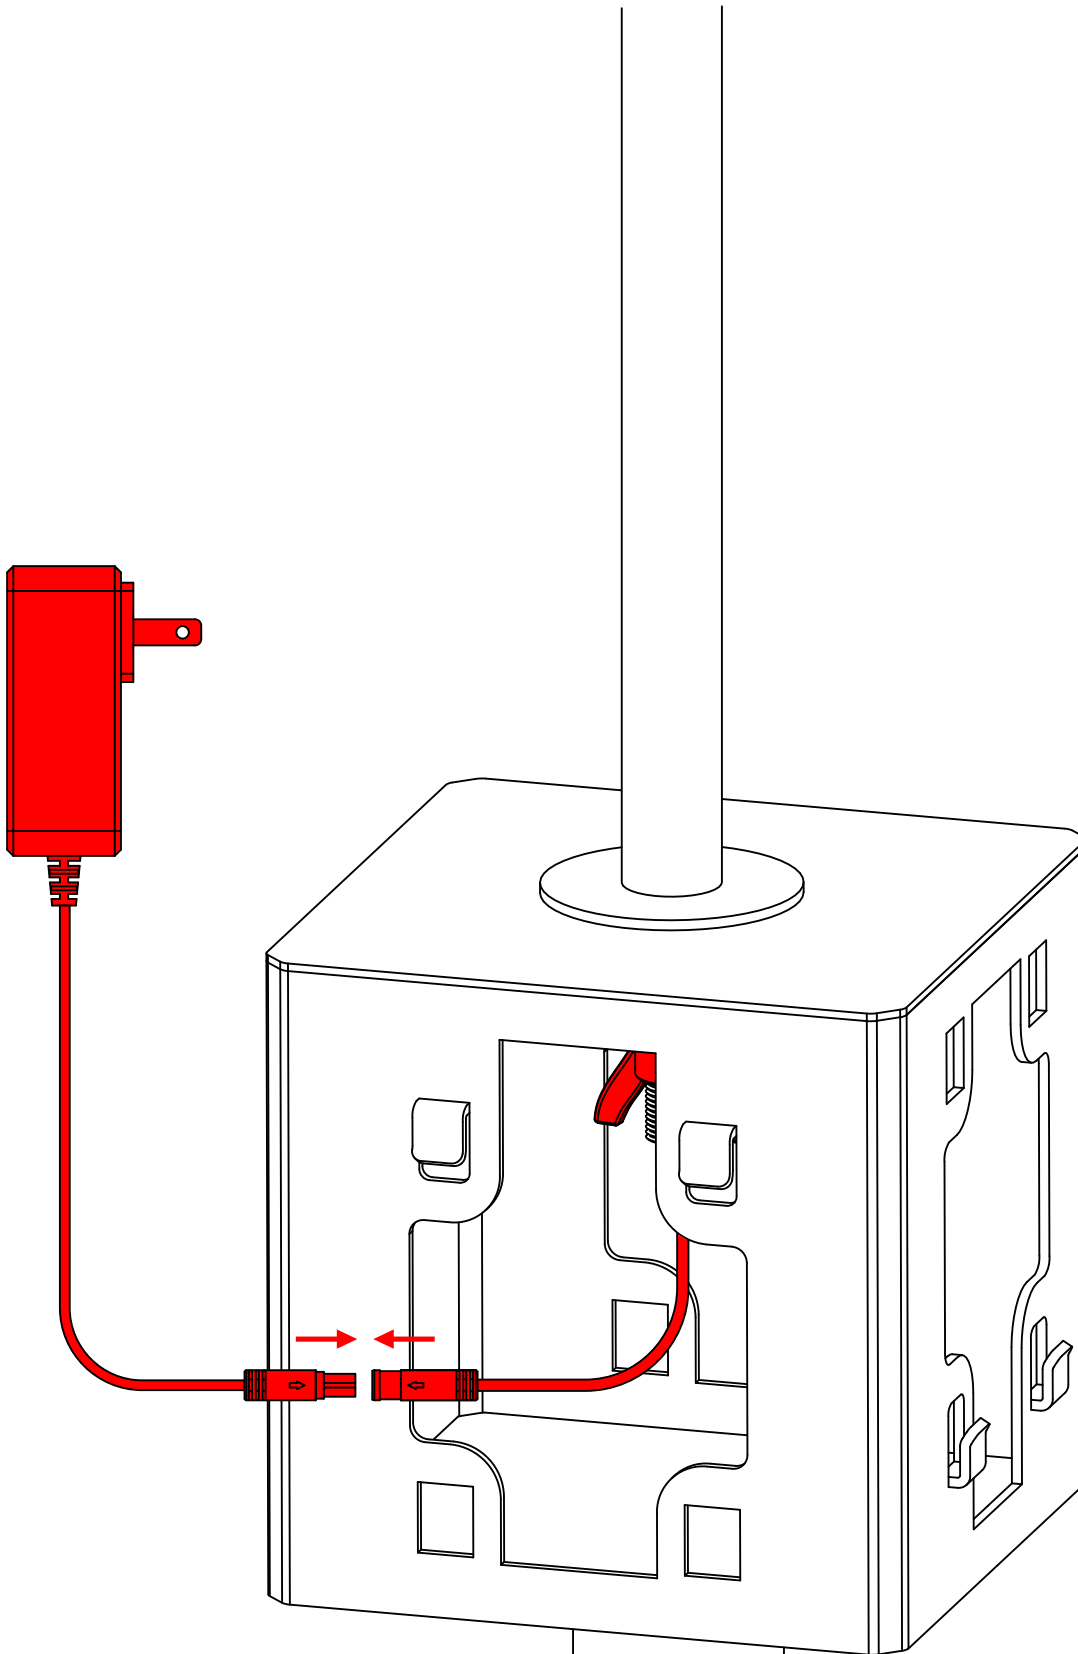

Step 3: Connect the Lamp Pole wire to Adaptor

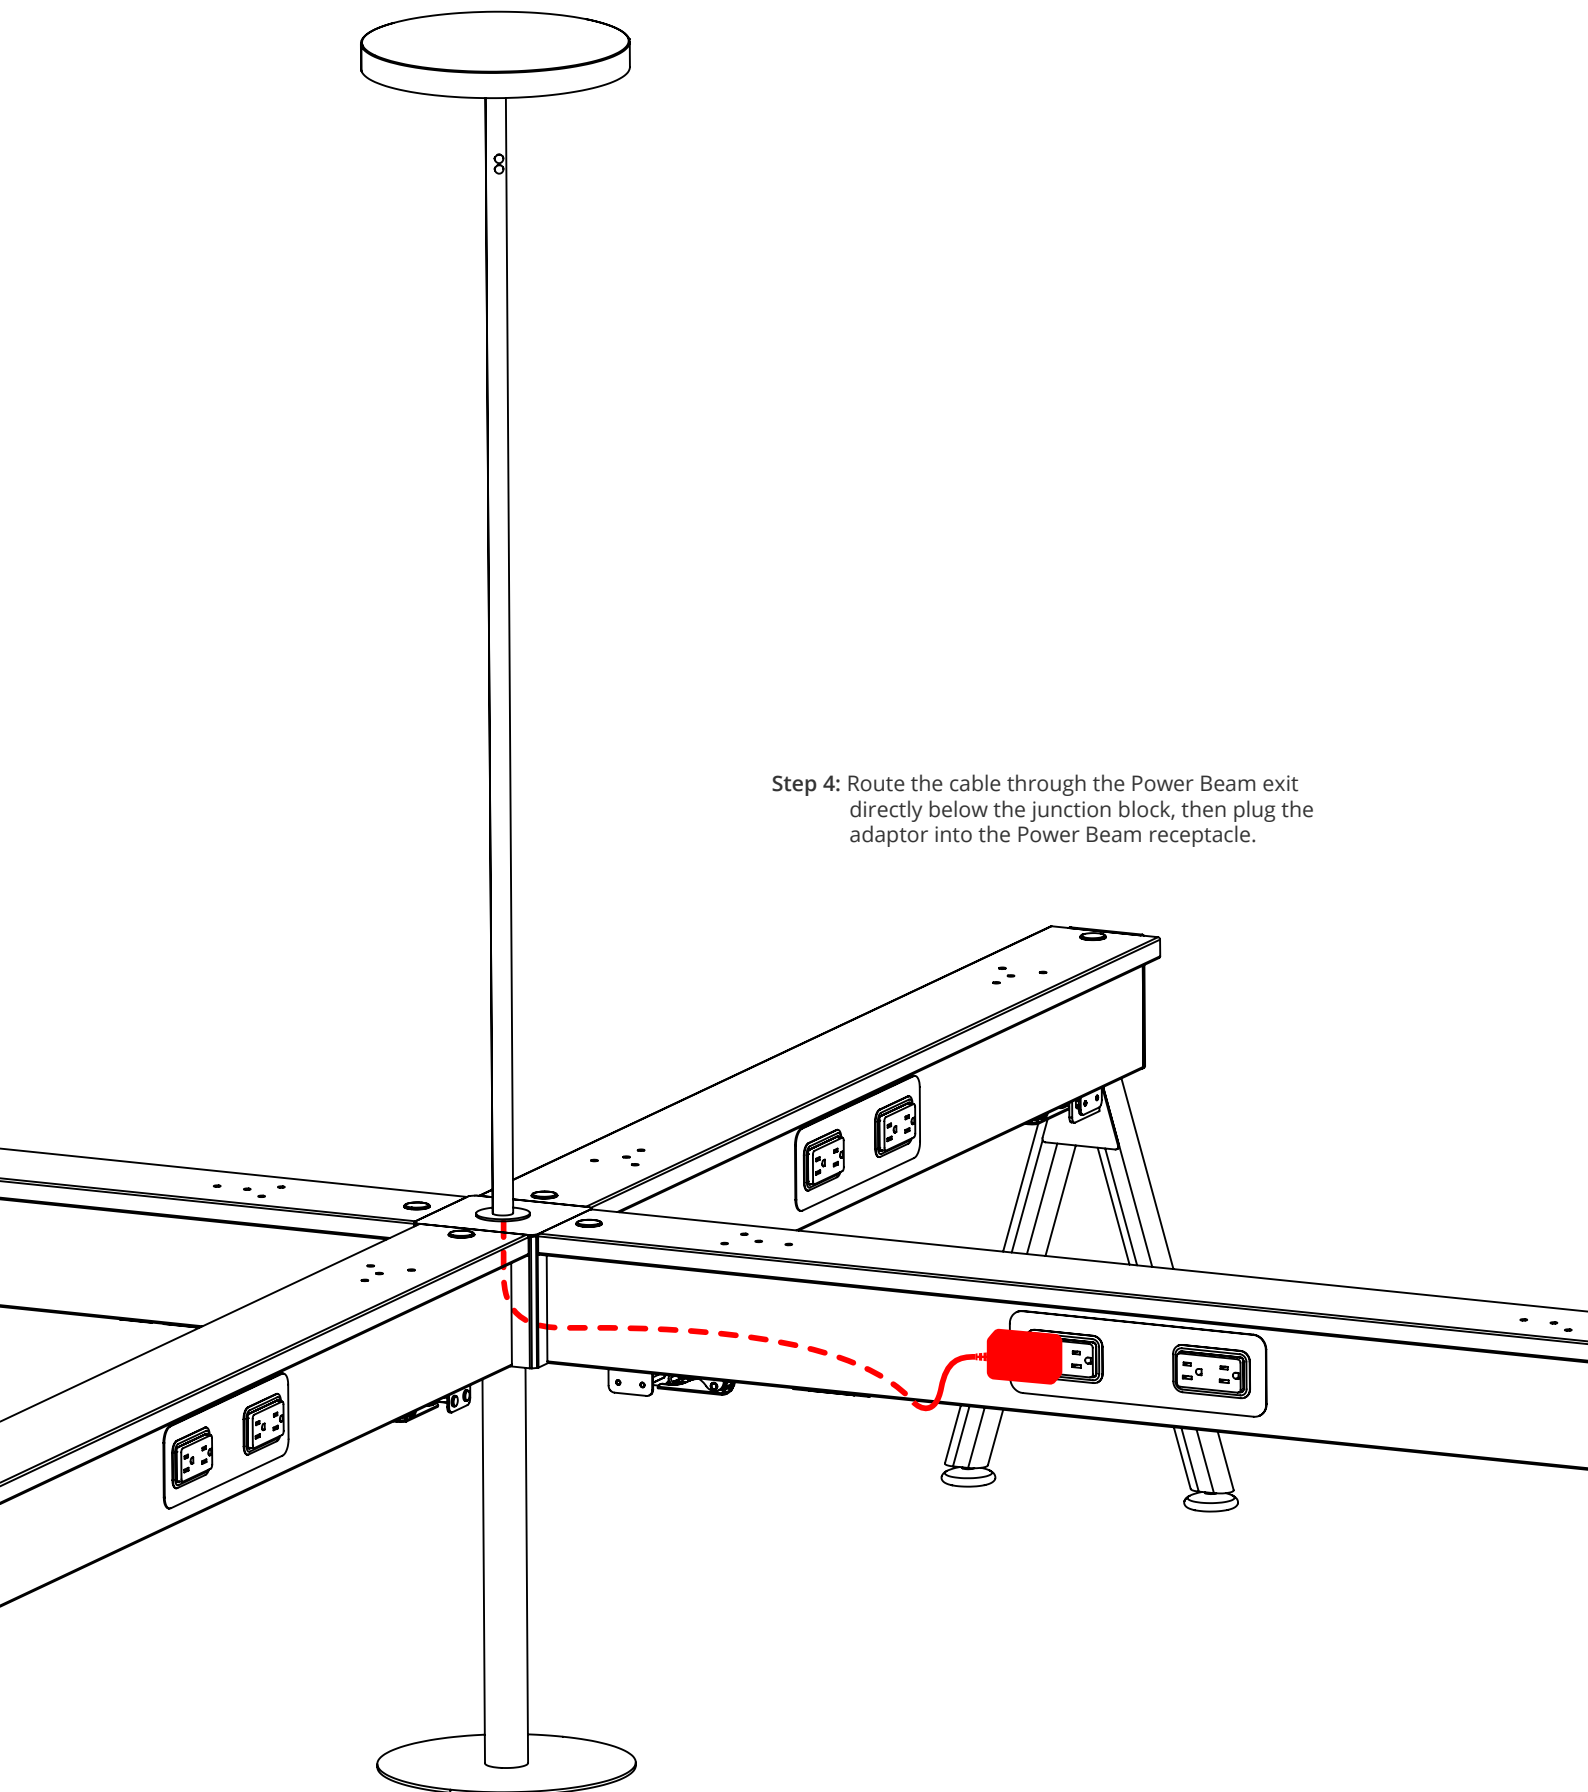

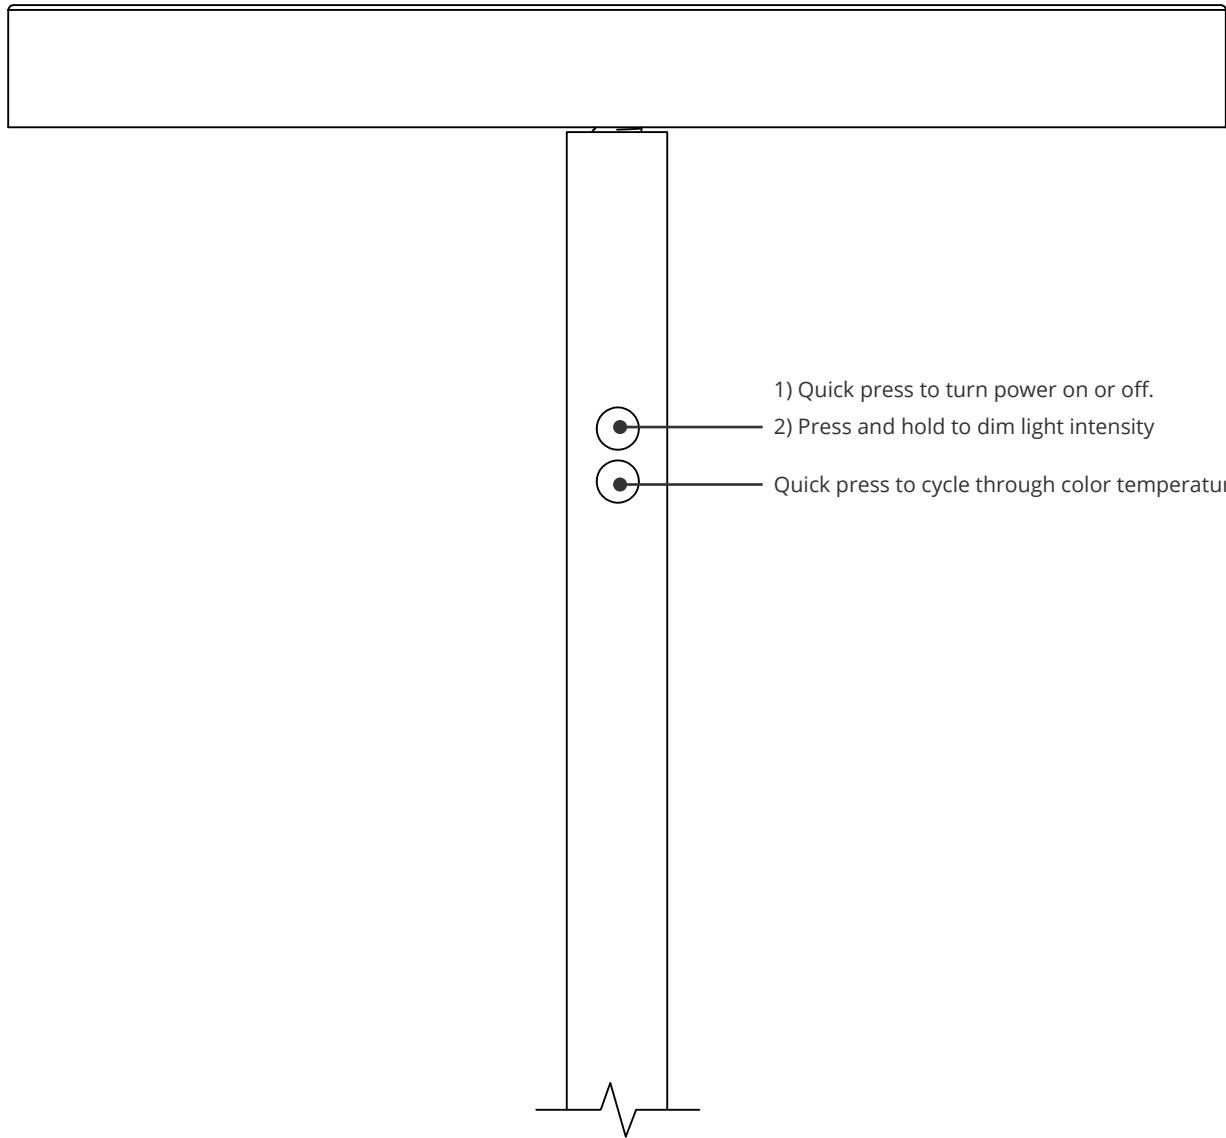

Please contact info@workspace48.com if you are missing any parts, have difficulty with assembly, or have any product related questions.