


Versi **Wall Tiles**

Installation

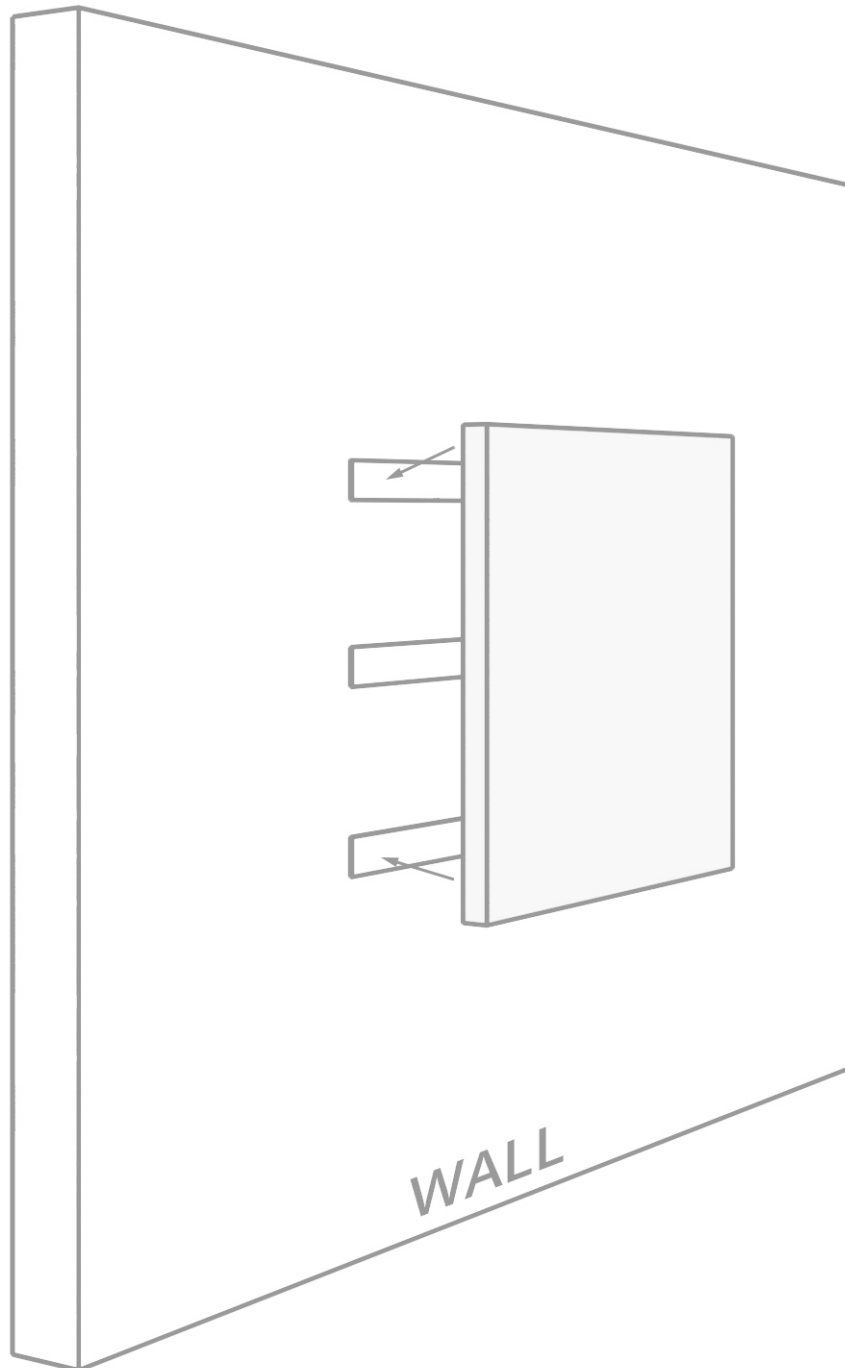


Versi **Wall Tiles**

Tape Placement


Each white rectangle represents a 1" thick strip of double sided tape.
Each shape should require no more than 20" of double sided tape to mount.
Place as shown to provide sufficient adhesive to avoid Wall Tile adhesive failure.




Bar

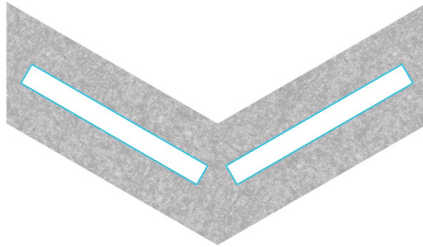


Chevron

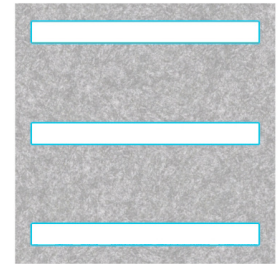


Cube

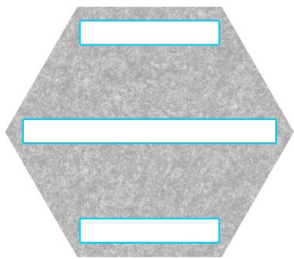


Hex

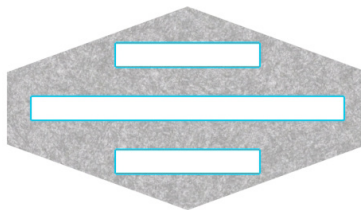


Prism

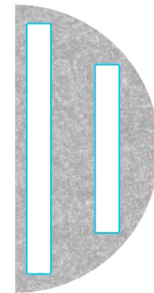


Semicircle

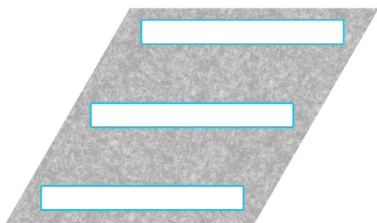

Rhombus

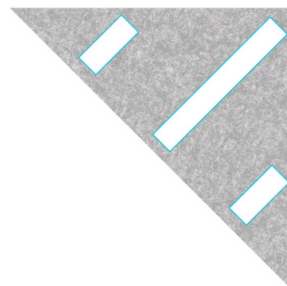

Triangle

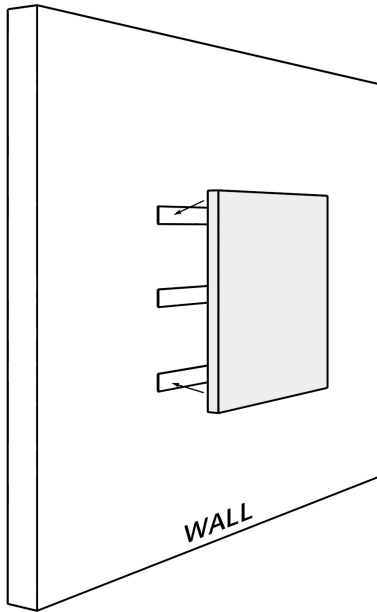

Steps to Success

- Clean the surface and the Wall Tile with a damp cloth to remove any debris. Let dry before installing.
- The double sided tape should be pressed tightly across the entire Wall Tile to press out air bubbles and secure a tight bond.
- There is a tolerance range in the Wall Tiles of 1/16".
- Plan for a 1/8" gap between Wall Tiles for installation.
- Press each tile firmly against the wall and burnish firmly for 10-15 seconds to secure a tight bond.
- Ensure sufficient pressure is applied during installation. Complete adhesion will not happen without burnishing the tape to the Wall Tile and tape to wall surface.
- Wall tiles must be applied to a smooth surface.
- We can't guarantee Wall Tile performance on non-smooth surfaces (eg. brick).